



IN220901139V02_US

370-253V80

QLS-805



Children Electric Motorcycle

Installation and Operation Instructions
Forward and backward operations by manual shift
Lighting and music playback functions

***Max weight: 25 kg.**



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

**A** x 1

Boby

**B** x 1

Front wheel

**C** x 1

Auxiliary wheels

**D** x 1

Head

**E** x 1

Handlebar

**F** x 1

Foot pedal

**G** x 1

Motor cover

**H** x 2

Taillight decorative

**I** x 1

Charger

**J** x 2

Wrench

Product Specifications :

Battery: 6V 4AH

Drive Motor: 6V380*1(14000RPM)

Suitable age: 37-60 months

Maximum weight: 25 kg

Car Size: 86x44x58 cm

Speed: 3-5km/h

Hours of Use: Using 45 minutes after Charging 8-10 hours

Charger: Input: 100V-240V Output: 6V0.5A

Analytic graph



Function



Function indication

 
- | | |
|---------------------------|----------------|
| ① Power Switch | ③ Music button |
| ② Forward
Stop
Back | ④ Foot pedal |

Battery Precautions

- Non-rechargeable batteries are not to be recharged,
- The rechargeable batteries should be charged under adult supervision
- Different types of batteries or new and used batteries are not to be mixed,
- Batteries are to be inserted with the correct polarity(+ and -)
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited,


1. Install the Handlebar

Remove the two fasteners and screws from the head, install the handlebar to the head, install the fasteners back to the fixed position, and lock them with screws.

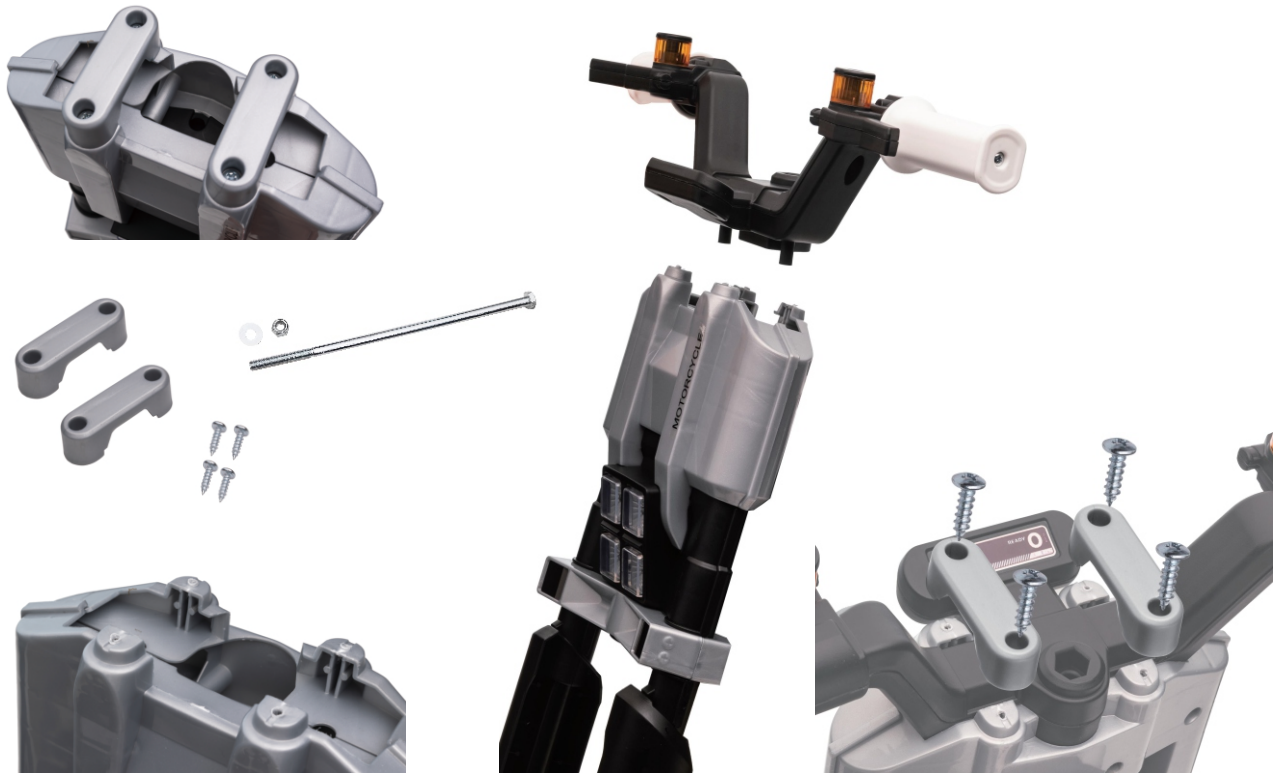

2. Connect the headlight cable

Connect the headlight cable interface to the corresponding connection port at the front end of the body, and then hide the interface inside the body.

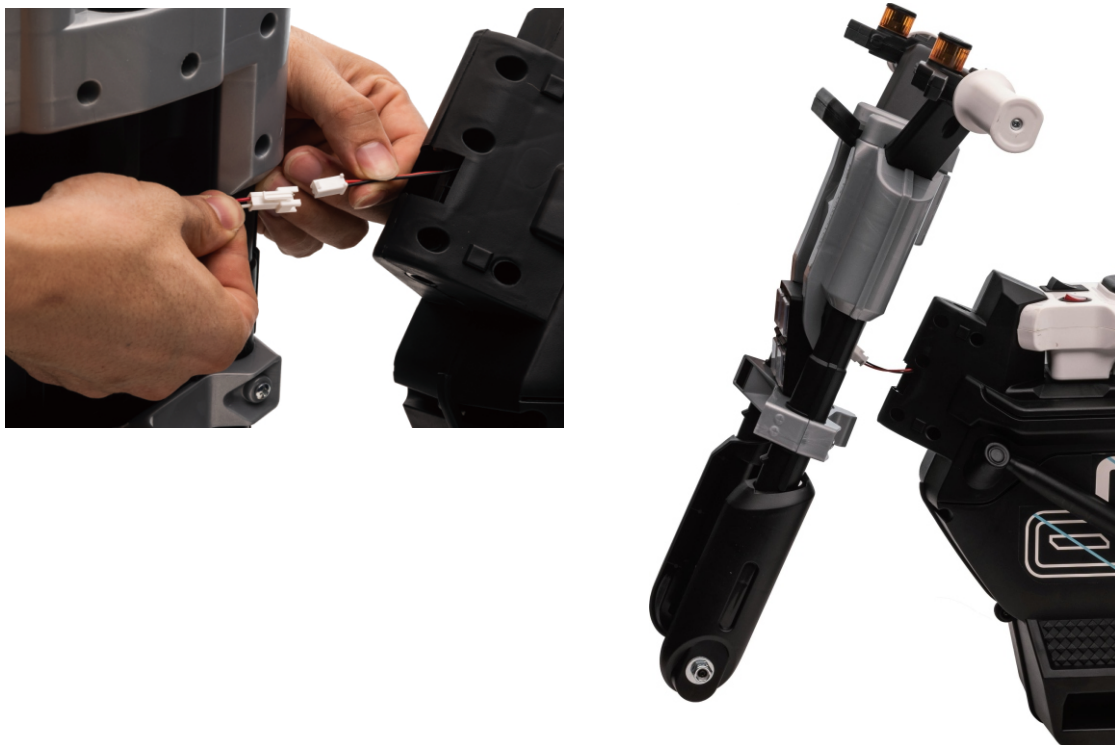

3. Install the Head

Install the head to the front of the machine body and align it from the upper hole to the lower hole. The long screw passes through the position from the upper end face. Put the shim and nut under it in turn and tighten it with a wrench.



4. Install the front wheel

Remove the front axle, nuts and shims from the head assembly, install the front wheel into the front insert, align the holes, and then penetrate the front axle. Install the shims and nuts on both sides in turn and tighten with wrenchs.




5. Install the foot pedal and auxiliary wheels

First remove the pre installed screws on the bottom of the body and the foot pedal, then install the foot pedal on the body, then install the auxiliary wheel assembly into the bottom and fix it with screws





6. Instal the taillight decoratives and motor cover

Distinguish the left and right taillight decorative and install them to the corresponding body holes. Take out the pre installed screws at the fixed position of the motor cover, install the motor cover, and then fix it with screws.

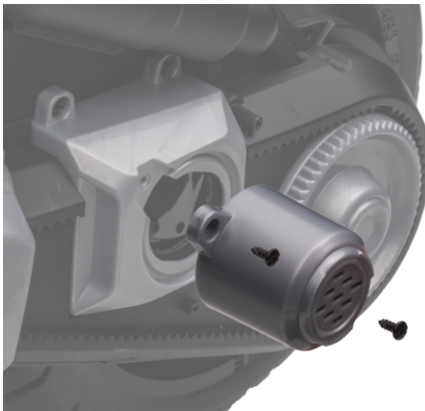

7. Connect the power supply

Open the seat cover, connect the interface of the power cord, open the power switch to check whether it is powered on, then install the seat cover and tighten the screws.

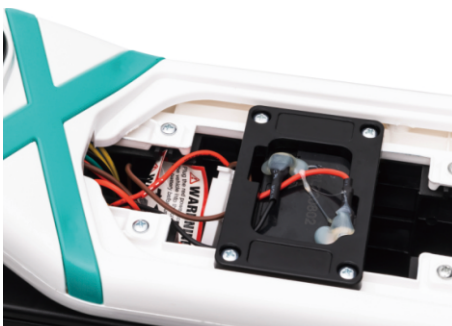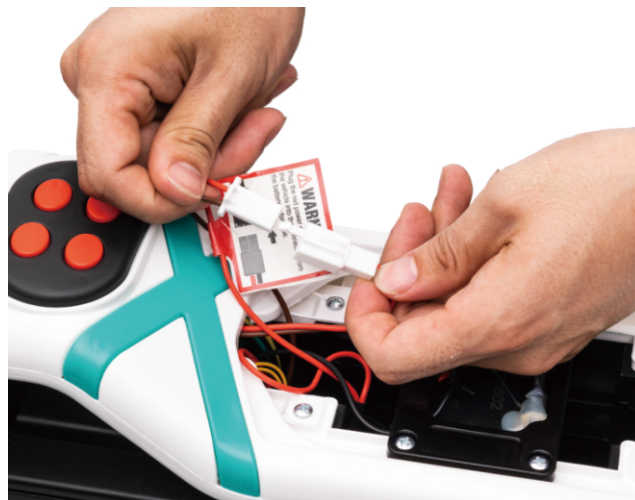

WARNING

Warning: The toy is to be assembled by an adult. In unassembled state contain potentially hazardous sharp points, sharp edges and small part, so please keep out of baby's reach.

Warning: Not to be used in traffic.

Warning: Only adults can install parts and adjust the car, and keep moving parts out of children 's reach. Children can use the product only in the company of adults, and the adult cannot leave during the process.

Warning: Never let Children stand or play onto the pedal or on the car.

Warning: Only adults can complete storage battery charging, and must charge the product before its first use.

Warning: Keep such package materials as plastic bags out of children, or they will suffocate or kill children.

Warning: Never use parts provided by non-manufacturers. Never let children play with the charger. The number of connected power by the product can never be over the recommended number.

Warning: Toys used by children outside of private places may be potentially dangerous.

Notice of use

Never use the product in such dangerous zones as street, road, slope or drain.

Never change the circuit and additional electric devices.

Never use the product in rainy days or in the water, never pour water or other liquid into the product, keep the product out of the fire, otherwise it will be damaged.

Only one child can use the product and it's weight cannot exceed 25 KGS.

Turn off the power when not in use and remove battery connector when not using it for a long time.

As the product has battery charger, check whether wire plug shell and other parts are damaged or not, and fix those damaged parts.

The product must be assembled by the adult!


Before assembling, screws and pins are dangerous sharp points.

Charging steps are as follows:

Step 1 :The charging hole is under the seat

Step 2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.

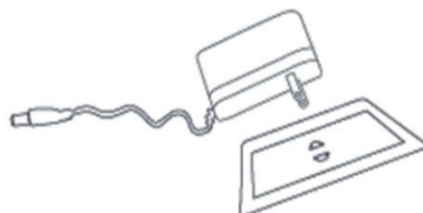

Warning: Product must be charged by adults only. Product is useless during charging.

Charging notice

Charge the battery before first use, otherwise the battery will be damaged forever.

In charging, put DC plug into the power socket, put charger into power plug.

Never use the product during charging it.

The product can be used for one hour and the charging time is 8-10 hours, exceeding no more than 18 hours.

It is common for charger and battery to have become heated(temperature under 60 degrees) in charging.

Do not contact the charging interface with water, otherwise short circuit will happen.

Use the product's own charger, otherwise it will cause damage to the charger and battery, or short circuit will happen.

Charge the product when not using it for a long time.

Trouble Clearing

Type	Analysis	Solutions
The car cannot get started.	Low battery voltage; Protection of electric devices; Failure to press the switch button correctly; Falling of power connector; Battery breakdown; Damage of electric devices; Generator breakdown;	Charge battery fully; Use the car a few minutes later; Use the car according to instructions; Install the connector again; Change battery; Change electric devices; Change generator.
The battery cannot be charged.	Falling of battery connector; No charging for the charger; Charger breakdown ;	Install the connector again; Plug the charger again; Change the charger.
The car has a short range.	Not full charging of battery ; Much-used battery ;	Charge fully the battery again; Change the battery.
There appear slight noise and heat of the car in charging.	Chemical reactions	Normal reactions
The car has a slow speed	Much-used battery ; No electricity for battery ; Overload ; Uneven driving surface;	Change the battery Charge fully the battery again Reduce the load below 25 kilograms Drive on uneven surface

How to replace the battery:

1. Open the seat cover, remove the battery cover, unplug the positive and negative connecting wires of the battery, and take out the old battery;

2. Replace the new battery, plug in the positive and negative connecting wires, cover the battery cover and lock the screws, and cover the seat cover and lock the screws.

Maintenance and service

Parents should check whether the wiring, plug, housing and other parts of the charger are damaged before use, and repair the damaged parts.

After using the product for a period of time, parents should use lubricating oil to lubricate the cast iron, otherwise those castings will rust; They should keep the product away from the fire source and put it in a place away from light; In rainy or wet weather, the product should be placed in the house, or covered with a waterproof cloth to prevent it from getting damp.

Parents should keep the product away from high-temperature objects such as furnaces and heaters, otherwise the plastic parts may melt; They should keep the products away from combustibles in the room. They should keep the product away from indoor combustibles when charging, otherwise a fire may occur.

Parents should clean the car surface with dry cloth or clean plastic parts with non wax polishing materials; Do not use chemical solution and water to clean the product.

Children should not drive in wet or rainy weather, otherwise the motor, circuit system and battery will be damaged.

When not using the product, parents should cut off the power supply of the car and keep all switches in "stop" or "off" mode.

Parents should not use fuses that do not meet the agreed specifications. The product structure and circuit system shall not be changed, and the product shall be inspected and fixed by professionals or under the guidance of professionals.

If you have any questions, please contact our customer care center.

Our contact details are below:



001-877-644-9366



customerservice@aosom.com

Imported by Aosom LLC

27150 SW Kinsman Rd Wilsonville, OR 97070 USA

MADE IN CHINA

