



INcjh039_US

824-031V80

INSRUCTION MANUAL



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHER BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

IMPORTANT SAFETY INFORMATION

1. Read all instructions carefully before using the FAN.
2. Use this FAN only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
3. Remove the package and ensure that the FAN is undamaged. In case of doubt do not use FAN and contact with your supplier.
4. Do not let children play parts of package.
5. Before use the FAN, check if the voltage marked on the rating label corresponds to the mains in your home.
6. Extreme caution is necessary when the FAN is used by or near children or Invalids and whenever the FAN is left operating unattended.
7. Avoid using extension cord as the extension cord may overheat and cause a risk of fire.
8. Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.
9. Do not insert any objects into the FAN as it may cause an electric shock or injure or damage to the FAN. Do not block or tamper with the FAN in any manner while it is in operation.
10. Do not leave the FAN unattended. Always unplug FAN when not in use.
11. This FAN is not intended for use in wet or damp locations. Never locate a FAN where it may fall into a bathtub or other water container.
12. Do not use FAN outdoors.

 
13. Disconnect the fan from the mains power when not in use, and before servicing or performing any maintenance.
14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Regarding how to assemble and maintenance, please refer to assemble and maintenance section.

WARNING : The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

17. Always disconnect the fan from the power supply when moving it from one location to another.
18. Keep the fan clean and maintain in good condition (use an authorized service agent).
19. Use recommended parts only (non genuine parts may be dangerous, and will invalidate your warranty).
20. When not in use store in a safe, dry, childproof location.


WARNING : To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufactory or it's service agent or a similarity qualified person in order to avoid a hazard.

PARTS NAME

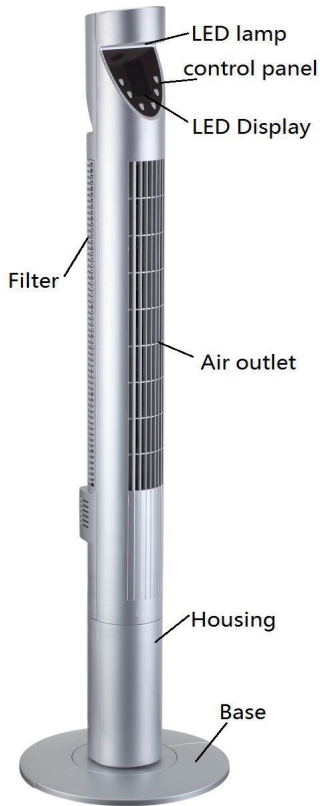

ASSEMBLY

 1. Snap the two parts of the base together and secure with the four screws using a screwdriver.
2. Line up the Tower fan on the base. Fix with the 4 screws, with a screwdriver. shown in FIGURE 1.

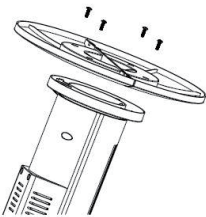

(Figure 1)

REMOTE CONTROL

1. Install one 'mercury' (not included) batteries.

The Remote Control Power button is labeled as such. All the functions performed with the Remote Control work identically to the Manual Controls. (FIGURE 2).



FIGURE 2

OPERATION

The FAN may be operated by the manual controls located on the FAN (as shown in FIGURE 3) or by your remote control (shown in FIGURE 2) .

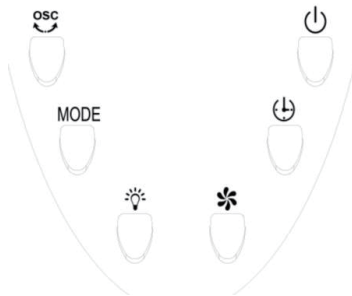 






FIGURE 3


1. Place the FAN on a stable flat surface. Plug the cord set into a 120V~AC electrical outlet.

POWER: Turn the FAN on by pressing the ‘  ’ button; Turn the FAN off by touching the ‘  ’ button again.

SPEED: You can adjust the fan speed to the desired level: low, medium, or high by touching ‘  ’. The speed setting is displayed on the FND screen(shown in FIGURE 4) ..

MODE: Touching the ‘MODE’ button will set the FAN into NORMAL, NATURAL, and SLEEP mode .

TIMER: The fan is equipped with a timer that allows you to set it's length of operation from 1 hour to 12 hours. Pressing the ‘  ’ button.

OSC: Touching the ‘  ’ button will start and stop the oscillation function. The symbol is displayed on the FND screen.

TEMP : Once the unit plug into the power socket or switch on, the FND will show the room temperature.

LED Lamp : Touching the ‘  ’ button will start and close the LED lamp function.

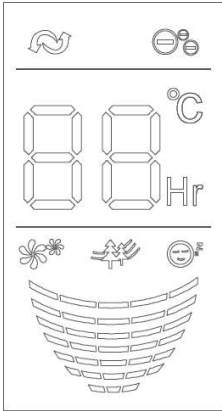 


FIGURE 4

Filter installation

1. Insert the filter to the grid.
2. Fix it by 2 screws. See FIGURE 5



FIGURE 5

MAINTENANCE

1. This can only be done by an authorized service agent such as your local Sealer dealer or any agent qualified to undertake electrical repairs.

2.If the unit requires external cleaning make sure it is switched off and unplugged from the mains supply. Use a soft tissue or cloth for general cleaning. To remove more persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water. Do not use any solvents (such as thinners) as these may damage the plastic casing.

notice

- 1、 This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2、 Children should be supervised to ensure that they do not play with appliance.

Operating voltage: 120V ~ 60Hz

Power consumption: 50W