



IN221200026V01\_UK

**800-105**



**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# ASSEMBLY & INSTRUCTION MANUAL

**TABLE OF CONTENTS**

Important Safeguards .....1  
Unpacking Instructions ..... 2  
Features and Components ..... 3  
Operating Instructions .....5  
Helpful Reminders .....5  
Blender Cleaning and Maintenance .....6

## **IMPORTANT SAFEGUARDS**

When using this or any other electrical appliance, always follow these basic safety precautions:

- Read All Instructions Before Using This blender
- To protect against risk of electrical shock do not put cord, plug, or base in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons
- Do not use outdoors
- Do not let cord hang over edge of table or counter
- Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- Be certain cover is securely locked in place before operating appliance.
- Do not attempt to defeat the cover interlock mechanism.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Care shall be taken when handling the sharp cutting blade, emptying the bowl and during cleaning.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- children shall not play with the appliance
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

## TO RESET THE UNIT

 
Your blender is equipped with a Resettable Thermal Protector to protect the motor. If the motor shuts down, unplug the blender. Let the blender rest for approximately 15 minutes. Once the resting period has elapsed, plug the power cord back into the outlet and continue blending. If your blender does not function properly following this procedure, discontinue use and contact a certified Consumer Service Center

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### UNPACKING INSTRUCTIONS

1. Place the box containing blender on a flat, sturdy surface before unpacking.
2. Open box and remove instruction book, Handbook cookbook, and any printed materials from top of box.
3. Remove packing materials and all components. CAUTION: Sharp blade inside blender container.
4. Place all packing materials back into the gift box and save, in the event that future shipping of the machine is needed.

## FEATURES AND COMPONENTS

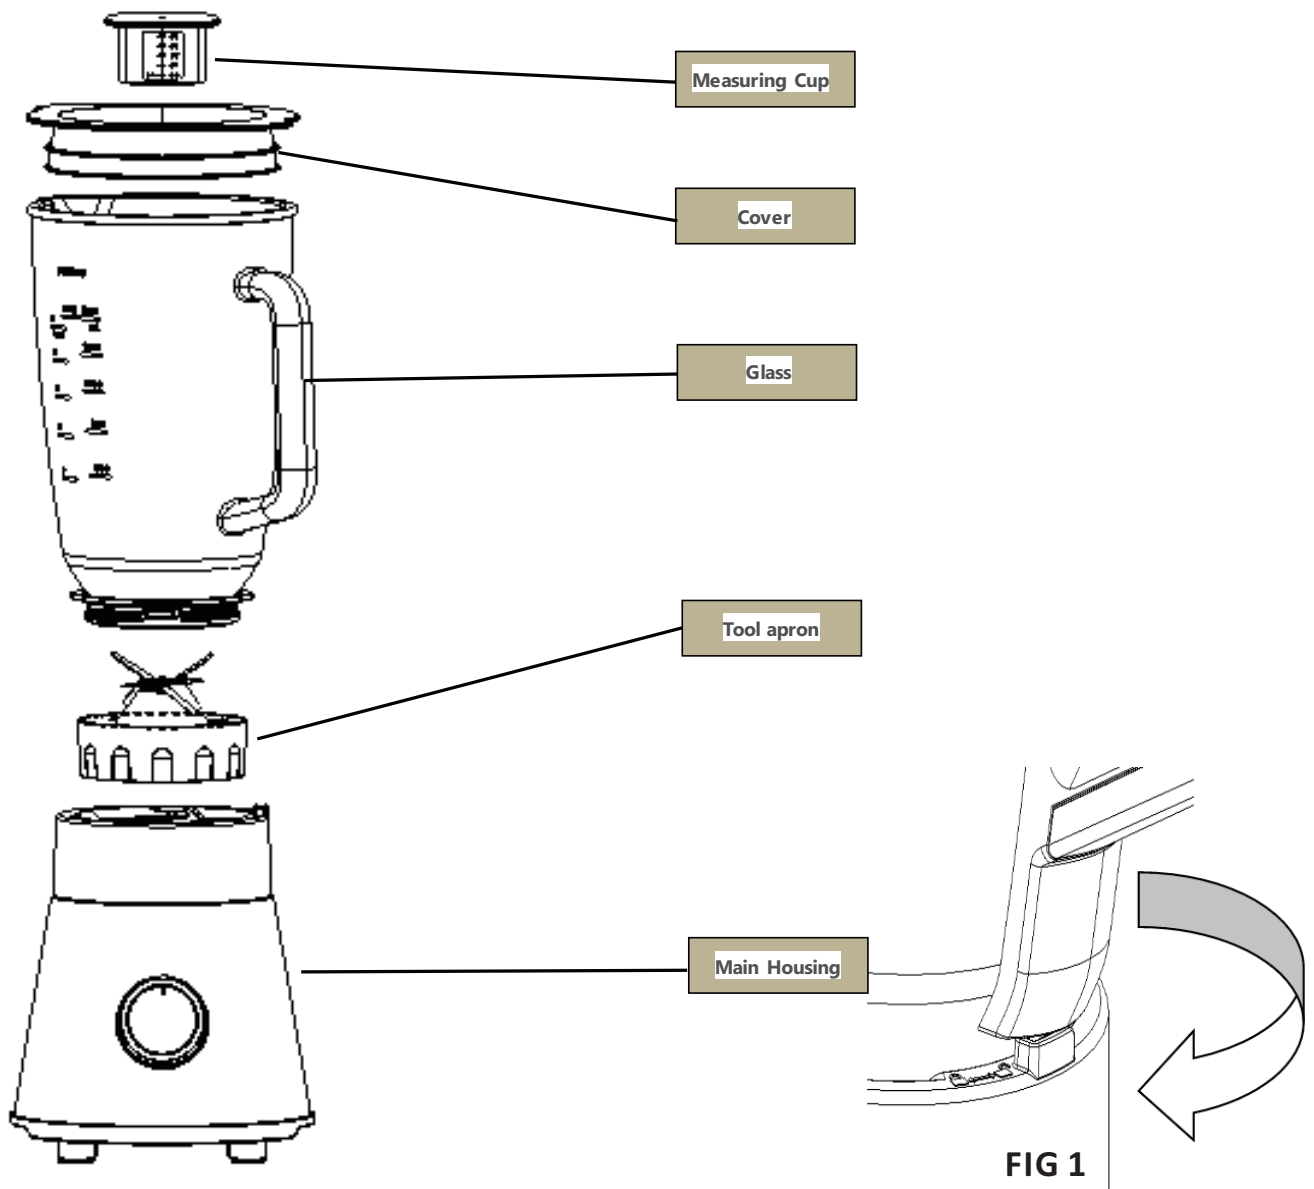

1. Take the measuring cup up.
2. Cover opening.
3. Glass -1500mL,BPA free Eastman Tritan, includes English and metric calibration.
4. Blender base with high performance motor, and with metalring.
- 5.The glass with plastic handle needs to be screwed into the mainframe with the handle facing the bottom trigger link. There is a lock symbol next to it (FIG 1)

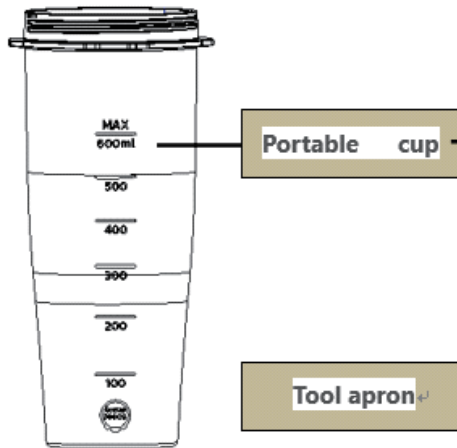 


FIG 2

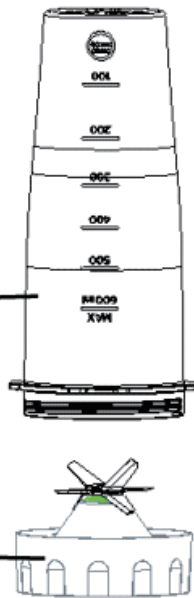 


FIG 3

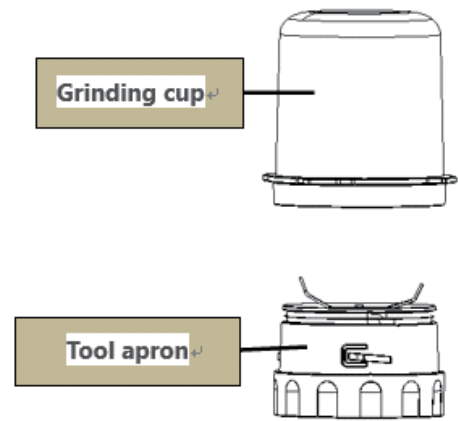 



FIG 4

1.Unscrew the lid or tool apron. (FIG 2)

**2.Portable cup** -600ml,AS

3.The portable cup and gringing cup that holds the tool apron can be screwed into the mainframe to make recipes

## CONTROL PANEL

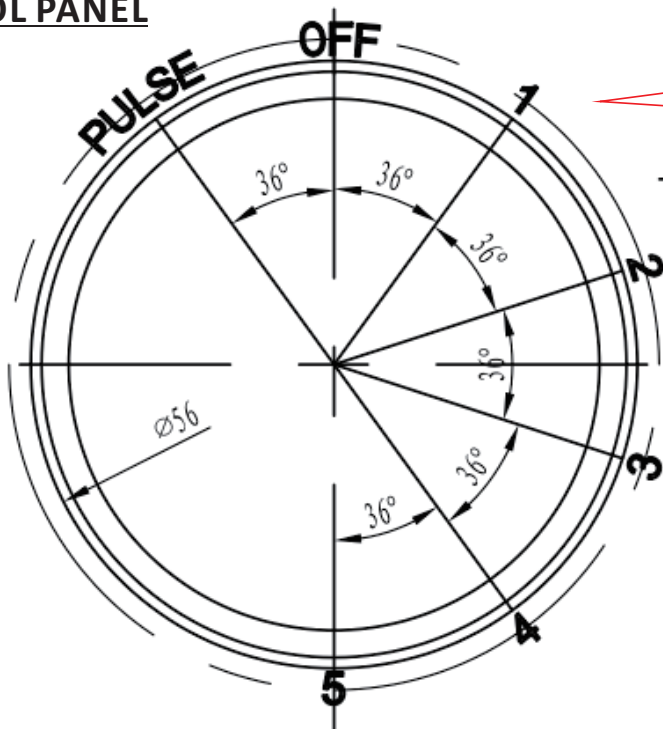 

Mechanical gear

## OPERATING INSTRUCTIONS:

Place the motor base on a flat, sturdy surface, it is so important that the surface is clean and dry fit the jar on motor base, once assembled, plug the power cord into an electrical outlet Add all necessary ingredients to jar and secure the cover; you may add more ingredients by removing the measuring cup and dropping ingredients through the fill area, replace the measuring cup after adding any ingredient.

Do not put hands in jar with the blender plugged in, start blending

## Function file

1 is the lowest grade,5 is the highest grade.

**PULSE: ice crush:** need to beat the ice manually

## RECIPE

| Attachment     | Type load         | capacity               | Operating Time |
|----------------|-------------------|------------------------|----------------|
| Blender 1500ml | Carrots and water | 600g carrot+900g water | 2 min          |
| Blender 600ml  | Carrots and water | 240g carrot+360g water | 2 min          |
| Grinding cup   | Coffee bean       | 50g                    | 30S            |
| Grinding cup   | beef with tendons | 150g (25*25*25mm)      | 10S            |

## HELPFUL REMINDERS

Jar cover should always be secure while the unit is in operation. Always use the blender on a clean, sturdy and dry surface.

Insert the measuring cup into the cover.

Once the cover is in position, additional ingredients can be added during blending by simply removing the measuring cup insert, adding ingredients, and replacing it, turning it to secure.

Do not place jar on base while motor is running or remove jar before the blender has stopped running.

Do not attempt to blend boiling liquids

When blending, place liquid ingredients into the jar first, followed by the softest ingredients. Ice or frozen fruit should be placed in the jar last.

Use a plastic spatula as needed, only when the blender is turned off. Never use metal utensils, as damage may occur to the jar or blade.

Blending hard ingredients and spices may cause some clouding to appear on the inside of the jar, but will not affect blender performance.

Use Ice crush and Cleaning program for maximum power to break up hard ingredients.

Do not exceed the MAX FILL LINE when adding food or liquid to the blending jar

Make sure the jar is completely dry when chopping ice, fresh herbs, garlic, onion, zest, breadcrumbs or nuts and spices.

Do not store food or liquids in your jar.

Be careful not to over process foods.

Do not use any utensil inside the jar with the motor on.

Unplug blender before reaching into the jar.

Never use carbonated liquids in a jar. Using carbonated liquids in the blender may result in Injury

## BLENDER CLEANING AND MAINTENANCE

Always unplug the blender from the electrical outlet before cleaning. Never immerse blender base in water or other liquids.

1. Remove the jar from the blender base and remove the cover. The jar must be cleaned and dried after each use or when the blender has not been used for an extended period of time. We recommend using the automatic clean function
2. Wash the cover in warm, soapy water and rinse thoroughly.
3. The jar, blade assembly and cover assembly are all dishwasher safe.
4. To clean the blender base, wipe the exterior with a soft cloth or sponge dampened with cleaning solution. Do not immerse the base in cleaning solution or water. Wipe with a dry towel and be sure the base is completely dry before using.
5. be sure that the blender is thoroughly dry and properly assembled with the jar pad in place before operating. An authorized service representative should perform any other servicing.

## Electrical Specifications

| Model   | Voltage     | Frequency | Wattage |
|---------|-------------|-----------|---------|
| BL3437A | 220-240 VAC | 50-60 Hz  | 900 W   |

## ENVIRONMENT FRIENDLY DISPOAL



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non -working electrical equipments to an appropriate waste disposal centre.

If you have any questions, please contact our customer care center.  
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:  
MH STAR UK LTD  
Unit 27, Perivale Park,  
Horsenden lane South  
Perivale, UB6 7RH  
MADE IN CHINA

