

**Model: ST-408**



**Model: K538QNK**



## **WATER KETTLE TOASTER SET**



**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# **INSTRUCTION MANUAL**

## IMPORTANT INSTRUCTIONS

1. Before using this appliance, read all instructions. Retain this manual for future reference.
2. To prevent electrical hazards, do not immerse any part of the appliance or cord in water or other liquid.
3. Children must be supervised when near the appliance.
4. Always use the appliance on a dry and level surface.
5. Do not use this appliance outdoors.
6. When not in use and before cleaning, unplug the appliance from the socket.
7. If the appliance is damaged or malfunctions in any way, do not use it. Return the appliance to an authorised service engineer for repair, as special tools are required.
8. Regularly check the supply cord, ensuring there are no damages. If signs of damage occur, return the entire appliance to an authorised service engineer.
9. Ensure the cord does not hang over a table or counter or touch hot surfaces. Let the unit cool before wrapping the cord around the base for storage.
10. Parts of this appliance can become hot – do not touch to avoid burns. Do not store or cover the appliance until it has cooled down completely.
11. Keep this appliance away from hot gas, electric burners, heated ovens and other heat sources.
12. When cleaning this appliance, do not use harsh abrasives, caustic cleaners or oven cleaners.
13. When using this appliance, ensure there is enough space on all sides, allowing air to circulate. Keep the appliance away from curtains, wall coverings, clothing, cloths and other flammable materials. Extra caution is required for surfaces that are not heat-resistant – an insulated heat pad is recommended.
14. This appliance is for household use only. Do not use for commercial purposes.
15. When using the toaster, ensure the slide-out crumb tray is in place. Clean the crumb tray regularly – do not allow crumbs to build up.
16. Do not use this appliance with ingredients containing sugar, jam or preserves.
17. This appliance is not for use by children or individuals with limited physical, sensory or mental capabilities unless they have received proper supervision or instructions for safe usage.
18. Children must be supervised when near the appliance.
19. Whilst this appliance is in use, the temperature of surrounding surfaces may be high.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
21. Keep this appliance away from curtains, clothes and other flammable materials.
22. When in use, do not leave this appliance unattended. Ensure it is switched off when not in use.
23. Do not use this appliance through an external timer or separate remote control system.

## WARNING!

Never use a knife to take out items from the toaster – contact with live elements could cause electrocution. Let the appliance cool down, unplug and carefully remove the bread.

## FEATURES OF TOASTER

1. Full-length crumb tray
2. Stop button with indicator light
3. Reheat button with indicator light
4. Defrost button with indicator light
5. Electronic variable browning control
6. High-lift bread release



## USING THE TOASTER

1. Insert the plug into a suitable mains supply socket, then turn the power on.
2. Place two slices of bread, muffins or bagels into the bread slots.
3. Using the control knob, select the desired browning (No.1 is the lightest and No.7 is the darkest). For first-time use, it is suggested to use No.3. Different types of bread and personal preference may require a different browning setting.
4. Press the carriage control lever down until it clicks into place – the toasting cycle will automatically begin. Note: If the toaster is not plugged in and switched on, the lever will not click into place.
5. When the desired toast colour is achieved, the toaster will turn off and the toast will pop up automatically. To stop the toasting process at any time, press the stop button.

## TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots and select the desired browning setting. Press the carriage control lever down until it clicks into place, then press the 'frozen' button.

## CLEANING THE TOASTER

- A slide-out crumb tray is included, making it quick and convenient to remove crumbs.
- Before removing and emptying the crumb tray, unplug the toaster and wait for it to cool down.
- Clean the tray with a damp cloth. **NOTE:** The tray must be completely dry before placing back into the toaster.
- Use a stiff brush to remove any burnt-on crumbs.
- Wipe the outside of the toaster with a damp cloth.
- Do not use sharp or abrasive objects to clean the toaster.

## **CAUTION**

- To prevent an electric shock, unplug the appliance.
- There are no user-serviceable parts inside.
- Maintenance and repairs must be done by qualified personnel.
- Do not use this appliance through an external timer or separate remote control system.

## **Technical details**

Model No.: ST-408

Mains Voltage: AC220-240V 50/60Hz

Power consumption: 1350-1600W

# THE INSTRUCTION OF WATER KETTLE

## SAFETY INSTRUCTIONS

### General

- Read all instructions carefully. Retain this manual for future use.
- Use this appliance by following these instructions.
- This appliance is not for use by children or individuals with limited physical, sensory or mental capabilities unless they have received proper supervision or instructions for safe usage.
- Children must be supervised when near this appliance.
- Any repairs must be carried out by a qualified electrician. Never try to repair the appliance yourself.

### Electricity and heat

- Before use, ensure the mains voltage matches the rating plate on the appliance.
- Always use an earthed wall socket to connect the appliance.
- Before moving the appliance or if it is not in use, remove the plug from the mains socket.
- When removing the plug from the socket, do not pull on the cord – instead, grasp the plug.
- Regularly check the power cord, ensuring it is not damaged. If there are any damages, do not use the appliance. Damaged power cords must be replaced by a qualified repair service.
- Some parts of this appliance can get hot. To prevent burning yourself, do not touch these parts.
- The appliance needs space for heat to escape, preventing the risk of a fire. Ensure the appliance has sufficient space around it. Keep this appliance away from flammable materials. Never cover this appliance.
- Keep the appliance, its power cord and plug away from hot surfaces, such as hobs and naked flames.
- Keep the appliance, its power cord and plug away from water and other liquids.

### During use

- Never use the appliance outdoors.
- Place the appliance on a flat and stable surface.
- When not in use and before cleaning, remove the plug from the wall socket.
- Ensure the power cord does not hang over the edge of any surface.
- Never touch the appliance, its power cord or plug with wet hands.
- Never use the appliance in a humid room.
- Never immerse the appliance, its power cord or plug in water or other liquid.
- Never reach for the appliance if it falls into water. Immediately remove the plug from the wall socket – do not use the appliance again.
- Only use the base supplied with the kettle. Never use the base for other purposes.
- Remove the jug from the base, then fill with water from the tap. Never fill the jug above the 'max' level.
- Only switch on the appliance after it has been filled with water. Only use cold water to fill.
- Whilst the appliance is in use, ensure the lid is securely closed.

- Never open the lid when the water is still boiling.
- Only water must be used in this appliance – do not use for other liquids.
- Fill the jug kettle with at least 0,5 litres of water.
- Before storing the appliance, allow it to cool to room temperature.
- Never use the appliance through an external timer or remote control.

## Operation

This appliance is for domestic use only. It is not intended for commercial use.

### Feature

1. Spout
2. Top lid
3. Lid handle
4. Handle
5. Body
6. Water-level indicator
7. Base
8. On/off switch with pilot light



### Before using for the first time

Clean the kettle by filling it with water and bringing to a boil – do this three times, disposing of the water each time.

**Tip:** When boiling for the first time, you can use vinegar or special descaling agents.

### Use

1. Make sure the spout is facing away from you.
2. Pull up the lid handle (3) to open the lid (2).
3. Fill the jug with the required quantity of water (0.5-1.7 litres). Never fill water above the 'max' limit – hot water could spatter out.

### ATTENTION!

Do not spill water on the base.

4. Close the lid.
5. Place the jug on the base, then insert the plug into the wall socket. Push the 'on/o' switch – the 'on/off' light will illuminate.
6. The jug kettle is now switched on – the water will begin to heat. When the water has come to a boil, the kettle will switch off automatically after a few seconds.
7. Using the handle, remove the jug from the base and pour the water out.

### ATTENTION!

To prevent scalding, do not touch the hot water.

8. If you want to heat water without boiling it, you can switch the kettle off at any time.
9. When finished with the kettle, remove the plug from the wall socket.

## Overheating safeguard

This kettle has an overheating safeguard. It will switch the kettle off if it is used without (sufficient) water. Before using the kettle again, allow it to cool down for at least 10 minutes.

## Cleaning and maintenance

- Unplug the appliance and wait for it to cool down.
- Clean the jug with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Do not allow the electrical connections to become damp.
- If the interior of the jug becomes severely discoloured, clean it with a damp cloth and a little washing soda. After cleaning, rinse the jug very thoroughly.

## ATTENTION!

- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Before cleaning, unplug the appliance and wait for it to cool down.

## Descaling

This appliance has an integral heating element, which means limescale will not form. You do not need to descale this appliance.

If you still wish to descale this appliance, follow these steps:

1. Unplug the appliance and wait for it to cool down.
  2. The kettle has a descaling filter. Remove the filter when cleaning.
  3. Fill the jug to the 'max' level with vinegar solution, then bring to a boil.
  4. Leave the jug with the vinegar solution to stand for a couple of hours.
  5. Empty the jug, fill to the 'max' level with clean water and bring to a boil. Empty the jug. Repeat this process twice.
- Never use ammonia or other products to descale the appliance. Only use a vinegar solution or special descaling agents.

## Technical details

Model: K538QNK

Power consumption: 2520-3000W

Mains Voltage: AC220-240V 50/60Hz

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden Lane South

Perivale, UB6 7RH

MADE IN CHINA

