



EN

IN240200108V01_US_CA

370-325V80



3-6
years

Electric Ride-On

Installation & operation Manual




CAUTION:

- This package contains small parts
- Adult assembly required
- Remove all plastic bags and package ties prior to giving to children
- Protective equipment recommended
- Not to be used in traffic
- Keep this instructions for future reference



WARNING

**ADULT ASSEMBLY
REQUIRED.**

2023 Ford Motor Company.  are trademark(s) of Ford or its affiliates used under license.

Manufactured and distributed by Ningbo Prince Toys Co., Ltd. under license. The [FORD] trademark and related trademarks and designs are used with the permission of Ford Motor Company.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

 
ASSEMBLY INSTRUCTION

I.SPECIFICATION.

Suitable Ages	3-6 years
Product Dimensions	105x64x60 cm
Maximum Weight	30 kgs
Speed	3-5km/h
Motor	30W
Charger	DC12V500mA/12V1000mA
Battery	12V4.5AH/12V7AH
Remote Control	2.4G one to one function
Remote Control Batteries	2XAAA Size(not included)
Steering Wheel Batteries	2XAA Size(not included)
Operating Ambient Temperature	0-40°C


II.Components List.

1.Body 1pc 	2.Steering wheel 1pc 	3.Seat 1pc 
4.Bracket 1pc 	5.Windshield 1pc 	6.Rear mirror 1pair 
7.Wheel 4pcs 	8.Wheel cap 4pcs 	9.Rear support with wheel axle 1pc 
10.Washer 3pcs(1 replacement piece) 	11.Tool 2pcs 	12.Charger 1pc 
13.Remote control 1pc 		

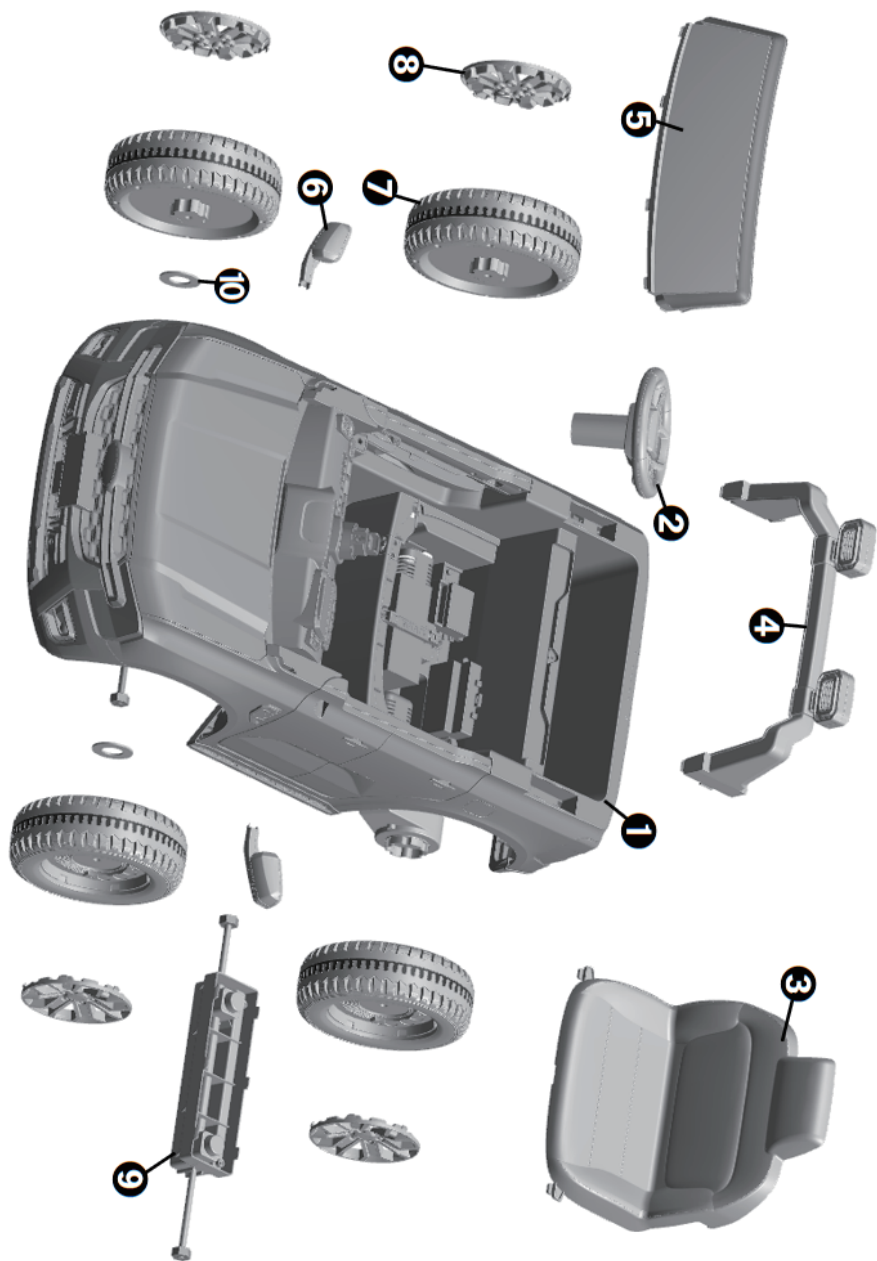


III.Assembly Instructions.
 
<Step1>

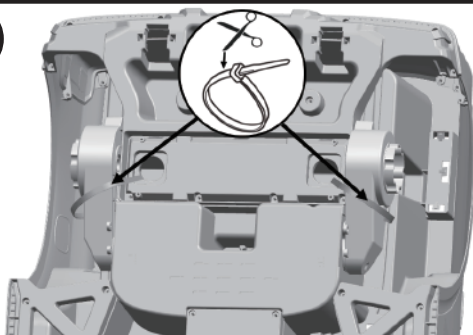


1. Turn over the body and find the gearbox, then cut the ties.
 
<Step2>

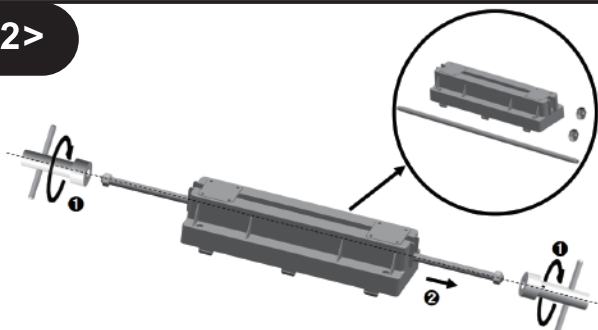


2. Release the two nuts with the tools provided, and pull the wheel axle out.
 
<Step3>

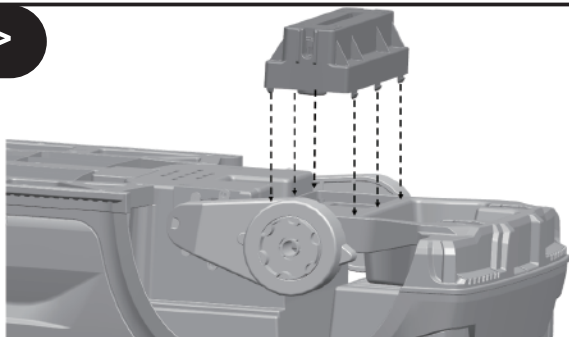


3. Place the rear support into the position of the body, make sure it is firmly fixed.
 
<Step4>

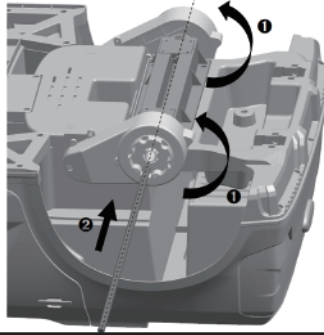


4. Rotate the gearbox and make the hole alignment, then insert the rear wheel axle.
 
<Step5>

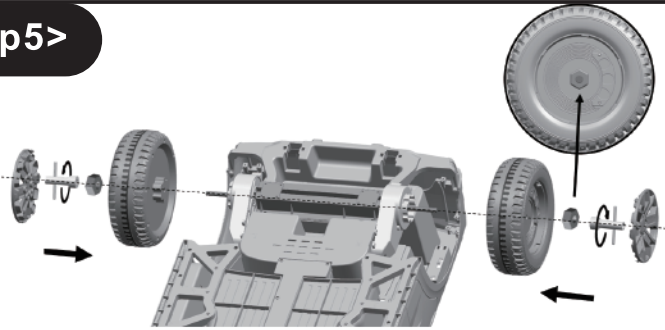


5. Insert the two wheels first and tighten with two nuts by the tools provided, then cover the wheel caps.
 
<Step6>

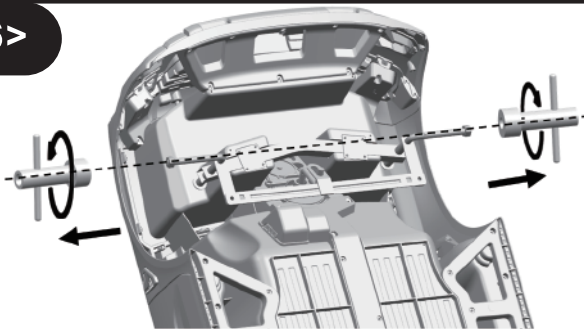

6. Release the two nuts with the tools provided.
 
<Step7>

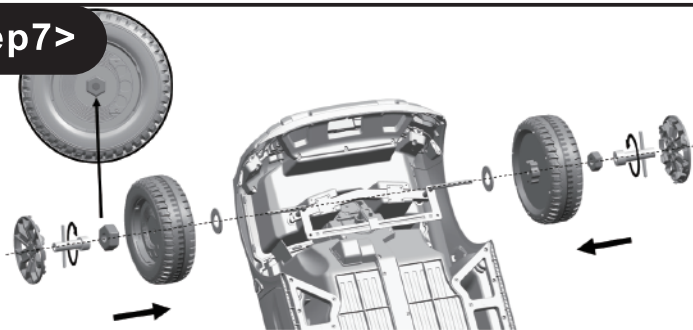

7.Insert the two washers first together with the two wheels, tighten with two nuts by the tools provided,then cover the wheel caps.

<Step8>

 


8.Insert the windshield in the front of the body,make sure it is firmly fixed.


<Step9>



9.Press the button and insert the steering wheel.

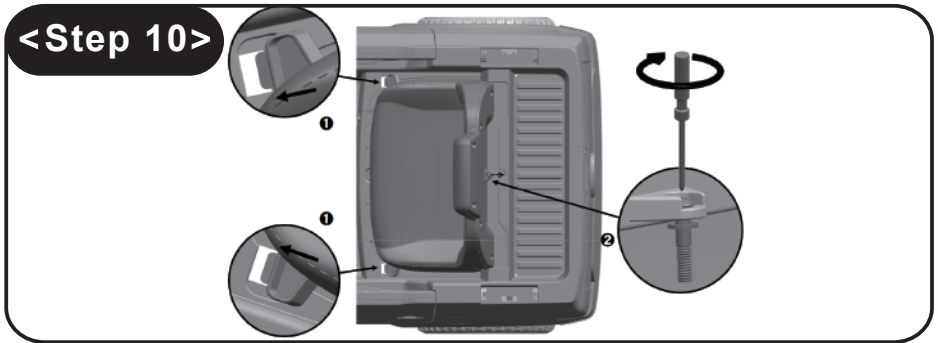

 
10. Place the front of the seat first, then close the rear of the seat, tighten by a screw with a screwdriver(not included).

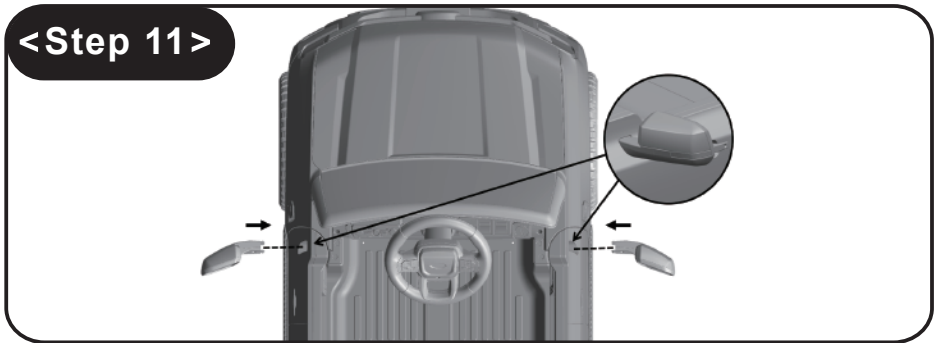

11. Place the two rear mirrors into the position of the body.



 12. Place the bracket into the rear of the body.





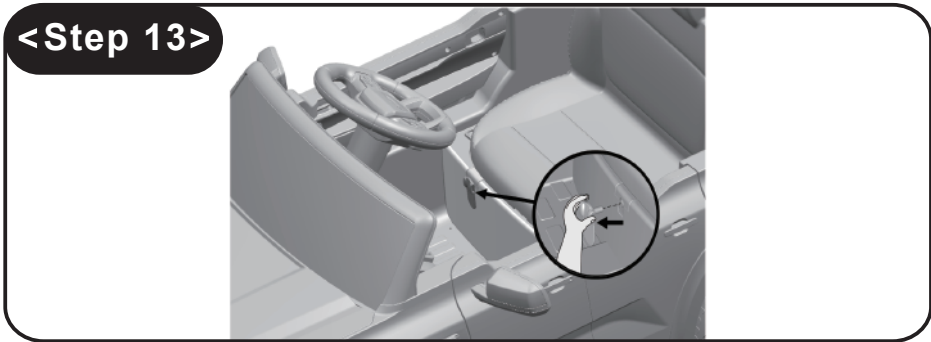


13.PULL OUT the key,let the battery power on.

IV.BATTERY CHANGE.




     V.Function and Operation.

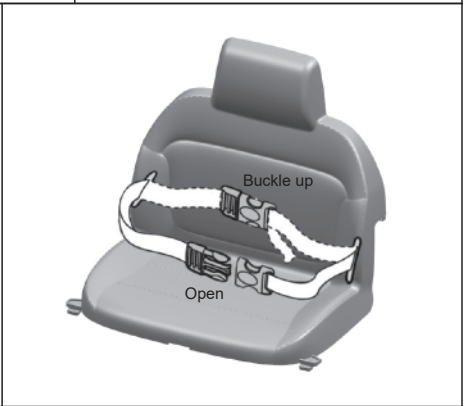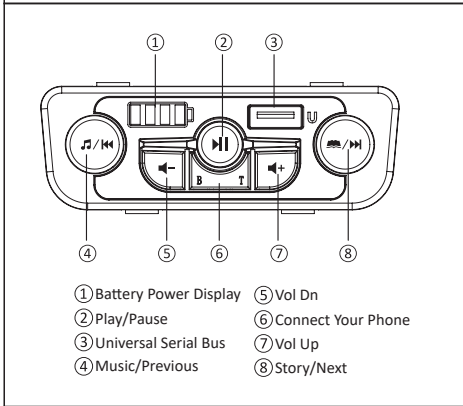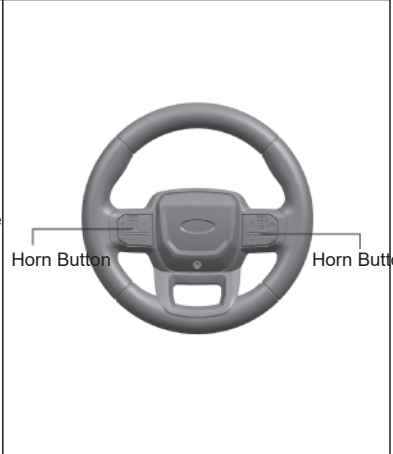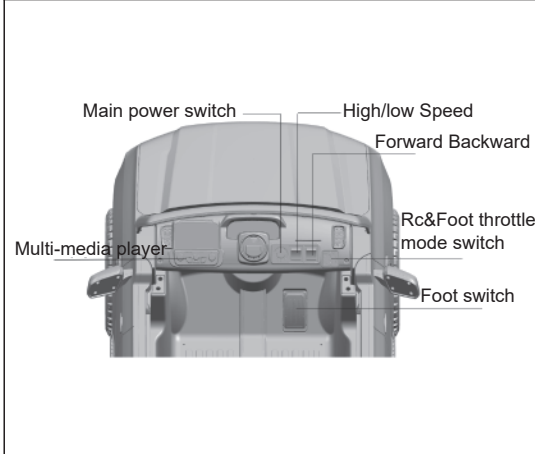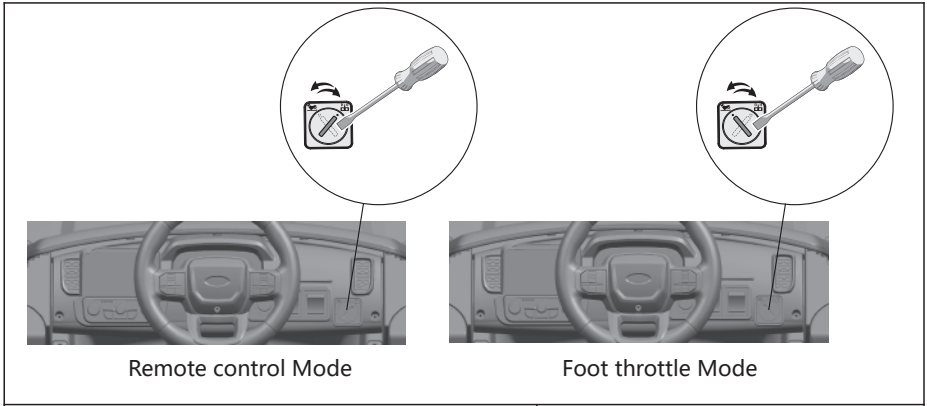

VI.Charging the Drive Battery .

 1. The charging socket is located at the lower part of the car seat.
2. Only battery and charger which are provided or recommended can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is to be carried out only by adults.
5. The battery shall be fully charged before first use; the battery charging time shall be 9-10 hours and can not exceed 15 hours
6. It is normal for battery and charger to feel warm during charging.

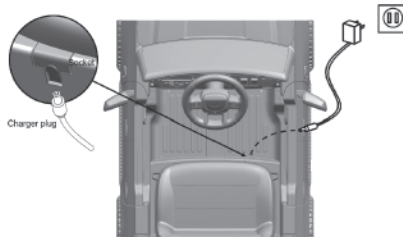

VII.Simple Problem Diagnostic.

Defective conditions	Key points of inspection
1. The car can not be driven.	1) Ensure the power switch, all plugs of the control plate under the seat, and the battery terminal line are properly inserted.
	2) Ensure the over current protector, when the car is over loaded or blocked, the over current protector automatically disconnects the circuit to protect the motor and controlling IC board.
	3) Check whether the car has been stored for a long time and its battery is not charged on time.
	4) If the remote control cannot start the car, please check whether the remote control code-matching function is normally operated.
	5) Check whether the remote control battery power is low.
2. Music sound is distorted or silent	Check whether the battery has enough power, otherwise charge fully.

VIII. WARNING.

1. Battery warning:

- 1) When storing the car for a long time, fully charge the battery, then turn off the power. The battery should be recharged once every other month – minimising the risk of shortening its lifespan.
- 2) When installing the battery, the positive and negative poles must be correctly connected. Short circuiting of positive and negative poles could damage the product.
- 3) Product needs to be operated with two DC 1.5V AAA batteries (not included) and two DC1.5V AA batteries (not included).
- 4) Only adults should change batteries.
- 5) Recharging batteries must be done by adults.
- 6) Non-rechargeable batteries cannot be charged.
- 7) Before recharging chargeable batteries, ensure they are removed from the remote control.
- 8) Do not mix different types of batteries.
- 9) Do not mix old and new batteries.
- 10) When storing the car for a long time, ensure the batteries are removed.
- 11) Over-used batteries should be removed.

2. Product warning

- 1) Pre-assembled parts can be sharp – product assembly must be done by an adult. Keep parts away from small children.
- 2) To avoid suffocation, keep plastic bags away from children. Dispose of all bags immediately.
- 3) When children ride this product, adult supervision is required.
- 4) This car is to be driven on a flat and even ground. Do not drive on public roads, steep hills or near swimming pools.
- 5) Wear shoes when using this product. Take protective measures, such as fastening the seatbelt and wearing a helmet, gloves, kneepads etc.
- 6) Not suitable for children under three years.
- 7) Regularly check the battery, charger, wire, plug, casing and other parts. If there are any damages, do not use the product until it has been repaired.
- 8) This product can fit one child at a time. The maximum load is 30kg – do not exceed this limit.
- 9) Keep this product away from open flames.
- 10) Keep is manual for future reference.

3.Warning



- Adult supervision required – minimising the risk of injury.
- Do not use on roads, near motor vehicles, slopes, swimming pools or areas where there is water.
- Wear shoes when using this ride-on.
- Can only be used by one child at a time.
- Before this product is assembled, keep it away from children. There could be small and sharp parts, which could be dangerous.
- This product must be assembled by an adult.
- Always use this product with caution. Skill and vigilance are required to avoid falls and collisions.



Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

 


Protective equipment should be worn. Do not ride in traffic.




Because of its maximum speed, this product is not suitable for children under three years.

IX. Remote Control Instructions.

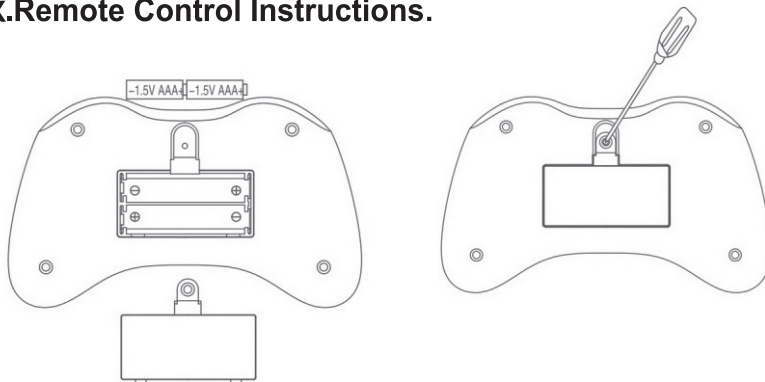

 Loosen the screw with a screwdriver, and put 2 AAA batteries into the battery house.
Cover with a battery cover and tight with a screw

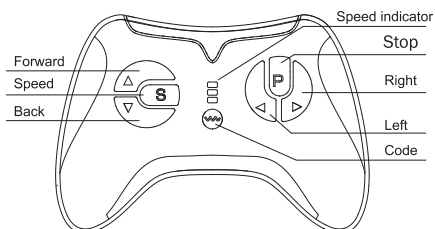

Operation manual: For the first time to use Need to frequency bind.

- First time use need to match code, this product has memory function
Replace battery is unnecessary match code
- Hold down “⚡” keys for 3 seconds start match code, The first LED flicker
- Turn on the car body power now, The first LED lit up, Match code Success
- Remoter 10 seconds not run will be standby ,Press any key wake up
- Keys caption : “△” Forward, “▽” Back, “◀” Left, “▶” Right, “S” Speed, “P” Brake.
Press “S” key set up speed , 1 led lit up is low speed, 2 leds lit up is medium speed ,
3 leds lit up is high speed, Back a car is only low speed
Press “P” key hold the brake, All LED flicker
△ The remote controller only can be used with adult's guidance

X. Care and Maintenance

- 1) Regularly wipe and clean it with a piece of cloth.
- 2) The rotating parts of the car should be checked regularly to determine whether any foreign matter obstructs the rotation and to keep the lubricating state of normal operation.



FR

IN240200108V01_US_CA

370-325V80



3-6
years

Voiture Autoportée Électrique

Manuel d'installation et d'utilisation



ATTENTION:

- Cet emballage présente de petites pièces.
- L'assemblage par un adulte est requis.
- Avant de le remettre aux enfants, retirez tous les sacs en plastique et les emballages des pneus.
- Équipement de protection recommandé.
- Ne doit pas être utilisé dans la circulation.
- Conservez ce manuel pour toute consultation ultérieure.



AVERTISSEMENT ASSEMBLAGE PAR UN ADULTE REQUIS.

2023 Ford Motor Company.  est une marque déposée de Ford ou de ses filiales utilisée sous licence.

Fabriqué et distribué par Ningbo Prince Toys Co., Ltd. sous licence.

La marque [FORD] et les marques et conceptions associées sont utilisées avec la permission de Ford Motor Company.














IMPORTANT : LIRE ATTENTIVEMENT, À CONSERVER POUR TOUTE CONSULTATION ULTÉRIEURE


INSTRUCTIONS D'ASSEMBLAGE

I.SPÉCIFICATIONS

Âges appropriés	3 à 5 ans
Tail du produit	115X67X50cm
Poids maximum	30 kilogrammes
Vitesse	3 à 5 km/h
Moteur	30W
Chargeur	DC 12V500mA/12V1000mA
Pile	12V4,5AH/12V7AH
Télécommande	2,4G fonction un à un
Piles de la télécommande	2XAAASize(non inclus)
Piles de volant	Taille 2XAA (non incluse)
Température ambiante de fonctionnement	0-40°C


II.Liste des composants

<p>1. Carrosserie 1pc</p> 	<p>2. Volant 1pc</p> 	<p>3. Siège 1pc</p> 
<p>4. Support 1pc</p> 	<p>5. Pare-brise 1pc</p> 	<p>6. Rétroviseur 1 paire</p> 
<p>7. Roue 4pcs</p> 	<p>8. Enjoliveur de roue 4pcs</p> 	<p>9. Support arrière avec axe de roue 1pc</p> 
<p>10. Rondelle 3 pcs (1 pièce de rechange)</p> 	<p>11. Outil 2pcs</p> 	<p>12. Chargeur 1pc</p> 
<p>13. Télécommande 1pc</p> 		

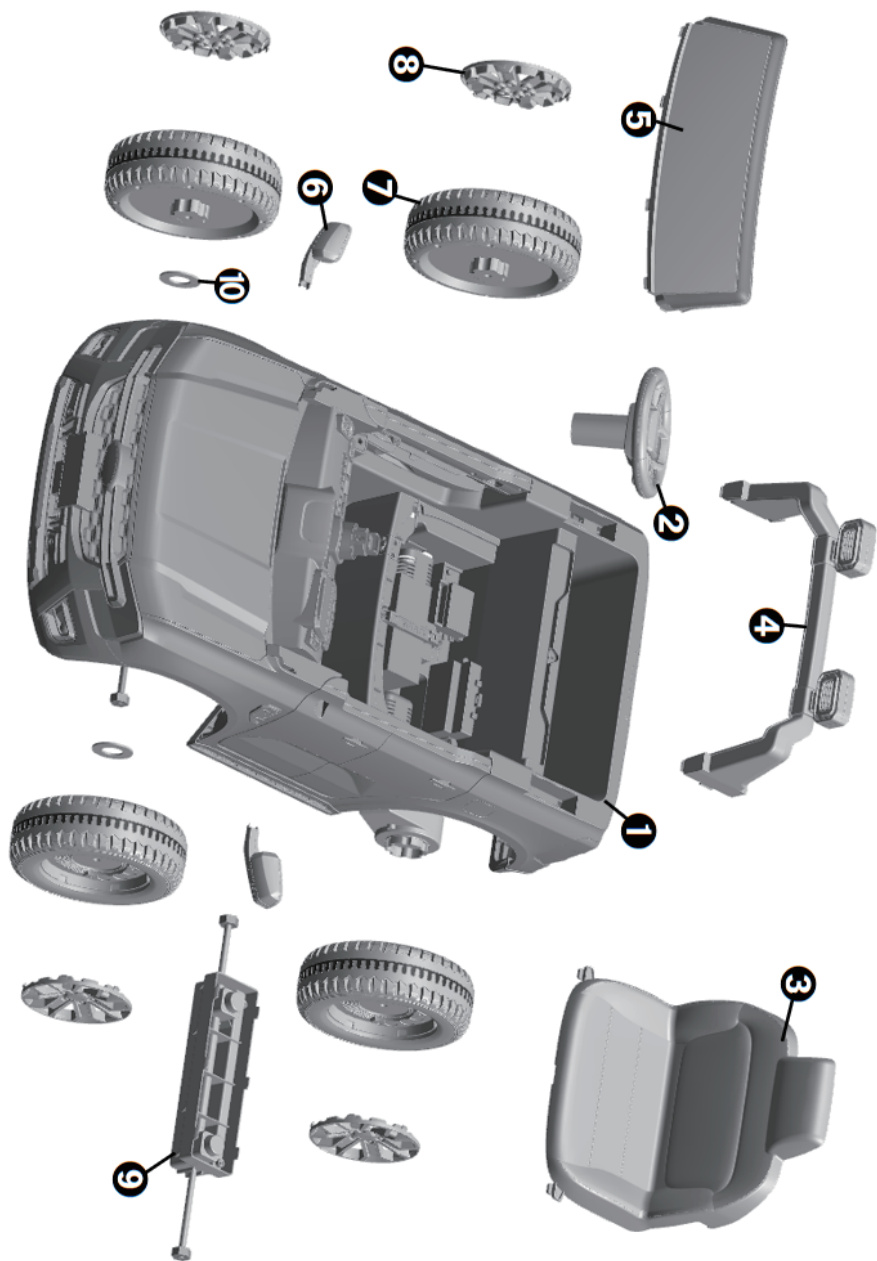 


III.Instructions d'assemblage
 
< Étape 1 >

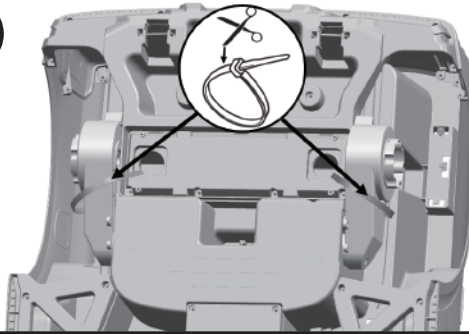


1.Retournez la carrosserie et trouvez la boîte de vitesses, puis coupez les attaches.
 
< Étape 2 >

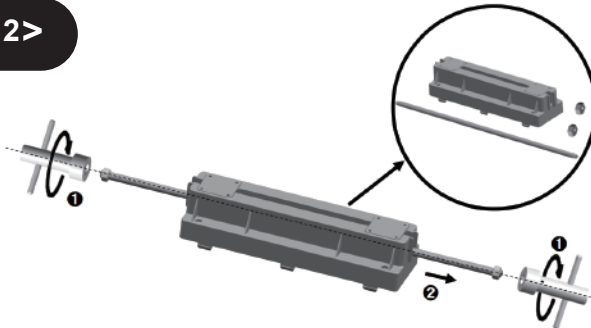


2.Desserrez les deux écrous à l'aide des outils fournis, et retirez l'axe de roue.
 
< Étape 3 >

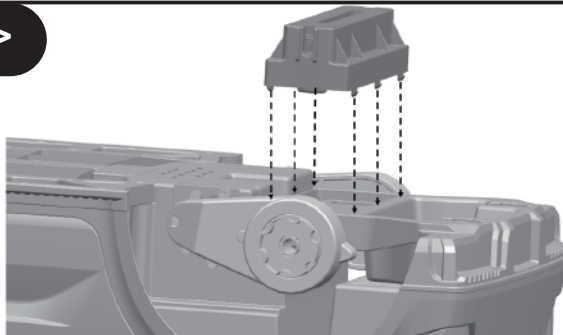


3.Placez le support arrière dans la position du corps, assurez-vous qu'il est fermement fixé.
 
< Étape 4 >

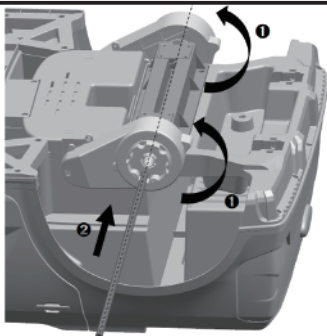


4. Faites tourner la boîte de vitesses et alignez les trous, puis insérez l'axe de la roue arrière.
 
< Étape 5 >

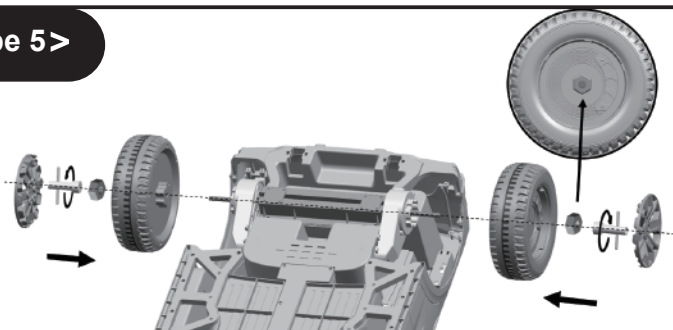


5. Insérez d'abord les deux roues et serrez avec deux écrous à l'aide des outils fournis, puis recouvrez les enjoliveurs de roue.
 
< Étape 6 >

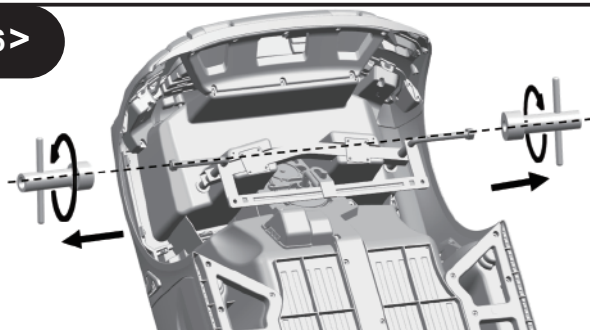


6. Desserrez les deux écrous à l'aide des outils fournis.
 
< Étape 7 >

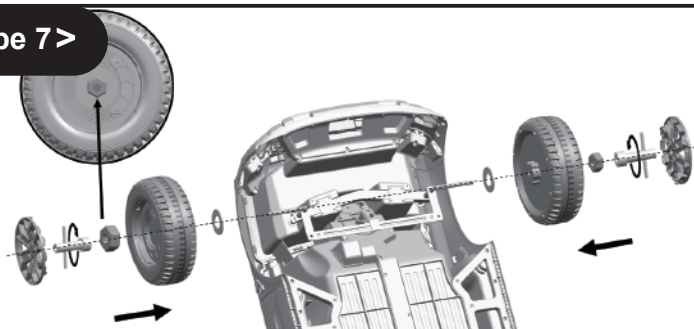

7. Insérez d'abord les deux rondelles avec les deux roues, serrez-les avec deux écrous à l'aide des outils fournis, puis recouvrez les enjoliveurs.
 
< Étape 8 >

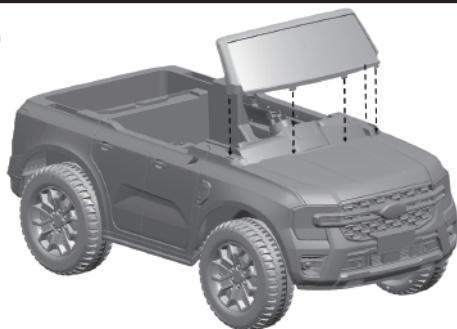


8. Insérez le pare-brise à l'avant de la carrosserie, assurez-vous qu'il est bien fixé.


< Étape 9 >



 9. Appuyez sur le bouton et insérez le volant.

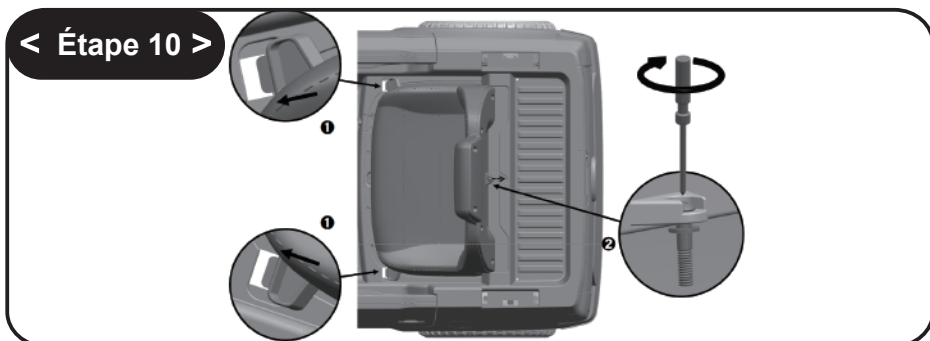

 
10. Placez d'abord l'avant du siège, puis fermez l'arrière du siège, serrez -le avec une vis à l'aide d'un tournevis (non inclus).

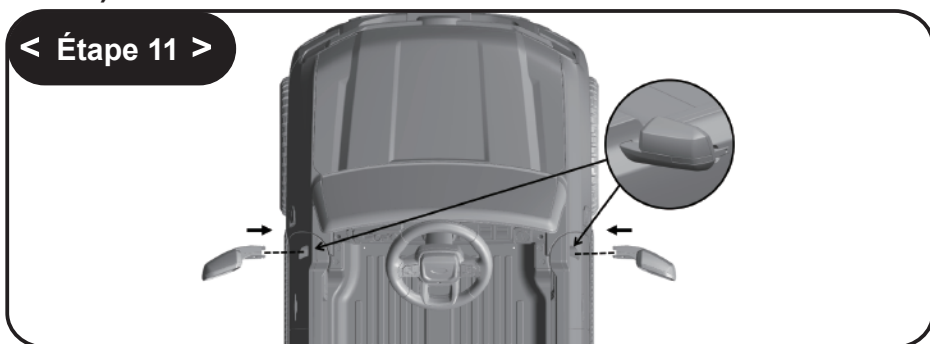

11. Fixez les deux rétroviseurs dans la position de la carrosserie.




  12. Fixez le support à l'arrière de la carrosserie.

 
 
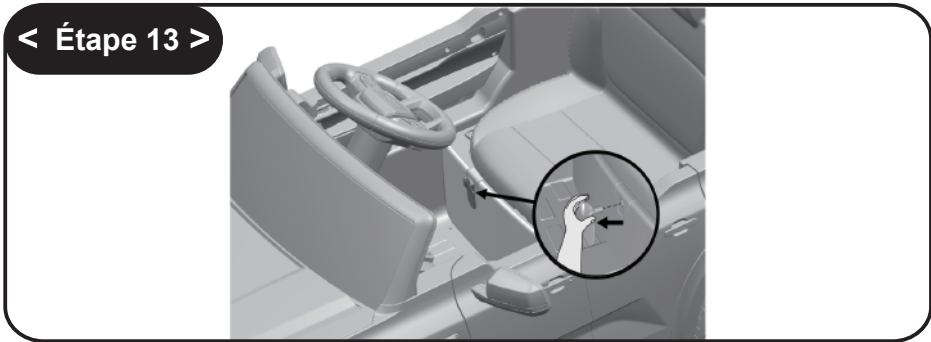 

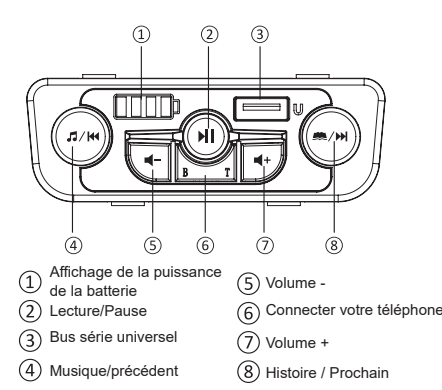 



13.Retirez la clé, laissez la batterie sous tension.

IV.CHANGEMENT DE PILES

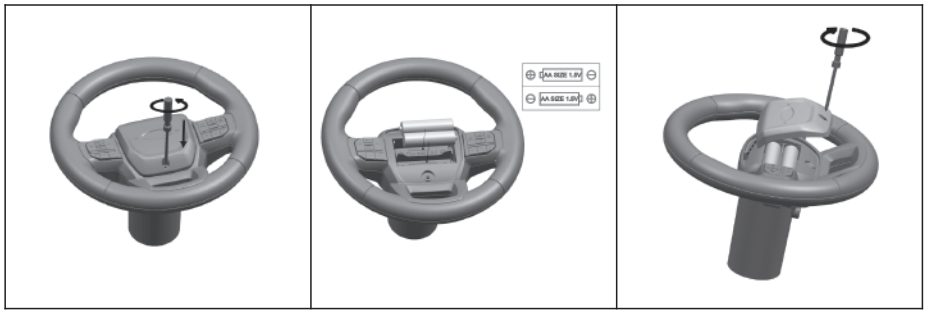


V.Fonction et fonctionnement.

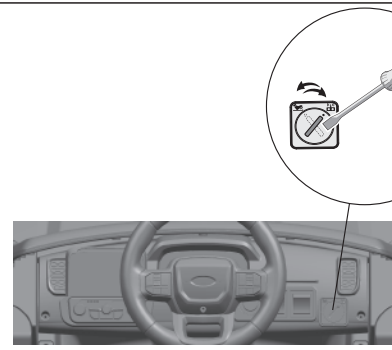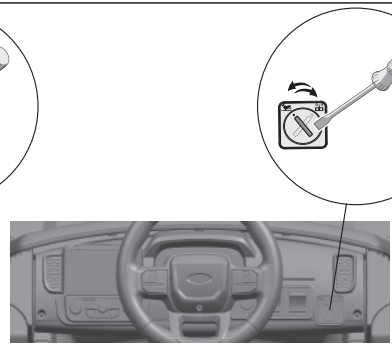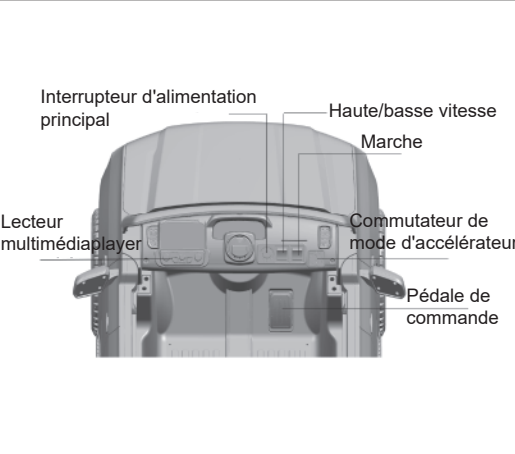 <p>Mode de contrôle à distance</p>	 <p>Mode accélérateur au pied</p>
 <p>Interrupteur d'alimentation principal</p> <p>Haute/basse vitesse Marche</p> <p>Lecteur multimédia/PLAYER</p> <p>Commutateur de mode d'accélérateur</p> <p>Pédale de commande</p>	 <p>Bouton de klaxon</p> <p>Bouton de klaxon</p>
 <ol style="list-style-type: none"> ① Affichage de la puissance de la batterie ② Lecture/Pause ③ Bus série universel ④ Musique/précédent ⑤ Volume - ⑥ Connecter votre téléphone ⑦ Volume + ⑧ Histoire / Prochain 	 <p>Boucler la ceinture</p> <p>Ouvrir</p>

VI. Chargement de la batterie d'entraînement.

 1. La prise de charge est située à la partie inférieure du siège
2. Seules la batterie et le chargeur fournis ou recommandés peuvent être utilisés.
3. Veuillez ne pas jouer avec le chargeur et la batterie car ce ne sont pas des jouets.
4. L'opération de charge de la batterie ne doit être effectuée que par des adultes.
5. La batterie doit être complètement chargée avant la première utilisation ; le temps de charge de la batterie doit être de 9 à 10 heures et ne peut pas dépasser 15 heures.
6. Il est normal que la batterie et le chargeur soient chauds pendant la charge.

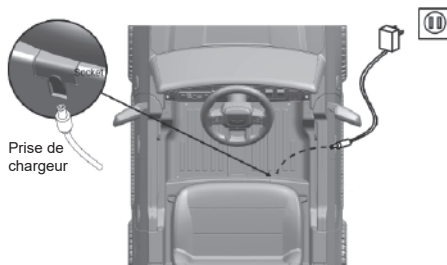

VII. Diagnostic simple du problème.

Problèmes	Solutions Possibles
1. La voiture ne roule pas.	1. Assurez-vous que l'interrupteur d'alimentation, les fiches sous le siège et la ligne de la borne de la batterie sont correctement insérés.
	2. Lorsque la voiture est surchargée ou bloquée, le protecteur de surintensité déconnecte automatiquement le circuit, protégeant ainsi le moteur et la carte de contrôle IC.
	3. Si la voiture a été rangée pendant un certain temps, la batterie est peut-être déchargée.
	4. Si la télécommande ne fonctionne pas, vérifiez si sa fonction de correspondance de code fonctionne normalement.
	5. Vérifiez si la pile de la télécommande est faible.
2. Mauvaise qualité du son ou pas de son du tout.	Assurez-vous que la batterie est suffisamment chargée - si ce n'est pas le cas, chargez-la complètement.

VIII. WARNING.

1. Battery warning:

- 1) When storing the car for a long time, fully charge the battery, then turn off the power. The battery should be recharged once every other month – minimising the risk of shortening its lifespan.
- 2) When installing the battery, the positive and negative poles must be correctly connected. Short circuiting of positive and negative poles could damage the product.
- 3) Product needs to be operated with two DC 1.5V AAA batteries (not included) and two DC1.5V AA batteries (not included).
- 4) Only adults should change batteries.
- 5) Recharging batteries must be done by adults.
- 6) Non-rechargeable batteries cannot be charged.
- 7) Before recharging chargeable batteries, ensure they are removed from the remote control.
- 8) Do not mix different types of batteries.
- 9) Do not mix old and new batteries.
- 10) When storing the car for a long time, ensure the batteries are removed.
- 11) Over-used batteries should be removed.

2. Product warning

- 1) Pre-assembled parts can be sharp – product assembly must be done by an adult. Keep parts away from small children.
- 2) To avoid suffocation, keep plastic bags away from children. Dispose of all bags immediately.
- 3) When children ride this product, adult supervision is required.
- 4) This car is to be driven on a flat and even ground. Do not drive on public roads, steep hills or near swimming pools.
- 5) Wear shoes when using this product. Take protective measures, such as fastening the seatbelt and wearing a helmet, gloves, kneepads etc.
- 6) Not suitable for children under three years.
- 7) Regularly check the battery, charger, wire, plug, casing and other parts. If there are any damages, do not use the product until it has been repaired.
- 8) This product can fit one child at a time. The maximum load is 30kg – do not exceed this limit.
- 9) Keep this product away from open flames.
- 10) Keep is manual for future reference.

3.Warning



- Adult supervision required – minimising the risk of injury.
- Do not use on roads, near motor vehicles, slopes, swimming pools or areas where there is water.
- Wear shoes when using this ride-on.
- Can only be used by one child at a time.
- Before this product is assembled, keep it away from children. There could be small and sharp parts, which could be dangerous.
- This product must be assembled by an adult.
- Always use this product with caution. Skill and vigilance are required to avoid falls and collisions.



Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



Protective equipment should be worn. Do not ride in traffic.

 


Because of its maximum speed, this product is not suitable for children under three years.






IX. Instructions de la télécommande.

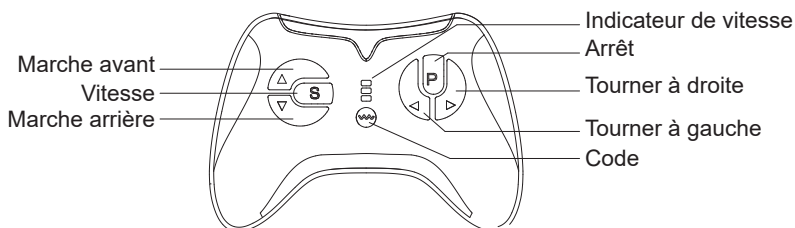

 Desserrez la vis avec un tournevis et mettez 2 piles AAA dans le boîtier de la pile.
Couvrir avec un couvercle de batterie et serrer avec une vis

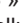

Manuel d'utilisation : Pour la première fois à l'utilisation, il est nécessaire de correspondre la fréquence.

- Lors de la première utilisation, il est nécessaire de faire correspondre le code, ce produit a une fonction de mémoire. Remplacer la pile n'est pas nécessaire pour faire correspondre le code
- Maintenez les touches «  » pendant 3 secondes pour démarrer le code de correspondance, le premier LED clignote.
- Allumez l'alimentation de la carrosserie, la première LED s'allume, le code de correspondance est réussi.
- Si l'appareil ne fonctionne pas pendant 10 secondes, il reste en veille. Appuyez sur n'importe quelle touche pour le réveiller.
- Description des touches : «  » Marche avant, «  » Marche arrière, «  » Tourner à gauche, «  » Tourner à droite, « S » Vitesse, « P » Frein. Appuyez sur la touche « S » pour régler la vitesse, 1 voyant LED allumé correspond à la basse vitesse, 2 voyants LED allumés correspondent à une vitesse moyenne, 3 voyants LED allumés correspondent à une vitesse élevée, la marche en arrière ne correspond qu'à une vitesse faible. Appuyez sur la touche « P » pour maintenir le frein, toutes les voyants LED clignotent

 La télécommande ne peut être utilisée qu'avec l'aide d'un adulte

X. Soin et entretien

- Essuyez et nettoyez régulièrement avec un morceau de tissu.
- Les pièces tournantes de la voiture doivent être vérifiées régulièrement pour déterminer si des objets étrangers entravent la rotation et pour maintenir un état de lubrification dans un fonctionnement normal.

US

If you have any questions, please contact our customer care center.
Our contact details are below:



001-877-644-9366



customerservice@aosom.com

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

CA

If you have any questions, please contact our customer care center.
Our contact details are below:

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.
Nos coordonnées sont les suivantes:



416-792-6088



customerservice@aosom.ca

Imported by Aosom Canada Inc.
7270 Woodbine Avenue, Unit 307, Markham, Ontario Canada
L3R 4B9
MADE IN CHINA

Importé par Aosom Canada Inc.
7270 Woodbine Avenue, unité 307, Markham, Ontario Canada
L3R 4B9
FABRIQUÉ EN CHINE