

Soozier

INaab038_US_CA

A71-021




READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY & INSTRUCTION MANUAL


Tether Ball Set

Parts List

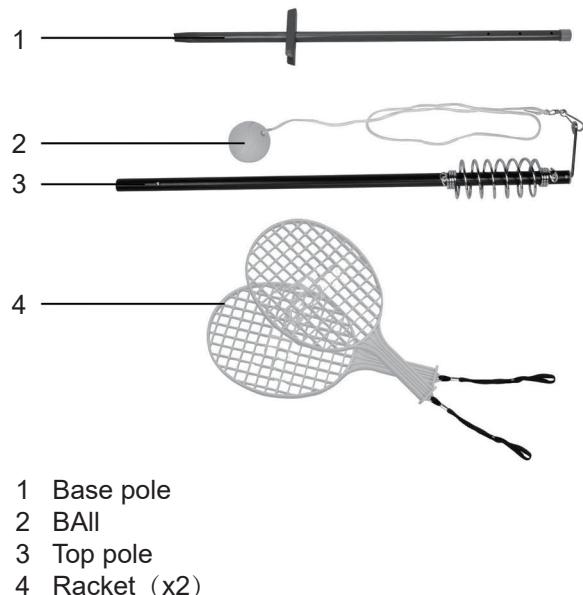


Assembly Instructions

1. Choose a flat playing area.
See Fig. 1

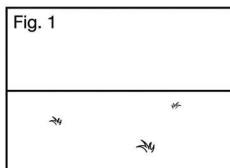


2. Secure the spiked end of the base pole into the ground by using foot pressure.
See Fig. 2

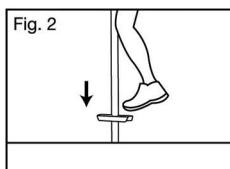


Assembly Instructions (Cont.)


3. Insert the top pole into the base pole.
See Fig. 3

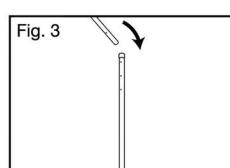

4. Adjust the height as necessary.
See Fig. 4

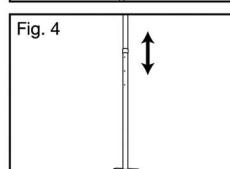


5. Attach the ball assembly to the top pole. You can either attach it to the top of the swivel attachment or the middle of the coil attachment.
See Fig. 5

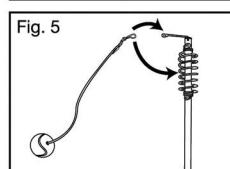

Équipement de spiroballe

Parts List

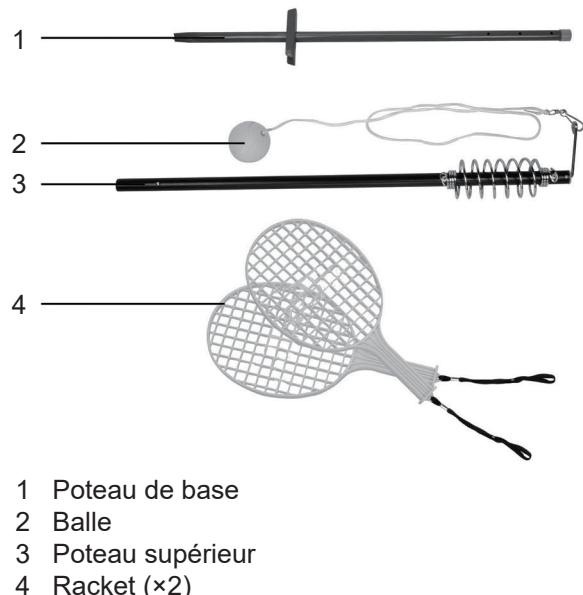


1 Poteau de base
2 Balle
3 Poteau supérieur
4 Racket (x2)




Instruction de montage

1. Choisissez un terrain de jeu plat.
Voir Fig.1

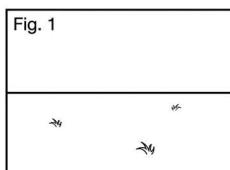


2. Fixez l'extrémité pointue du poteau de base dans le sol en utilisant la pression du pied.
Voir Fig.2

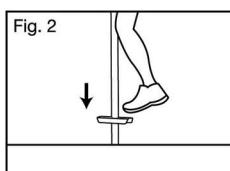


Instructions de montage (suite)


3. Insérez le poteau supérieur dans le poteau de base.
voir fig. 3

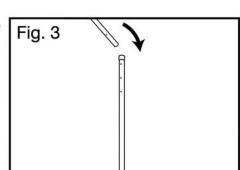

4. Ajustez la hauteur si nécessaire.
Voir Fig.4

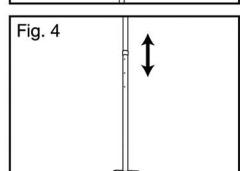

5. Fixez l'ensemble de la balle au poteau supérieur. Vous pouvez l'attacher soit au sommet de l'attache pivotante, soit au milieu de l'attache de la bobine.
Voir Fig.5

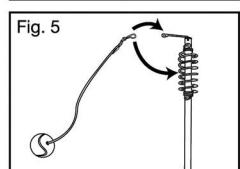

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it

Aosom