



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

USING INSTRUCTION

WARNING:

1. Observe all applicable traffic rules and regulations regarding the use of scooters in your country.
2. Please ride on a flat and clean surface. Never use near steps, sloped driveways, hills, roadways, alleys, swimming pool areas, road, on grass or wet surfaces or other bodies of water.
3. Only one person may use this scooter at any given time.
4. For your own safety, always wear suitable protective equipment. Never ride without helmet, hand and wrist protection, elbow protection, and knee protection.
5. Check the steering system is correctly adjusted and that all connection components are firmly secured and not broken. Check all connectors or fasteners for integrity and stability (e.g. the folding mechanism and the correct height of the handlebar).
6. Always wear suitable shoes (never ride without shoes or with sandals or shoes that do not allow for firm, secure stance).
7. Do not ride during darkness and/or under conditions of poor visibility.
8. This scooter is not suitable for performing jumps or stunts.

MAINTENANCE & CARE

- A. Keep all instructions and parts relating to this product for future reference.
- B. Regularly check for damage and that all screws are securely tightened.
- C. Check that the seat is securely fastened.
- D. Lubricate the chain as often as required.
- E. Clean your Scooter and wheels with a clean damp cloth.



- 1.Handlebar
- 2.Rapid tightening lever for handlebars
- 3.Steering column spring button
- 4.Brakes/ mudguard
- 5.Handle of folding mechanism
- 6.Folding mechanism
- 7.Handlebar stem
- 8.Rapid tightening lever for steering column
- 9.Steering column
- 10.Bell
- 11.Handlebar locking mechanism
- 12.Handlebar spring button
- 13.Plastic stopper

Scooter assembly

A- Take out the plastic stopper

Open the handlebar locking mechanism (11) and remove the plastic plug (13), So that the handlebar (1) can be inserted therein.

B- Unfold the steering column


Pull the handle (5) of the folding mechanism and open the folding mechanism (6). Then lift the steering column (9) until it reaches the vertical locking position (you should hear a "clicking" engagement sound).

C-Positioning handlebars

Take the two handles (1) out of the rapid tightening lever for handlebars(2), and Insert them into the left and right sides of the handlebar stem (7). For both handlebars, you should hear "click" sound, indicating that the handlebar (1) is in place. Check whether the two spring buttons (12) are valid and visible.

D-Adjusting the handlebar height

Open the rapid tightening lever for the steering column (8) and adjust the height of The handlebar stem (7) until you hear "click," indicating that it is in one of the three Index positions, and then firmly fasten the rapid tightening lever for the steering Column (8)

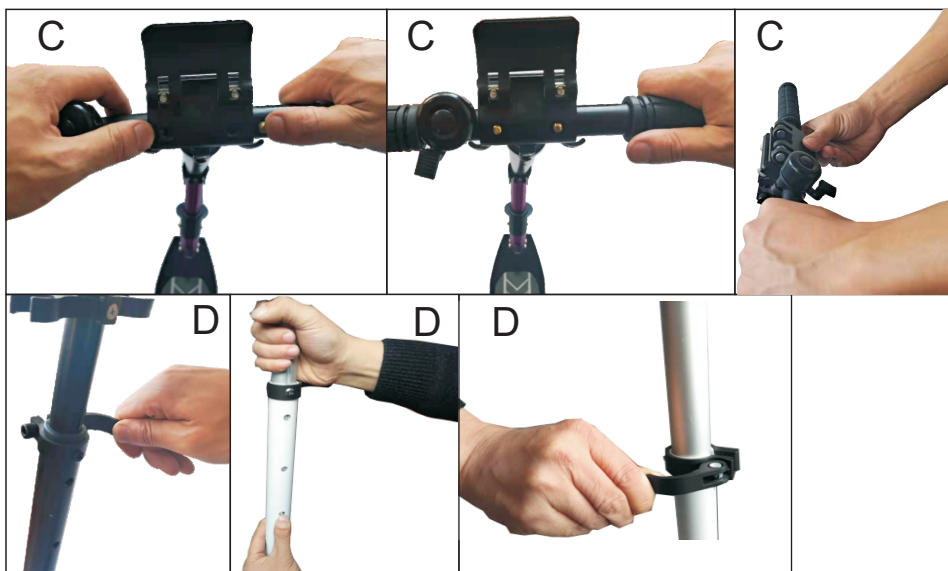

Folding the scooter

E-Folding down the handlebars

Open the rapid tightening lever for the steering column (8), press the steering column Spring buttons (3), lower the handlebar (7), and then fasten the rapid tightening lever For the steering column (8)

F - Packing away the handlebars

Open the handlebar locking mechanism (11), press the spring button (12) on each Handlebar, take out the handlebar from both sides of the handlebar stem (7), And put it into the rapid tightening lever for handlebars (2). Fasten the handlebar Locking mechanism (11).

G - Folding the steering column

Lift the handle (5) of the folding mechanism to unlock the folding mechanism (6). Then, lower the steering column height (9) until it reaches the locking position (you should hear a “click”).

