




## Kids Grand Piano Assembly Manual



READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

# ASSEMBLY INSTRUCTION

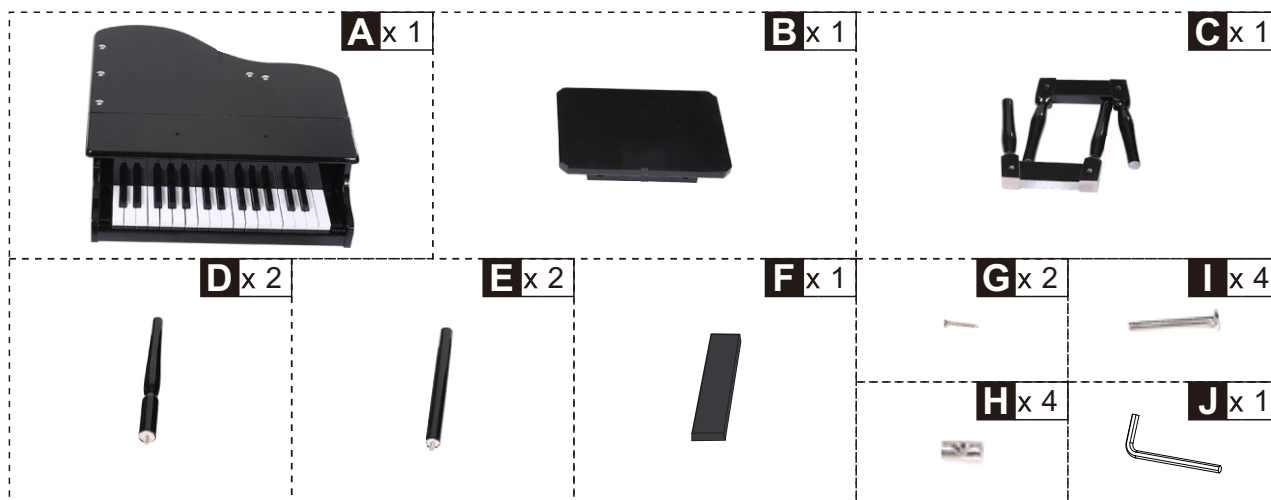

01



Step 1- Screw Part D clockwise into the two middle screw holes at the bottom of Part A keyboard.

02



Step 2- Screw Part E clockwise into the two back screw holes at the bottom of Part A keyboard.

03


G x 2




Step 3- Place Part F on the top of Part E by using Part G.

04

H x 4

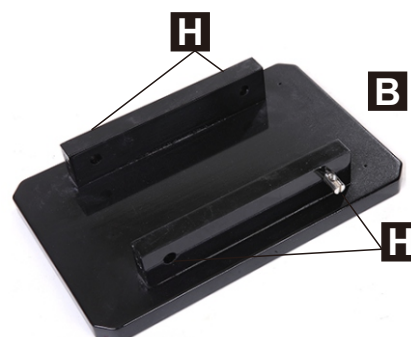

Step 4- Insert Part H into the back of Part B as shown.

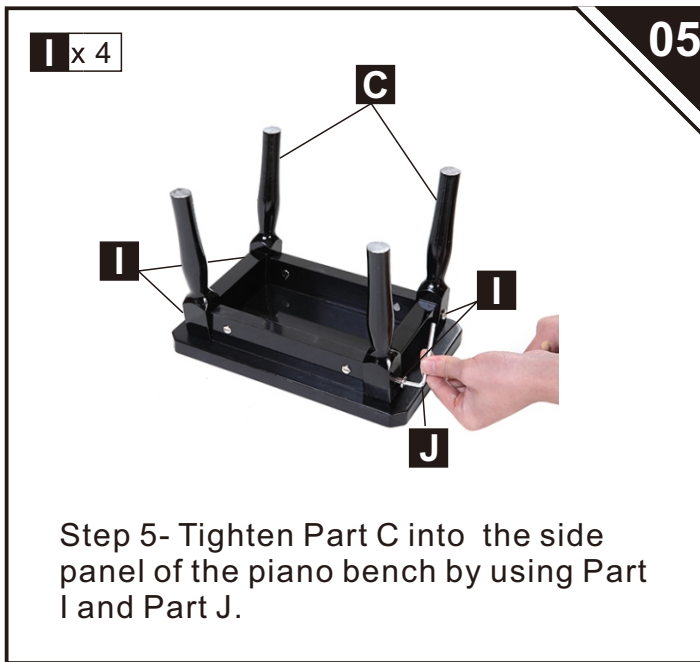

### NOTICE

- Do not stand on or use any part of this set as a step ladder. .
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges, don't let your child touch these edges, or it will hurt the hand.
- For children under the age of 10, be accompanied by an adult to open or close the piano, in case the hand will hurt.

### WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it