



INafb019_US

A20-167



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

ASSEMBLY INSTRUCTION

A x 1



Handy Bag

B x 2



Wind rope

C x 8



Stakes

D x 1



Internal Tent

E x 1



External Tent


How to unfolding:

01



Take out the Internal tent and lay it flat, pull the handles out

02

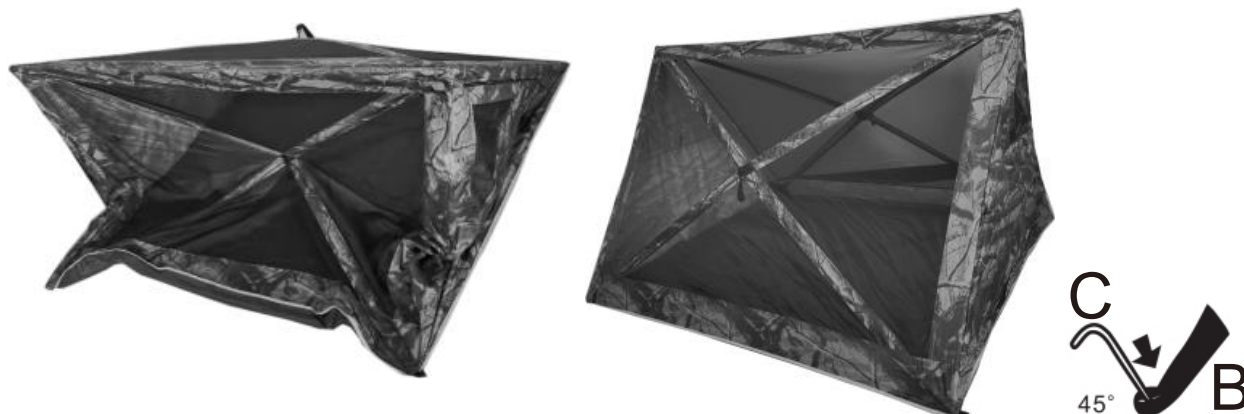

Pull the other handle out and ground stakes make it stable



File the external tent and fix the wide ropes and stakes

How to fold up:



Remove the external tent



Push in the handles and roll it



Roll it and store in handy bag

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it