



INag033V02_US

C30-009



ASSEMBLY INSTRUCTION

IMPORTANT:

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY. NOTE THE SAFETY INSTRUCTIONS & WARNINGS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED.

PARAMETER:


CAPACITY : 300 LBS
MIN HEIGHT : 350 MM
MAX HEIGHT : 870 MM

CAUTION

1. The maximum load is 135kgs. **DO NOT** exceed this rated capacity.
2. Use this lift for lifting purpose only. **DO NOT** use it for any other purpose it is not designed to perform.
3. Keep children and unauthorized persons away from the work area.
4. Only use this lift on a surface that is stable, level, dry and not slippery, and capable of sustaining the load. Keep the surface clean, tidy and free from unrelated materials and ensure that there is adequate lighting.
5. Before lifting ensure the motorcycle is adequately secured to the lifting platform with threaded knobs, big washers, J-hooks and U-bolts.
6. When the platform has been raised to the working height, ensure the locking bar is engaged to prevent accidental lowering.
7. Always keep your hands and feet away from moving parts.
8. When work is done, check under lift and motorcycle to ensure that there are no obstructions and that it is safe to lower the unit. Remove the locking bar and then SLOWLY turn the release valve to GENTLY lower the lift.
9. **DO NOT** allow untrained persons to operate the lift.
10. **DO NOT** make any modifications to this motorcycle lift.
11. **DO NOT** expose the lift to rain or snow.
12. Ensure that you read, understand and apply the safety instructions and warnings before use. Failure to heed these instructions may result in property damage and/or personal injury.


MAINTENANCE

1. When not in use, the lift must be stored in the lowest position in a dry location to minimize ram and piston corrosion.
2. Keep the lift clean and wipe off any oil or grease. Lubricate all moving parts.
3. Periodically check the ram and piston for signs of corrosion. Clean exposed areas with a clean oiled cloth.
4. Before each use check all parts. If any part of the lift is damaged or suspect, remove the lift from service and take necessary action to repair.
5. When lift efficiency drops, open the release valve and pump the lift foot pedal rapidly 15 to 20 times to purge away air from the hydraulic system.

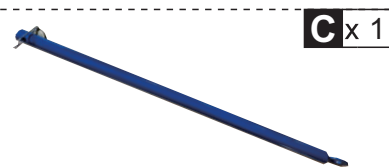


A x 1 E x 2

Install two U-bolt on the both side of the top platform.

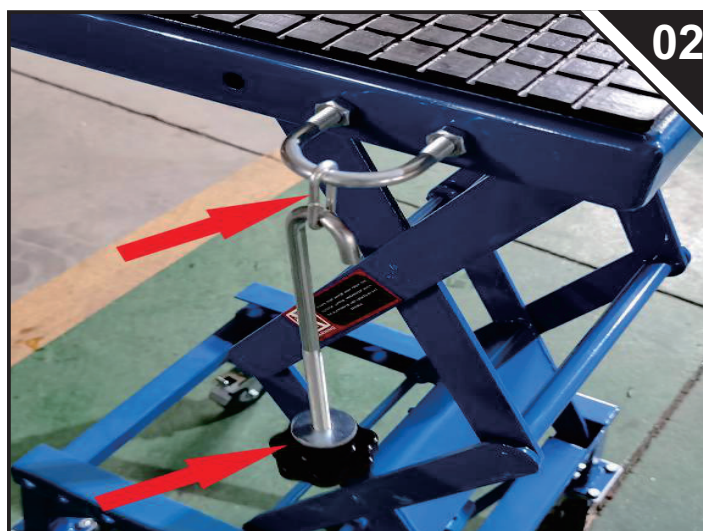

D x 2

Install the J-hook under the U-bolt.

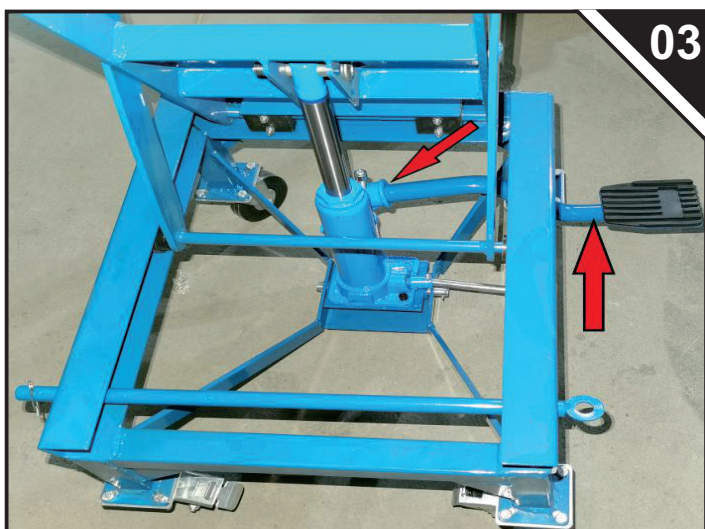

B x 1

Install the pedal.



C x 1

Install the safety pin when lifting

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it