

INag058_UK

C50-006



DELUXE HEAVY DUTY WHEEL CLAMP

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

ASSEMBLY INSTRUCTION

Introduction

Thank you, for purchasing the high quality heavy duty Wheel Clamp. This high visibility deterrent will ensure that your Car, Van, or Caravan stays where it should be, with you. It is made of high quality steel and is supplied with 2 keys.

Specification

Solid steel construction, with highly visible yellow lacquer finish.

Maximum Tread Width (approx) 205mm/8 inches

Maximum tyre Diameter 600mm/24 inches approx.

Please check the tyre Diameter and tread width prior to fitting. This clamp may not be suitable for very large cars or vehicles.

This clamp maybe not suitable for motorcycle, very large cars or vehicles.

Contents

Wheel Clamp Body Yellow wheel disc Silver Hook Set of 2 keys

Instruction for use

To avoid risk of damage ,remove wheel trims from the vehicle before fitting the Wheel clamp.

Take care when fitting to vehicles with alloy wheels so as to avoid damage to the delicate surface.

The clamp comes in three sections. To fit follow these simples instructions.

- Insert the keys into the lock and turn till the lock pops up. Remove the key.
- 2. Place the main body section on the ground with the plate at the front.
- 3. Slide the clamps legs behind the wheel.
- 4. Bring the unit forwards so that the hooks pass onto the tyre.



- 5. Take the yellow disc on place behind the clamp body with the two square sections facing either side of the lock.
- Take the silver hook with the holes facing out and pass this through the first square section, then through the lock mechanism and finally through the last square section.

7. When the silver hook has passed over the tyre tread and is lined up in the lock mechanism press the lock in till it clicks




- 8. Now push the black rubber cover over the lock to prevent dirt entering the lock.
- 9. To remove lift rubber cover to key slot, insert key and turn till the lock pops out.
- 10. Pull the silver hook through the square sections and remove.
- 11. Remove yellow disc and take off the clamp from the wheel.
- 12. Store untill needed again.

CAUTION

DO NOT attempt to drive when the clamp is fitted.

The manufacturer can not accept any responsibility for damage of any kind caused by the improper fitting or use of this product. If in doubt seek the advice of a professional mechanic.

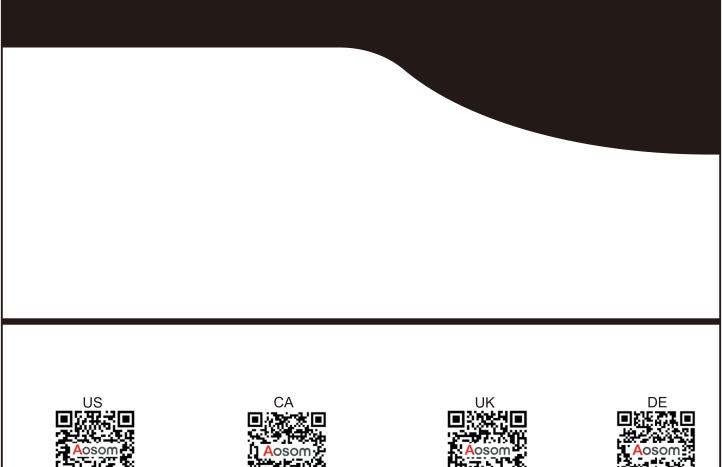



001-877-644-9366

customerservice@aosom.com

0033-1-84166106 contact@aosom.fr



001-855-537-6088 customerservice@aosom.ca



0044-800-240-4004 enquiries@mhstar.co.uk



0049-(0)40-88307530 service@aosom.de



0034-931294512 atencioncliente@aosom.es



0039-0249471447 clienti@aosom.it