

User Manual

120 Pro Lithium-Ion E-Scooter



- ⚠ When you get the electric assist scooter for the first time, please fully charge the battery before first use.
- ⚠ Please charge immediately if the scooter emits a low battery warning tone to avoid damage to the battery.
- ⚠ Ensure battery is never stored completely flat. If scooter is stored for long periods of time, please charge at least once per month.
- ⚠ Gently push yourself to start moving and gradually push the accelerator.(Motor will only activate when the scooter is travelling beyond 3km/h) with the first ride you should carefully operate throttle. When on the move put your second leg on the deck and enjoy the ride.
- ⚠ To stop riding,release the throttle and use the foot-brake in order to slow down towards a complete stop.Then step off the scooter.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

Contents

1. Your Scooter & Accessories	Page. 02
2. Functions	Page. 03
3. Assembling	Page. 04
4. Charging	Page. 04
5. How to use	Page. 05
6. Safety Recommendations	Page. 06
7. Daily Maintenance and Storage	Page. 07

Note: Please read this manual carefully before you ride the scooter and be aware of local legislation on the use of electric scooters in your area.

NOTE : The images in these operating instructions are indicative, therefore may not exactly represent the actual look of the item. Specifications are subject to change without notice.

This manual contains important information on how to assemble and ride your scooter. If the scooter is not used regularly, and in case it should remain inactive for a long time, it is recommended to charge the battery, disconnect it and recharge it ONCE A MONTH. If these instructions are followed, the battery will have a long life expectancy. Otherwise, the battery will deteriorate irreparably.

 
1. Your Scooter & Accessories



Accessories



Allen Key x1

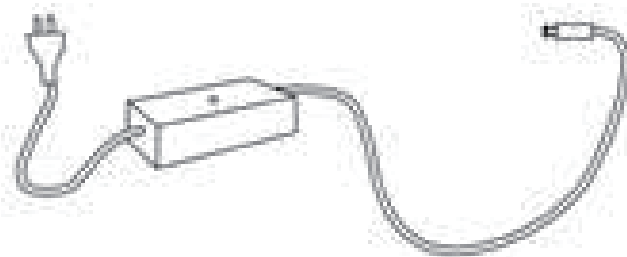

Adaptateur de charge x1


2.Functions



Model Specification

Battery Capacity	21.6V/2.0AH Lithium
Charger Time	2-3hours
Motor Power	120W
Range after full charge	5-6KM
Charger Details	Input :AC 100-240V50/60Hz 0.5A. Output:DC 24V/2A
Wheel size	5" PU wheel
Max load capacity	50KGS
Product weight	5.2KGS
Product size	77*44*83/87CM
Max speed	8KM/H
Age	6+
Suit for	120cm-170cm

 3.Assembling your scooter

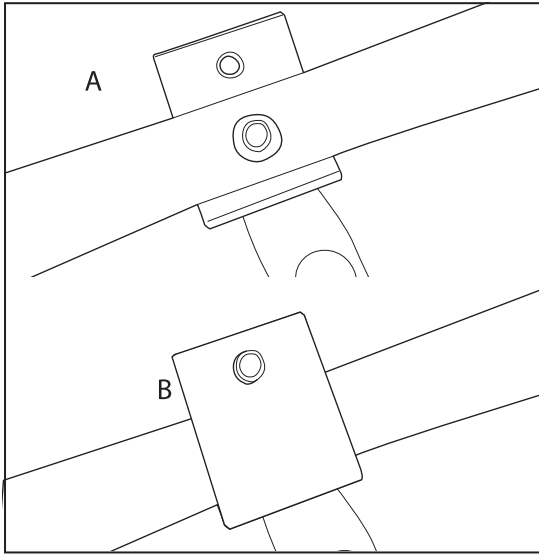

1.A. Use the allen key to lock the handlebar to the stem. B.And then lock the clamp.



2.Ensure headset clamp is positioned at the very bottom of stem and tighten.



3.Ensure wheel nuts are tight.

 
ALL FIXTURES SHOULD BE CHECKED ON A REGULAR BASIS TO ENSURE THEY ARE SUFFICIENTLY TIGHTENED.

4.Charging the scooter




- 1.Only use the supplied and dedicated charger.
- 2.Open the charging port rubber cover on the footplate and insert the charger output connector into the charging hole.
- 3.Plug the charger into the power socket supply.
- 4.The charger indicator is red, indicating that it is charging. When the charger indicator shows green, the battery is fully charged.
5. When the battery is fully charged unplug the charger from the mains power supply and from the scooter, then close the charging port rubber cover. Do not charge overnight
- 6.The electric kids scooter is ready to use.

5.How to use

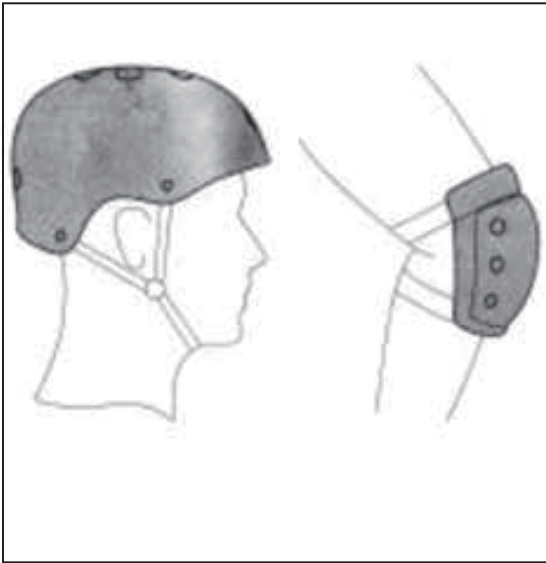

 Warning: protective equipment should be worn. Mv recommend the use of protective pad and helmets when using this product

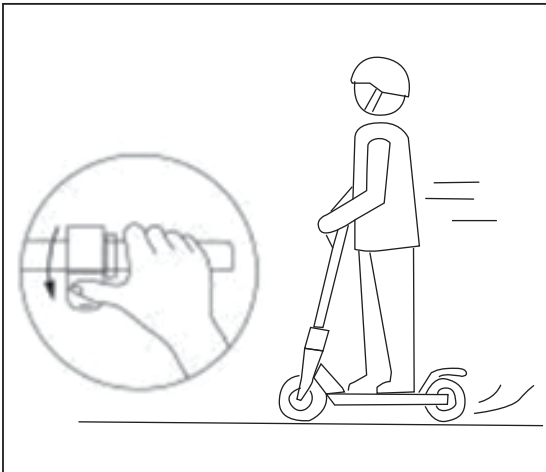

2. Gently push yourself to start moving and gradually push the accelerator. (Motor will only activate when the scooter is travelling beyond 3km/h) with the first ride you should carefully operate throttle. When on the move put your second leg on the deck and enjoy the ride. Using the thumb throttle, gently moderate speed up to maximum 8km/h.



1. Press the POWER key to turn on the scooter and check the battery power (LED's will illuminate)



3. To stop riding, release the throttle and use the foot-brake in order to slow down towards a complete stop. Then step off the scooter

4. Turn off the scooter when finished using the product.

6. Safety Instructions



Avoid safety Hazards

1. This product is an electric power-assisted scooter for children. It is restricted to one child. It should not be used by adults or two people at the same time. Children must be accompanied by parents or adults when using electric-assisted scooters. Maximum rider weight 50kg.
2. When riding this product, please wear a safety helmet and other protective equipment.
3. Do not ride this product on public highways. Check legislation in your area for updates on e-scooter use..
4. Please practice first in the open, master the operation before driving.
5. Do not make dangerous moves or ride one-handed while the scooter is running. Keep your feet on the pedal.
6. Avoid curbs, pot holes and gaps over 3cm. When encountering rough or uneven conditions, please slow down or dismount and push the scooter.
7. Users must adjust the height of the handlebarsto the proper position to ensure safe driving.
8. Do not ride this product on slippery surfaces such as oil or ice.
9. Do not use this product below -5 ° C.
10. Do not use on slopes over 5 degrees. For use over 5 degrees uphill, you should use one leg to scoot along.
11. Do not immerse the product in water.
12. In the bad weather such as rain, snow and wind, please avoid riding as much as possible to avoid unnecessary damage caused by water ingress.
13. Do not ride this product when it is dark.
14. This product must be used with caution since skill is required to avoid fall or collisions causing injury to the user or third parties”

Maintenance of Your Scooter

- Wheel

Tyres fitted are wear-resistant and non-inflatable. When the tyres appear worn or damaged, they need to be replaced immediately. Please contact the dealer to replace the original tyres. Please regularly check if the scooter has loose screws and tighten as required.

- Battery

The lithium battery charging cycle is at least 500 times, and the normal use can generally reach more than 600 times. As the battery ages teh scooter range may decrease.

- Placement and daily care

Please do not leave the scooter for a long time in the hot sun or other heavily wet places; please keep the scooter clean.

7. Care & Storage

Clean and store Scooter

- Ensure your scooter is turned OFF.
- Clean your scooter using a damp cloth and non-abrasive cleaners only.
- If you scratch any plastic parts of your scooter, you can gently rub with sandpaper to help smooth the surface.
- **Do not** use a pressure washer on any part of the scooter.
- Store your scooter in a secure, dry and sheltered area and out of direct sunlight.
- **Do not** leave your scooter outside, in the rain or in damp areas.

WARNING : Do not use alcohol, petrol, kerosene or other corrosive solutions, volatile chemical solvents to clean the scooter.

Otherwise, it will cause serious damage to the scooter body and can disrupt a structure of internal elements.

Ensure power socket is covered at all times to avoid water/moisture/dirt penetrating the socket.

Maintenance of Your Scooter's Battery

Lithium battery

- When you get the electric assist scooter for the first time, please fully charge the battery before first use.
- Please charge immediately if the scooter emits a low battery warning tone to avoid damage to the battery.
- Ensure battery is never stored completely flat. If scooter is stored for long periods of time, please charge at least once per month.

Note: The battery must not be submerged in water, or sustain impact damage. Faults through misuse will not be covered by warranty.

Charger

- The dedicated charger provided by the company has a charging protection function, and when the battery is 100% fully charged, it will automatically stop charging. Damage caused by other abnormal factors such as water ingress, collision, etc., is not covered by the warranty.
- Open the charging rubber cover and insert the charger output connector into the charging hole.
- Plug the charger input power into the power socket (AC100V-240V)
- The charger indicator is red, indicating that it is charging; when the charger indicator turns green, the battery is fully charged.
- When charging the battery, please place it in a dry and ventilated environment.
- Do not charge overnight.



Waste electrical products
and batteries should not be
disposed of with household waste.



This mark denotes compliance with the standards
laid down by the E.C. (European Community)

It is in your best interest to keep a note of our
name and address for future reference. If you
have any complaints or find this product to be
faulty, in order to avoid any delay, please contact
the distributor at the address shown.



