 




## INSTRUCTION MANUAL

### Outdoor Heater (This heater for outdoor use only)

Model: YP-2000L(842-124)

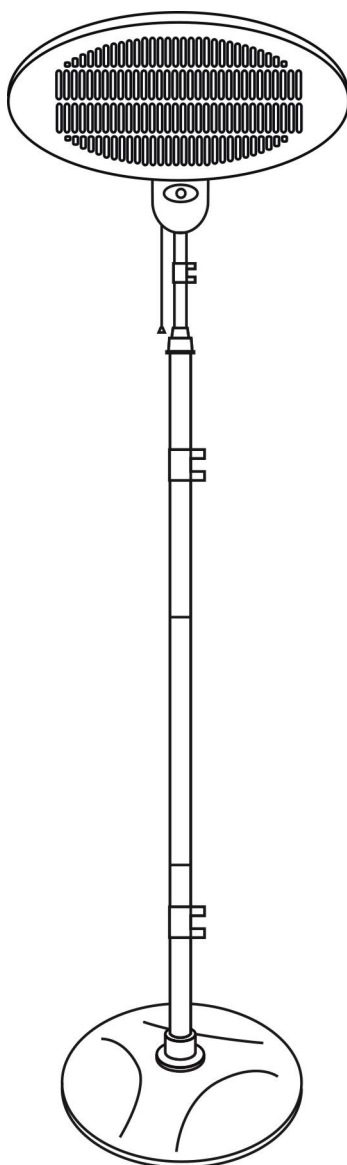

Thank you for purchasing your new heater.

These operating instructions will help you use it properly and safely.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.



## Safety Warnings

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read this Instruction Manual carefully to maximise this appliance's performance and keep for future reference.

- Always ensure that your power supply voltage matches this appliance's rating label.

- Never leave the appliance unattended while in operation. Always unplug the appliance when not in use.

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

- Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given when children and vulnerable people are present.

- Always use the handle when moving the heater (if available) or hold on the sides if not available (make sure the unit is turned off). Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 1m from the heater.

- For safe use of the product, the product installation position should have a minimum height of 1.8 m from the ground, and a minimum distance of 0.5 m from ceiling, roof and both sides walls.

- The heater must not face with the heating element pointing upwards towards a ceiling. The heater element must be facing the area it is to heat.

- Warning: In order to avoid overheating do not cover the heater.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use the product if there are any visible signs of damage to the appliance.

- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. The unit does not contain any user serviceable parts. Only a qualified electrician should perform servicing or repairs. Attempting to repair the unit yourself will void your warranty.

- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

 
- Do not handle the element with bare hands. If it is inadvertently touched, remove finger marks with a soft cloth and methylated spirits or alcohol, otherwise the marks will burn into the element causing premature heater failure.

- Do not replace or attempt to replace the element in this product.
- This product is suitable for outdoor use only. Do not operate the appliance in direct sunlight, near heat sources, humid environments or in places near water or other liquids such as bathrooms, shower or swimming pool.
- This product must not be left outdoors exposed to the elements for long periods of time.
- Do not operate with wet hands or spill water or other liquids on to the appliance the mains cable or plug.
- Do not run the power cable under carpeting. Do not cover the power cable with rugs, runner, or similar coverings. Arrange the power cable away from foot traffic and where it will not be tripped over.
- Do not wind the power cable around the unit.
- Do not insert or allow foreign objects to enter any ventilation or opening on the heater, as this may result in electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block the air vents.
- Do not use the appliance in areas where petrol, paints or other flammable substances are used or stored.
- Always position the appliance with the mains plug in an accessible position and avoid the use of an extension cables as they may overheat and create a potential fire risk.
- Always ensure the heater is plugged into a suitable socket, one that is tested for outdoor use.
- To disconnect heater, turn controls to OFF, then remove plug from socket. Do not unplug by pulling on the power cable.
- Always unplug the unit and ensure the unit is completely cold before moving, cleaning or storing.
- This heater is intended for domestic use only and should not be used commercially for contract purposes. Any alternative use, not recommended by the manufacturer, may result in fire, electric shock, or injury to persons.
- The use of attachments on the heater is not recommended.
- Warning: This heater does not equipped with a device to control the room temperature. Do not use this heater in small rooms when occupied by persons not capable of leaving a room on their own, unless constant supervision is provided.
- Check exterior walls for areas of damage before installing the heater.
- Check exterior walls for communication and electrical cables and pipelines.
- Should any service lines be present in the immediate vicinity do not install your heater, find an alternative location to install this product.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- The heater must not be located immediately below a socket-outlet.
- Children of less than 3 years should be kept away unless continuously

supervised.

- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

About how to assembly the appliance, please refer to the paragraph  
**“Assembly Instrucitons”**

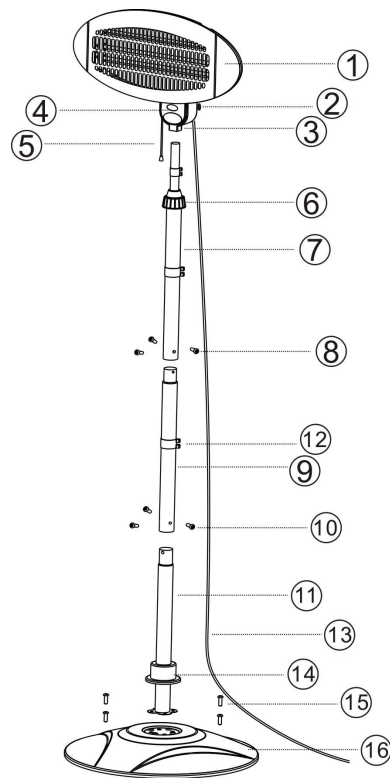

## Parts Description

- |    |                           |
|----|---------------------------|
| 1  | Heating Element Assembly  |
| 2  | Knob                      |
| 3  | Body                      |
| 4  | Position Indication Plate |
| 5  | Pull Switch               |
| 6  | Tube Cover                |
| 7  | Upper Post Assembly       |
| 8  | 3 -M5 X 6 Screw           |
| 9  | Middle Post               |
| 10 | 3-M5 X 6 Screw            |
| 11 | Lower Post Assembly       |
| 12 | Clamp                     |

- 13 Power Cord
- 14 Base Cover
- 15 4-M6 X 30 Screw
- 16 Base Assembly

Prior to assembly: read the instructions carefully. Check all parts against the parts list.

This product **MUST NOT** be used if the power cable is damaged. If there is damage this product **MUST** be disposed of.

For ease of assembly only loosely tighten bolts and then tighten fully when assembly is complete.

 
**WARNING! - DO NOT** over tighten bolts; only tighten with moderate pressure to avoid damaging the bolts or components of the heater.

## Assembly instructions


**Before installing your appliance, you must disconnect the electrical supply at the circuit breaker.**

**IMPORTANT! – Remove any packaging before use, but retain safety instructions and store them with this product.**


1. Fix the bottom tube to the base by 4pcs M6\*30mm screws.

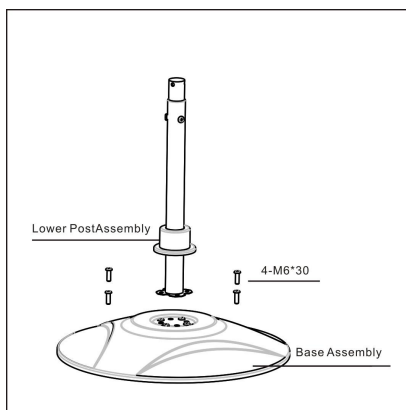

 
2. Screw out 3pcs M5\*6mm screw in the bottom tube and put the cord support to the middle tube before fix the middle tube.

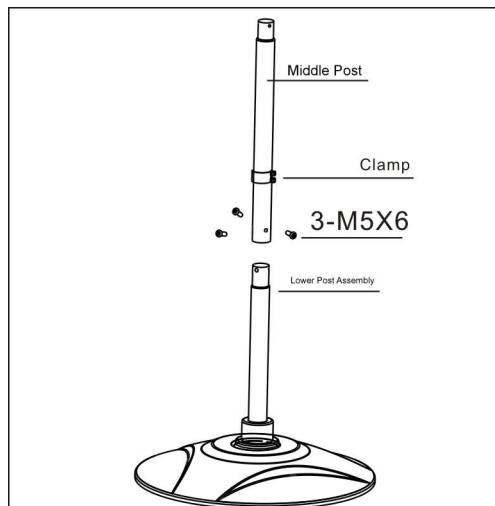

 
3.Screw out 3pcs M5\*6mm screws in the middle tube and put the cord support to the top tube before fix the top tube.

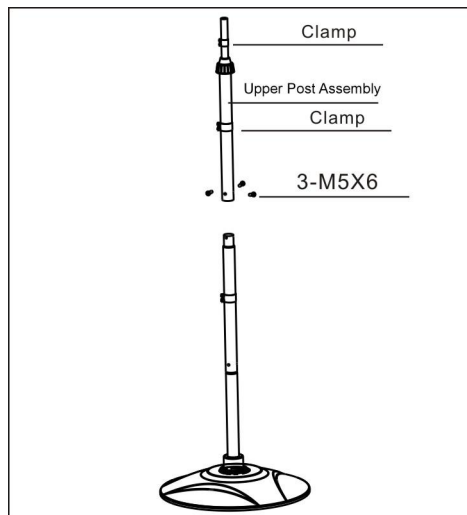

 4.Put the small cord support to the top tube and fix the heater head to the top tube by the plastic screw in the heater head

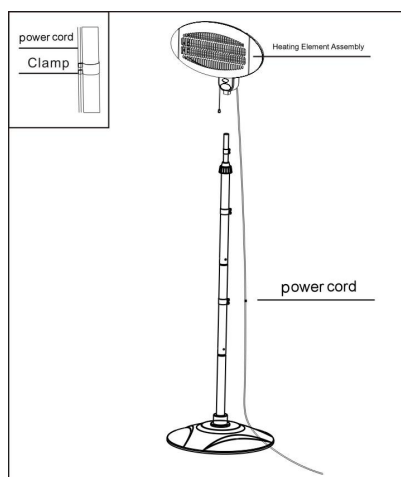


 5.The heater head could be adjusted from 0° to 45°

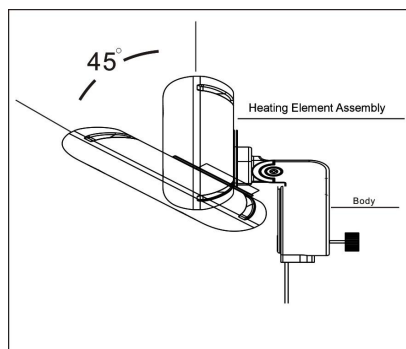

The Heater is now ready to use but please ensure you have read these instructions thoroughly prior to use.

## Operation instruction

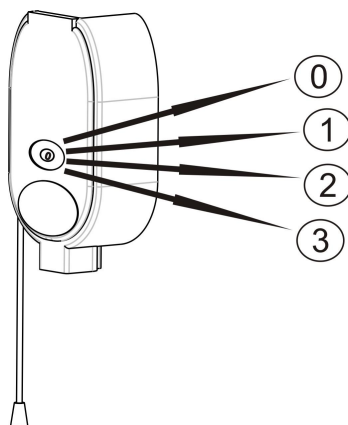 

Plug the appliance to a 220-240V~ 50/60Hz socket (This plug shall be connected to the earth)

Pls operate with pull line and see the window show "0" "1" "2" "3".

"0": ON/OFF

"1": 650W

"2": 1300W

"3": 2000W

Always unplug the heater when it's not working

## MAINTENANCE:

- Before performing any maintenance, unplug the unit and let it cool completely.
- To keep the heater clean, the outer casing may be cleaned with a soft, damp

cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.

-Do not use alcohol, petrol, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.

-Do not immerse the heater in water to clean.

-Wait until the unit is completely dry before use.

## STORAGE:

-Ensure the unit is completely cold before storing in a cool, dry location.

-To prevent dust and dirt build-up, use the original packaging to repack the unit.

-Choking hazard: Store out of the reach of children and pets. Contains small parts.

## TROUBLE SHOOTING:



If the heater will not operate, please check the following before seeking help:

-Check the power cable is correctly plugged into the electrical socket.

-Check the socket switch is in the ON position.

-Check if electricity to the main fuse is working.

## Specifications

Model: YP-2000L

Voltage	AC220-240V
Frequency	50/60Hz
Electric Power	2000W

The symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.

There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.