




Assembly Instruction

842-139 EN C000000

Product Name: 30 inch Copper Fire Bowl

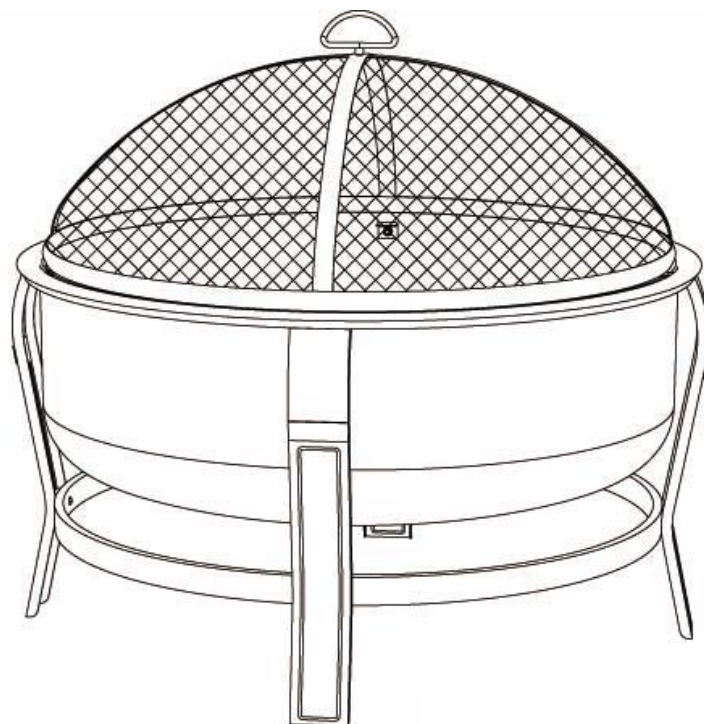

Safety Information:

PLEASE READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE ATTEMPTING TO ASSEMBLE, OPERATE OR INSTALL THE PRODUCT.

WARNINGS:


- ☒ This fire bowl is intended for outdoor use only. Do not use on wooden decks.
- ☒ This fire bowl is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the fire bowl.
- ☒ Not for use by children. Keep children and pets away from the fire bowl.
- ☒ The fire bowl is hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- ☒ Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- ☒ Do not use near flammable or combustible objects or materials.
- ☒ When the fire bowl is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- ☒ Check local fire regulations and municipal by-laws for safe use.
- ☒ Some parts may contain sharp edges—especially as noted in the manual. Wear protective gloves if necessary.

FIRE PIT PARTS LIST


No.	PARTS	Qty
A	Handle	1
B	Mesh cover	1
C	Wood grate	1
D	Cover support	4
E	Fire bowl	1
F	Legs	4
G	Upper ring	1
H	Lower ring	1
I	Poker	1

HARDWARE LIST


No.	Hardware	Qty
AA	M6 x14 Bolt	4
BB	M6 x10 Bolt	8
CC	M6 x10 Bolt	4
DD	M6 Nut	5
EE	Allen Key	1

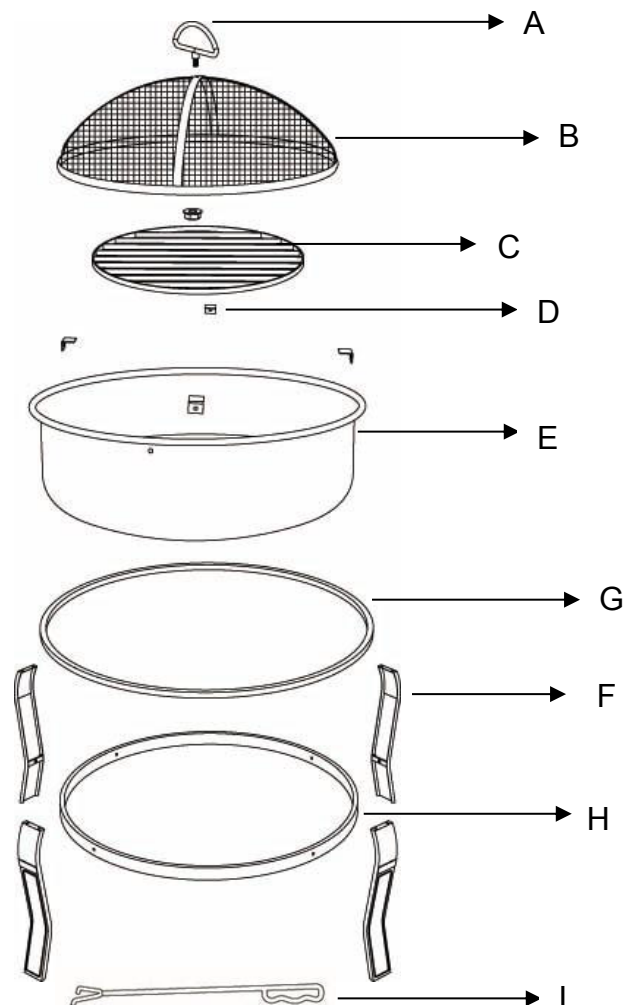

Pre-Assembly:

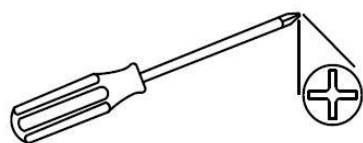

Phillips
screwdriver

 


M6 Wrench

TOOLS REQUIRED (Not included)


Step By Step Assembly Instructions:

Step1: Insert handle (A) into hole in Mesh cover (B) and tighten it with M6 Nut (DD) underside to secure.

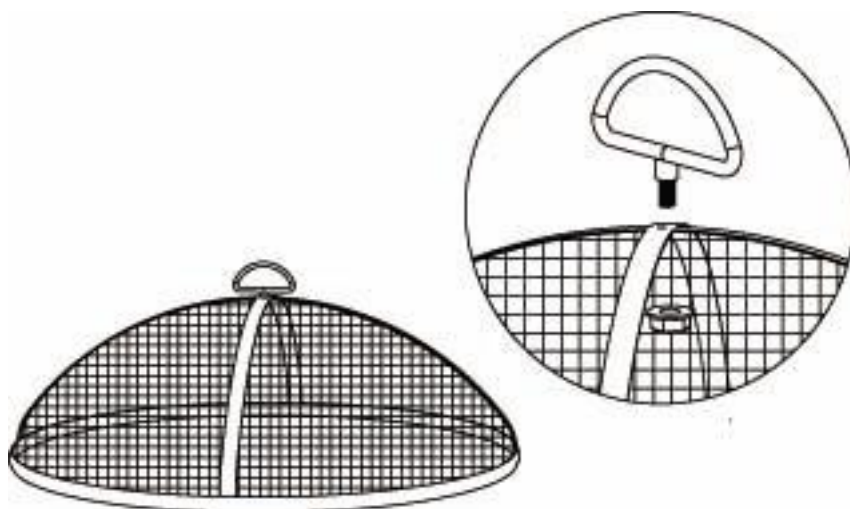


DDx1

Step 2: Attach the legs (F) to the Upper ring (G) by using M6 x 10 mm bolts (BB) with the help of Allen Key (EE), then tighten the bolts.

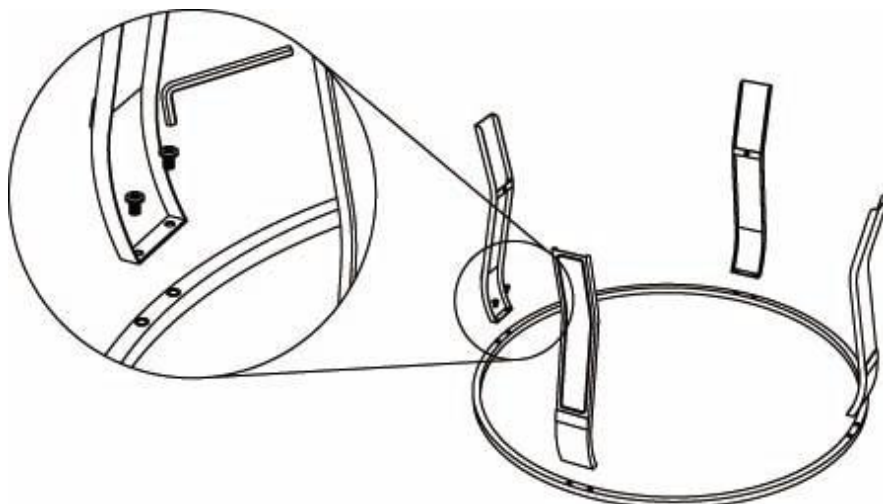


BBx8

Step 3: Attach the legs (F) to the Lower ring (H) by using M6 x 14 mm bolts (AA), then tighten the bolts.

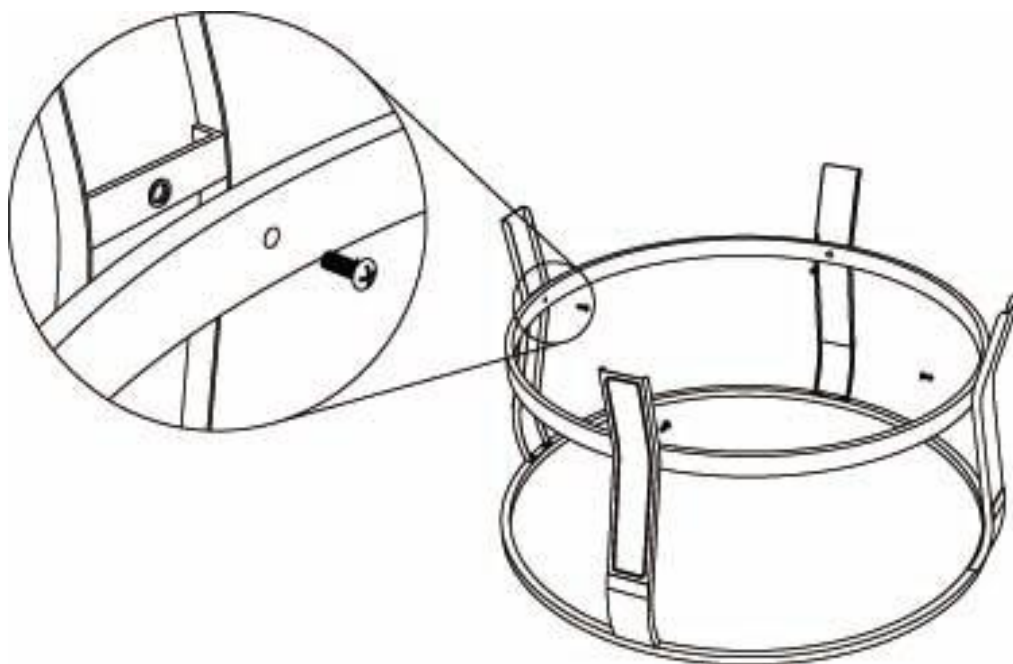


AAx4

Step 4: Attach the Cover support(D) to the Fire bowl (E) by using M6 x 10 mm Stainless steel bolts (CC) and M6 Nut (DD), then tighten the bolts.

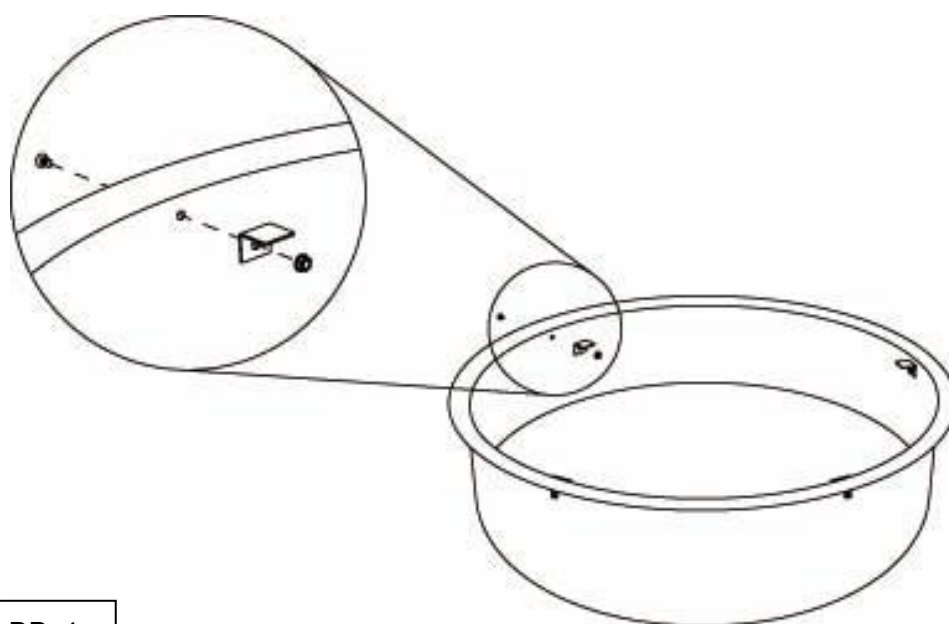

CCx4 DDx4

Step 5: Put the Fire bowl(E), Wood grate(C), Mesh cover(B). Place the poker (I) near the fire pit for use anytime.

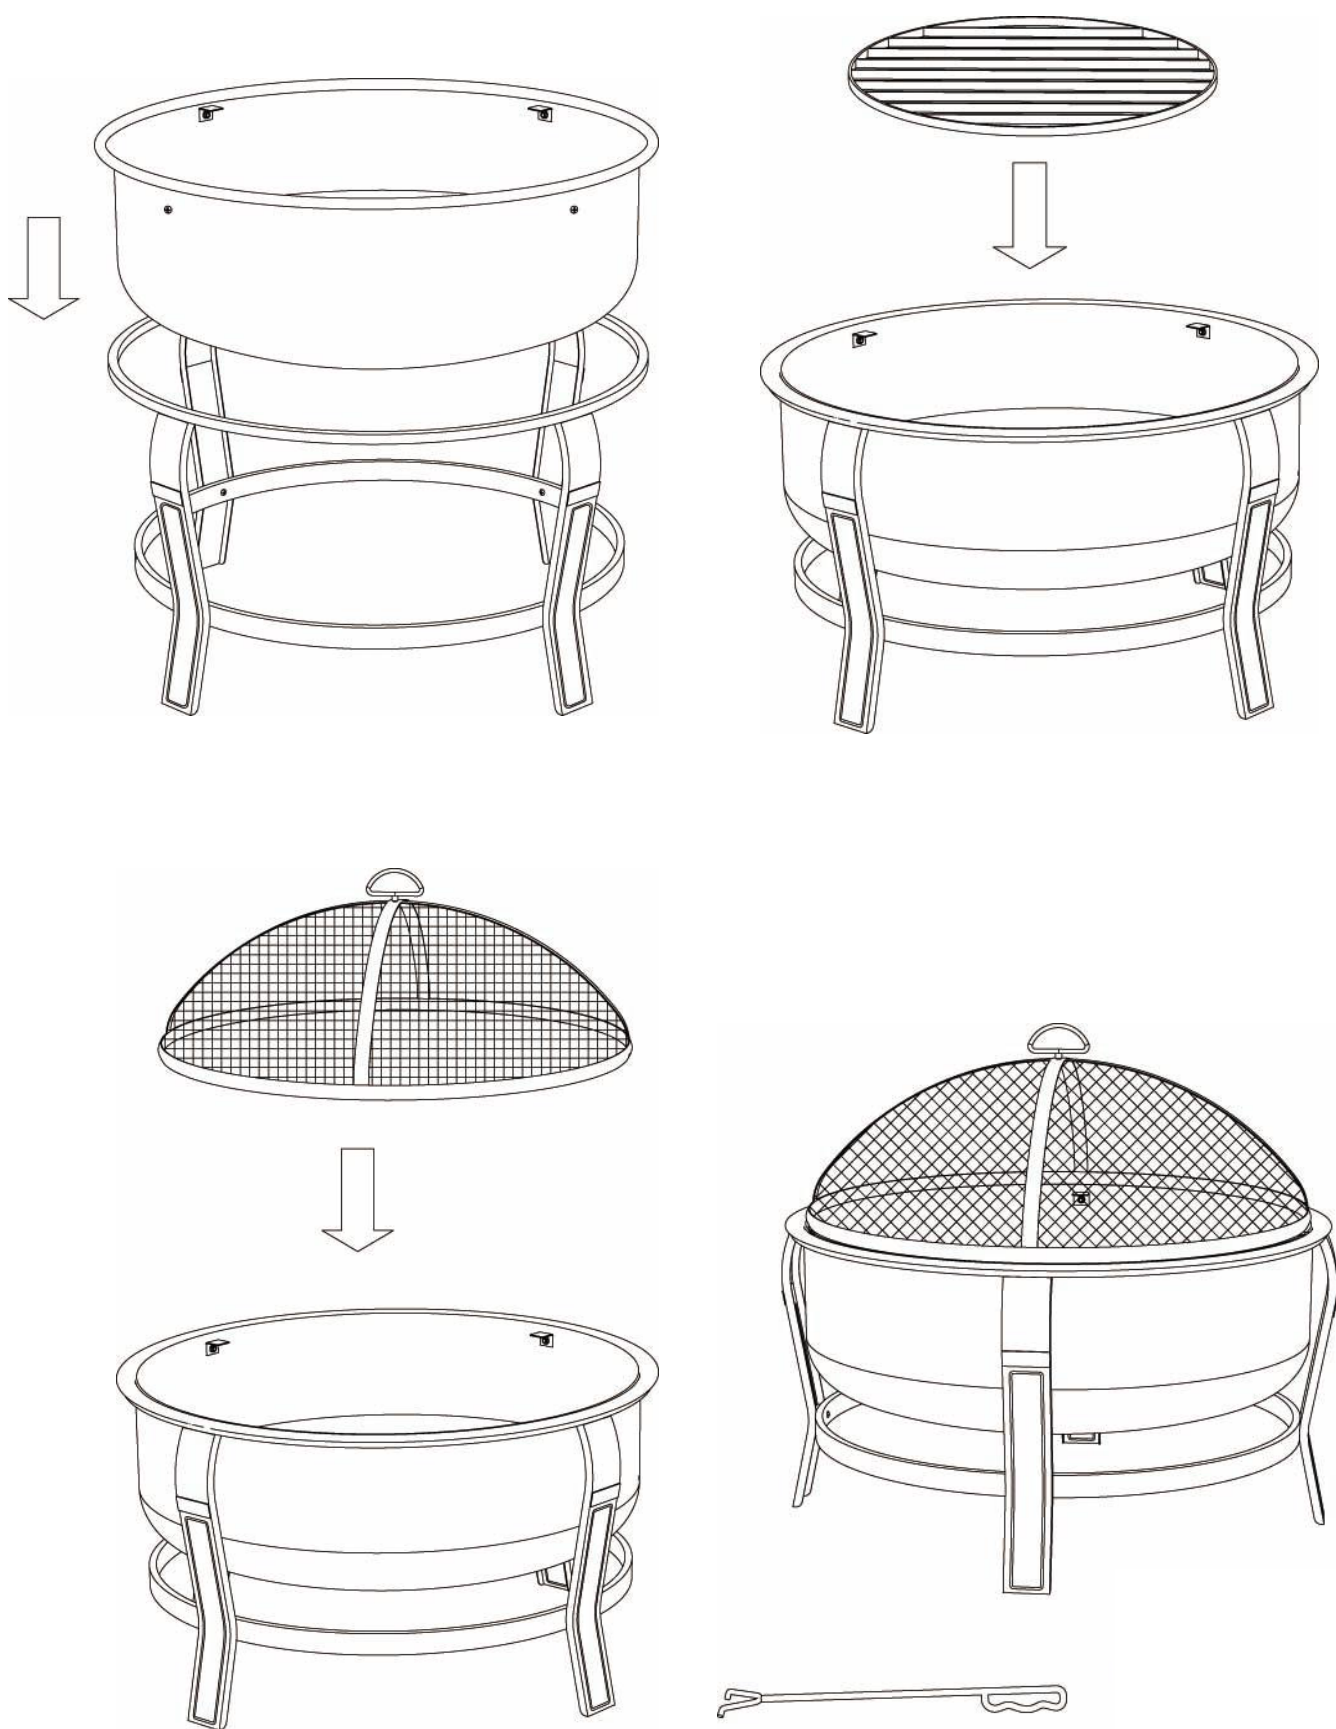

Operating Instruction:



WARNING: Before using this outdoor Fire pit , make sure you have read, understand and are following all information provided in the important Safeguards presented on page 2. Failure to Follow those instructions can cause death, serious injury or property damage.

Lighting Instructions:



CAUTION: Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.

Tending the fire:

You may need to shift and/or add logs for an ideal experience.



CAUTION: Do NOT place hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using heat resistant gloves and long handled fire pit tools, carefully remove the spark guard.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top of coals. Be careful not to shift ashes
4. Using heat resistant gloves and long handled fire pit tool. Carefully replace the spark guard.

Extinguishing:

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to the outdoor fire pit.

Maintenance:

- ☒ To extend the life of your fire pit, clean it after each use.
- ☒ To Protect fire pit finish, use a soft cloth in lieu of bare hands while handling.
- ☒ Clean the fire bowl after each use once ashes have cooled.

Care and Cleaning:

- ☒ Do not attempt to clean the fire pit until the fire is completely out and cooled completely.
- ☒ Use a soft cloth to wipe the fire pit and poker.
- ☒ Do not attempt to clean while hot.

Storage:

- ☒ Do not attempt to move the fire pit while it is hot or in use.
- ☒ Store assembled in a cool, dry location away from children and pets.
- ☒ Keep the fire pit covered when cooled and not in use.



WARNING: Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



001-877-644-9366
customerservice@aosom.com