


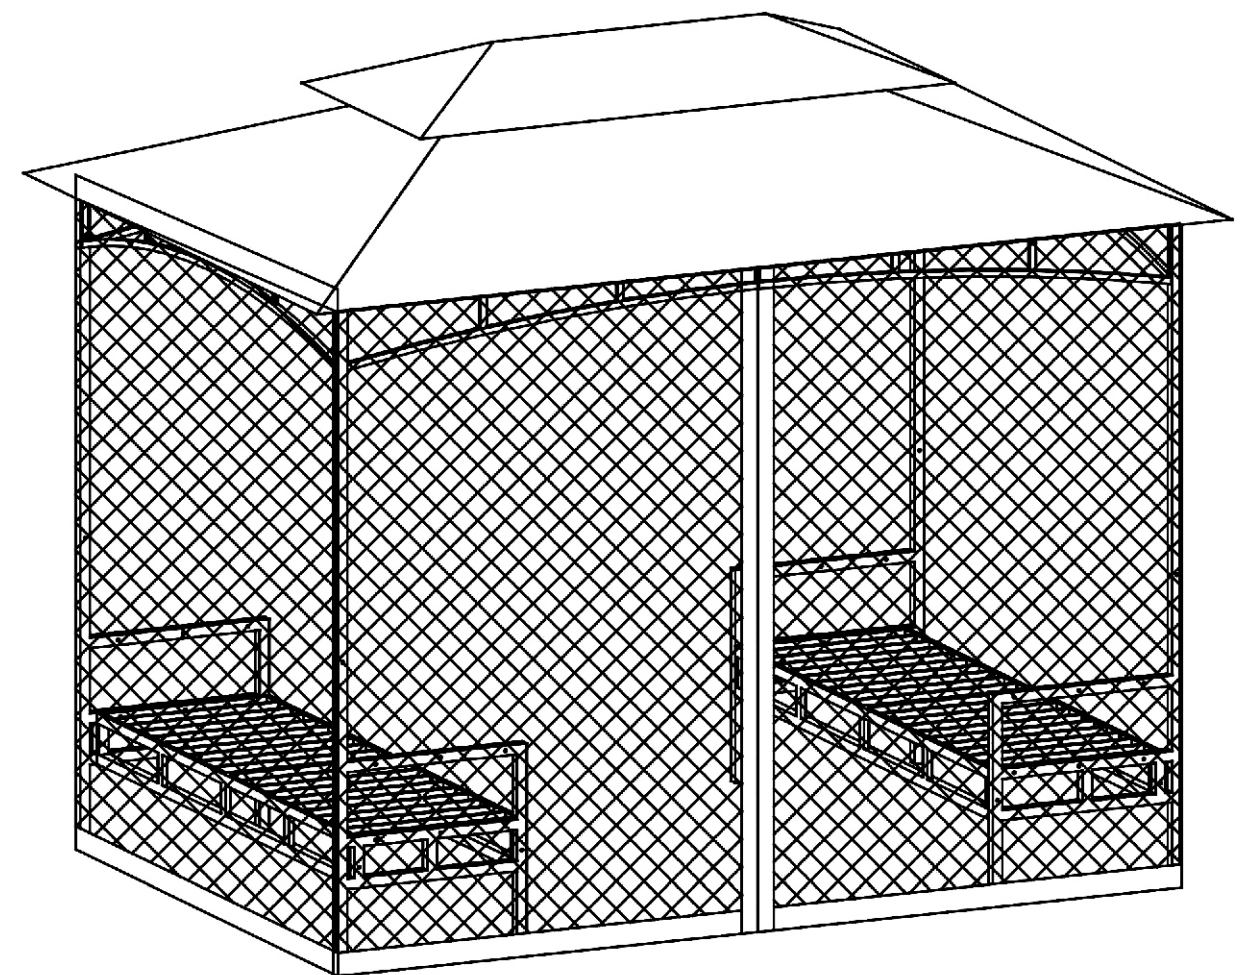

84C-062



ASSEMBLY INSTRUCTIONS

Safety Information

PRODUCT CAUTION

This gazebo was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this gazebo when any formidable / severe weather is approaching. Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10 near this product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

SAFETY WARNINGS



WARNING: Please keep children out of the assembly area before assembly.



CAUTION: Do not locate the product near any heat source.




WARNING: This gazebo unit is heavy, and may require two adults for safe assembly.




CAUTION: When not in use, secure the product in a cool and covered location.

8

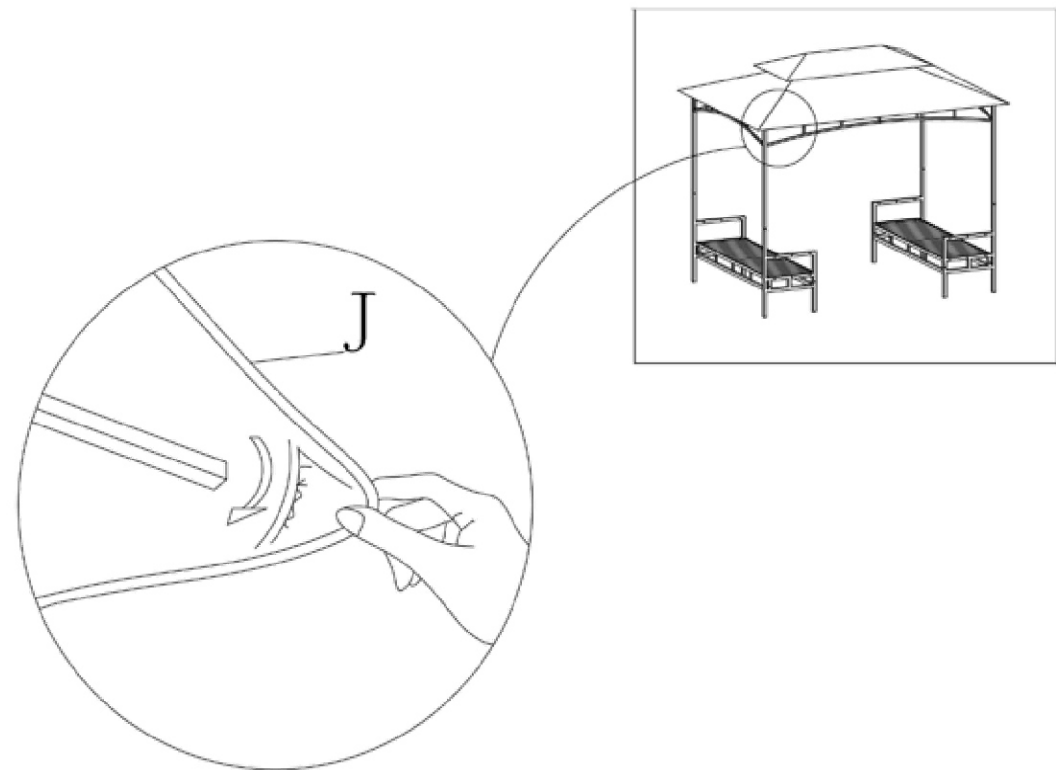

9

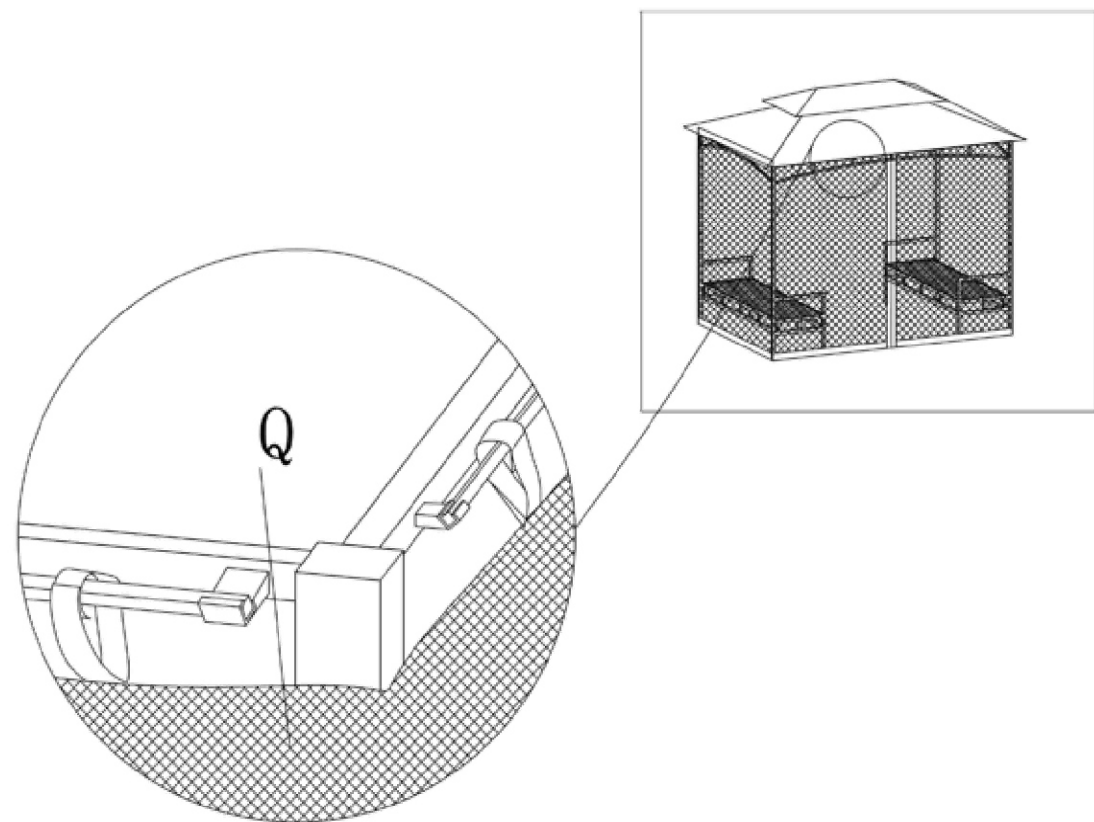

PLANNING ASSEMBLY

Read all instructions before assembly.
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: Need three to four persons to assemble this product.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

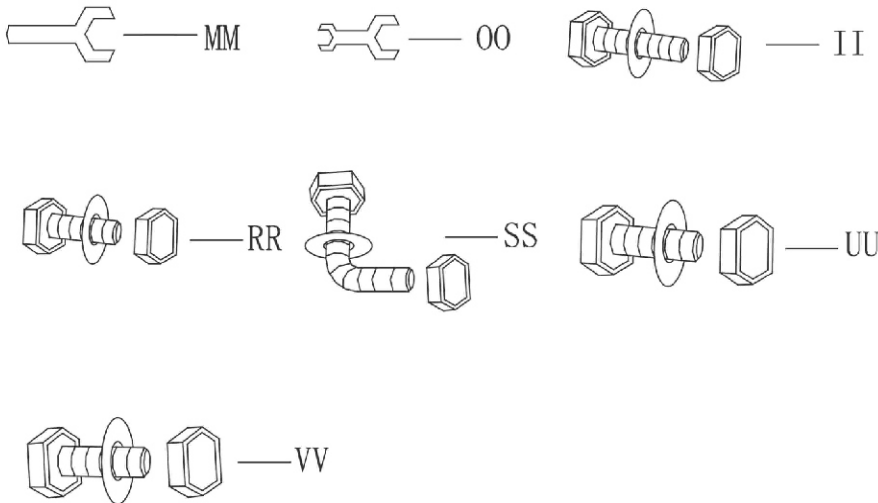

MM	M8	2+1
OO	M6	2+1
II	M6 × 25	11+1
RR	M6 × 15	4+1
SS	M6 × 40	8+1
UU	M8 × 55	20+1
VV	M6 × 30	14+1

Pre-Assembly (continued)


PACKAGE CONTENTS

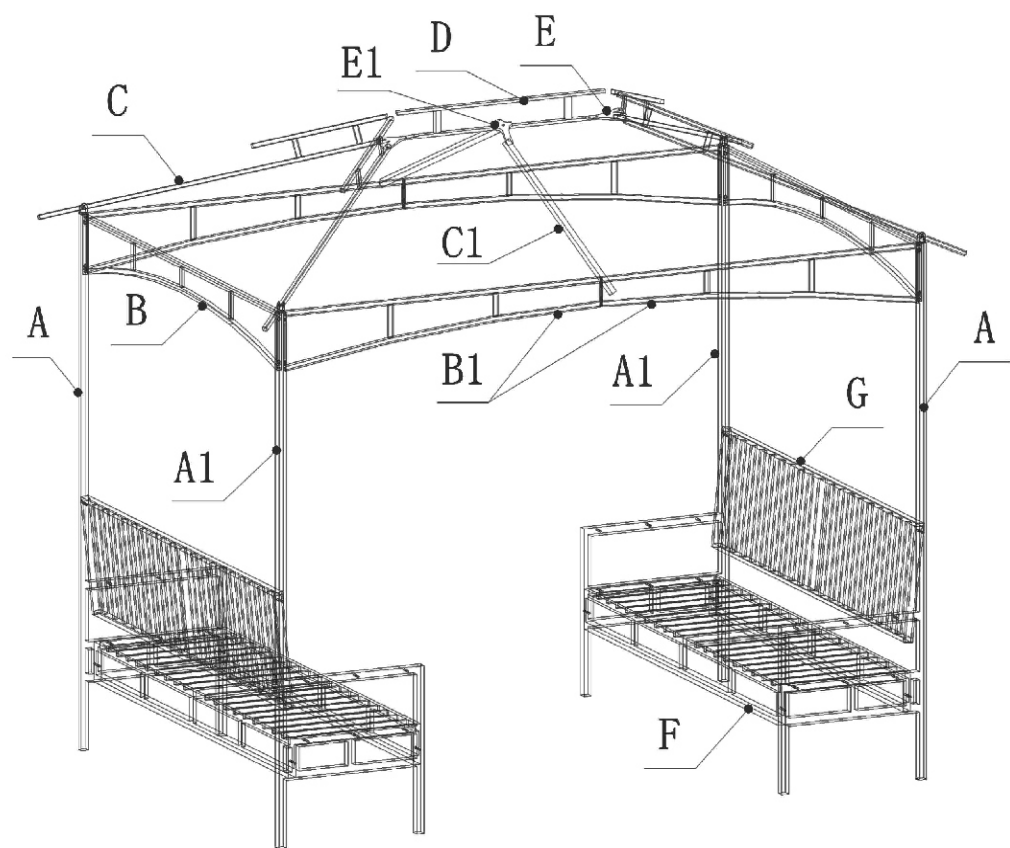

A		2PCS	F		2PCS
A1		2PCS	L		2PCS
B		2PCS	L1		4PCS
B1		4PCS	P		12PCS
B2		2PCS	G		2PCS
C		4PCS	H2		2PCS
C1		2PCS	J		1PCS
D		1PCS	Q		2PCS
E		2PCS			
E1		1PCS			


Assembly (continued)

7

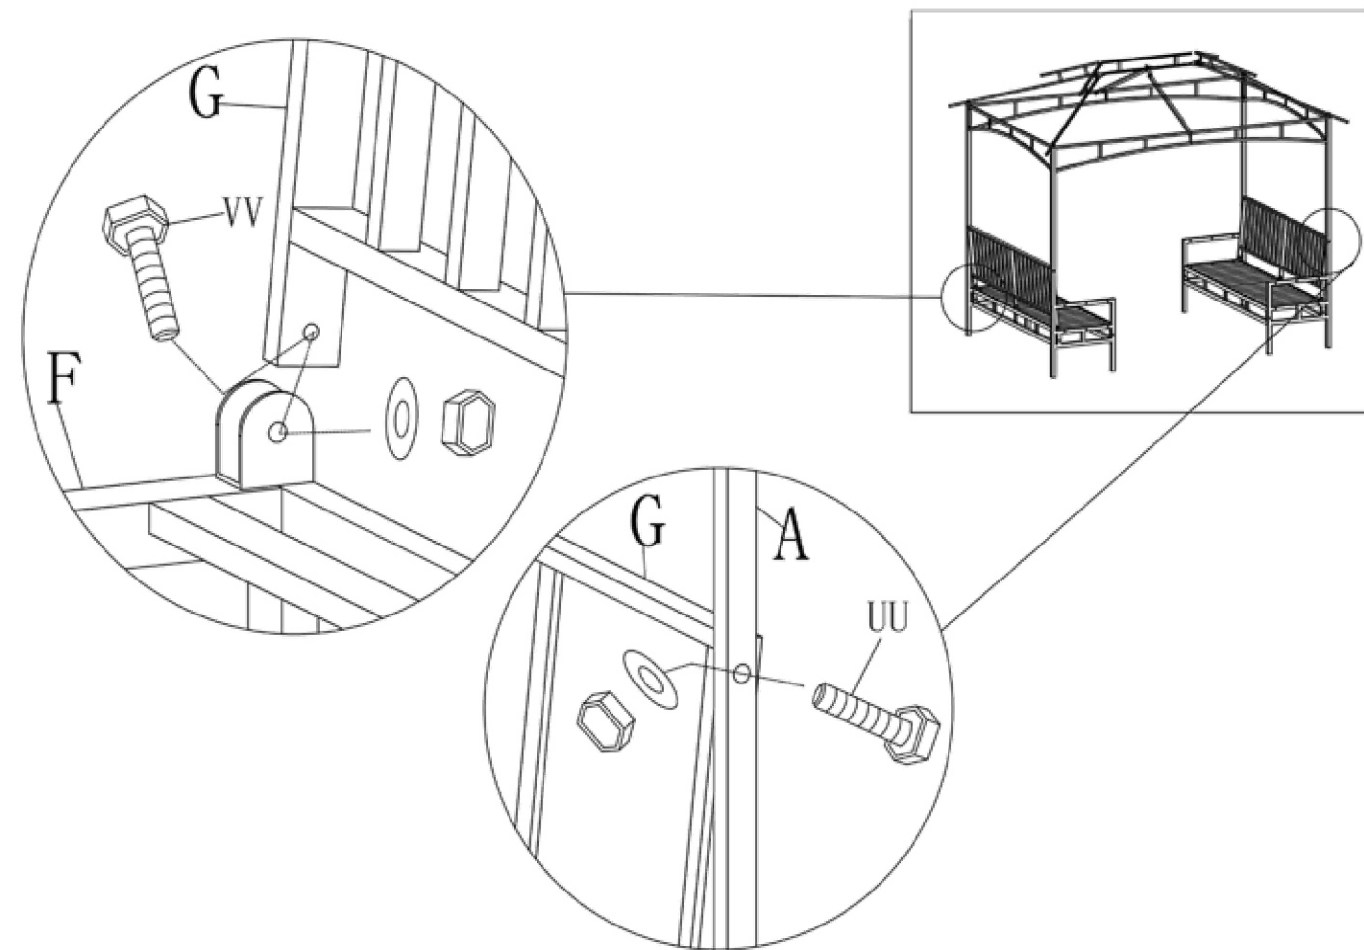


Assembly (continued)

5

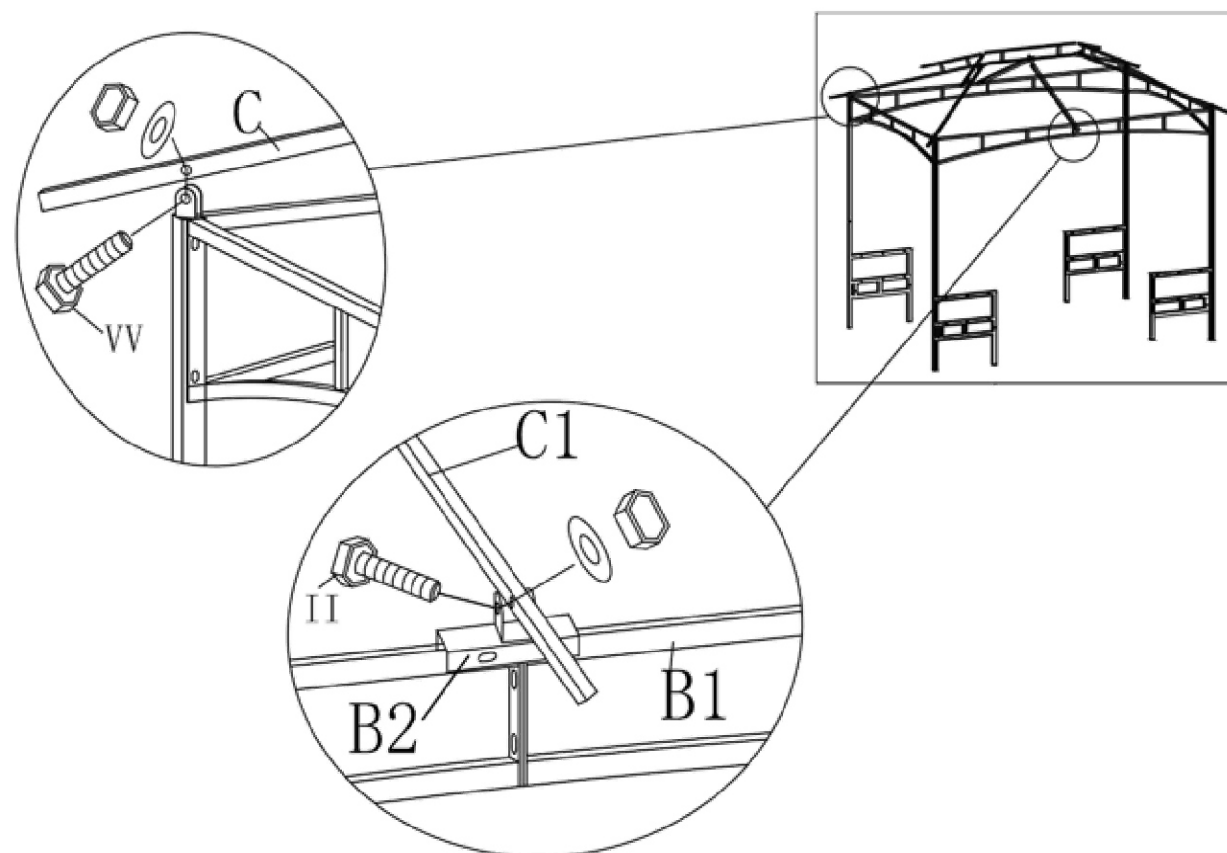


6

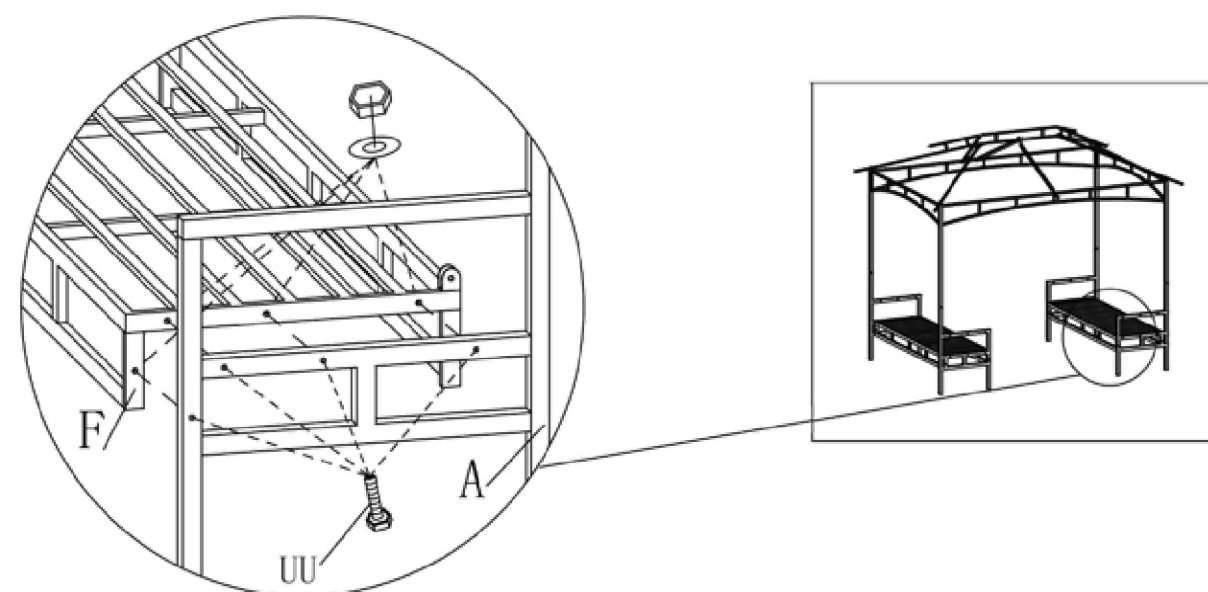


Assembly

1

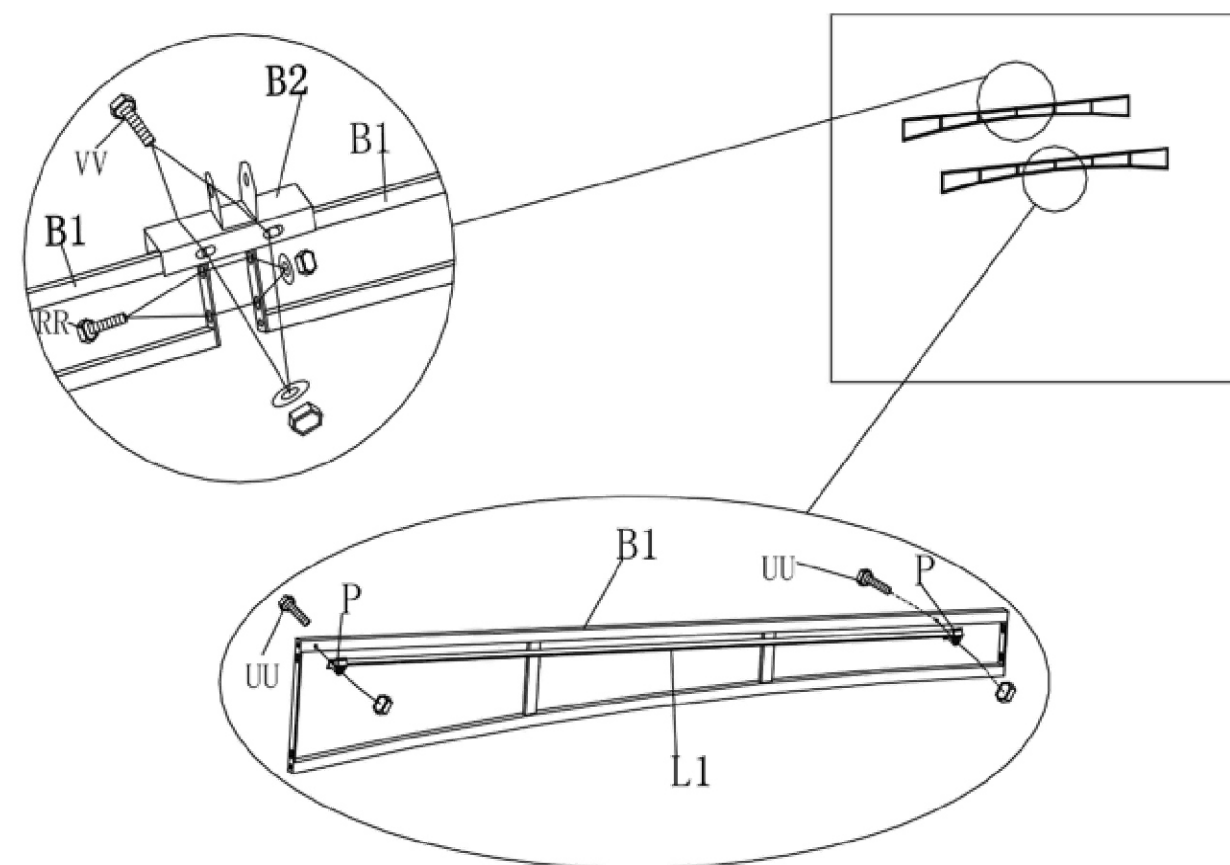


Assembly (continued)

2

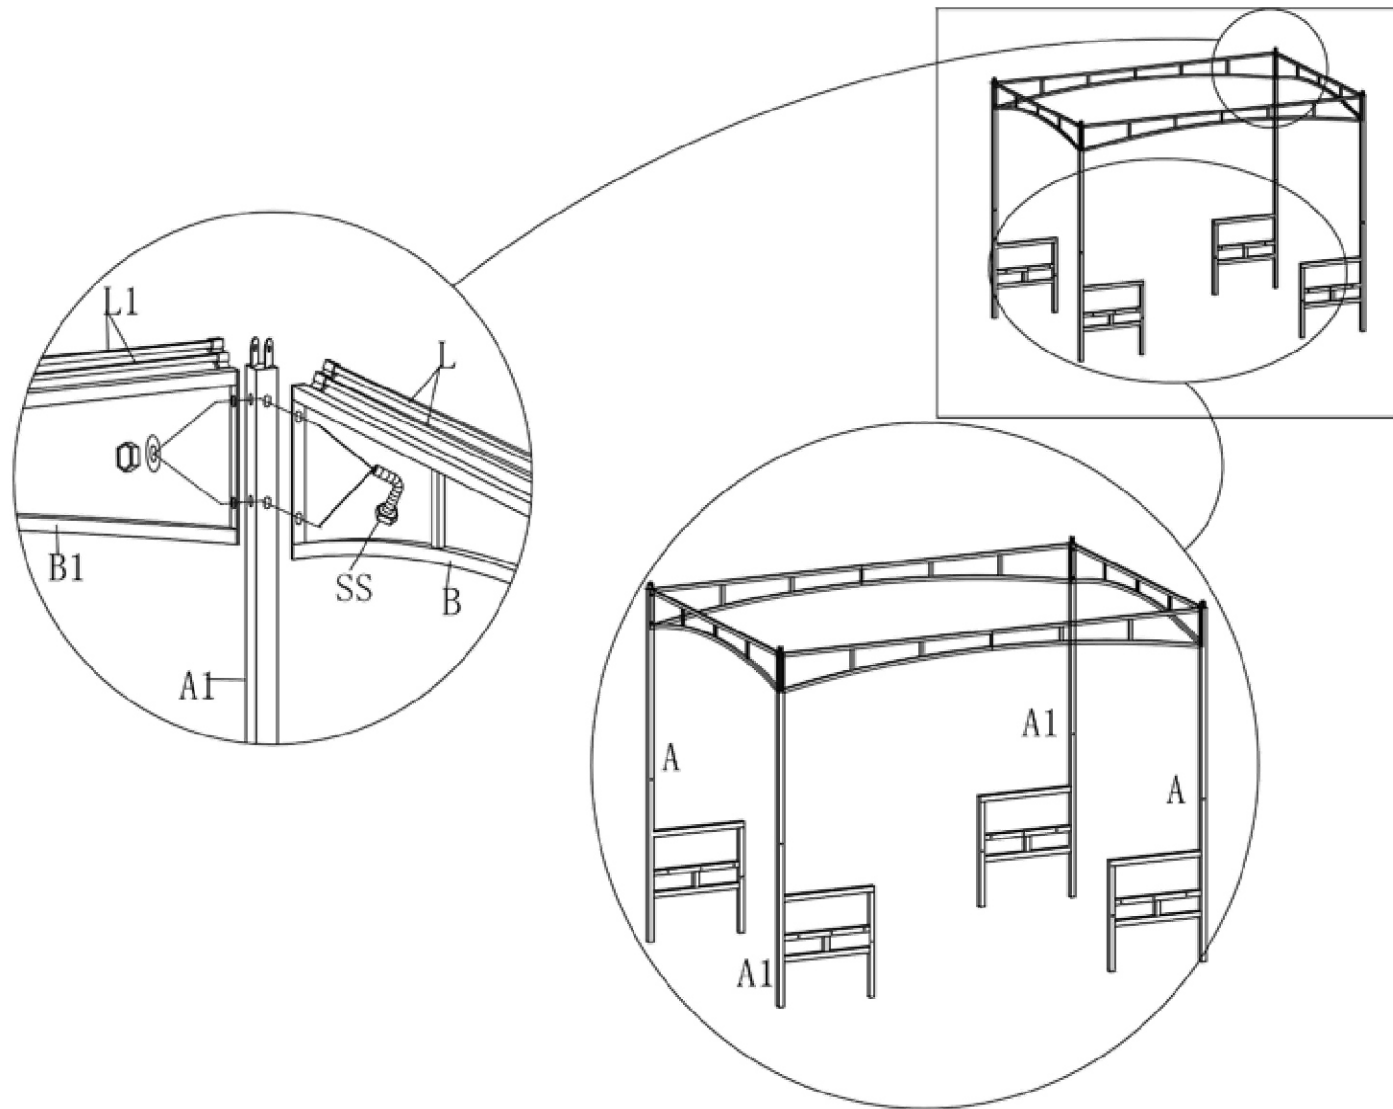

Assembly (continued)

3

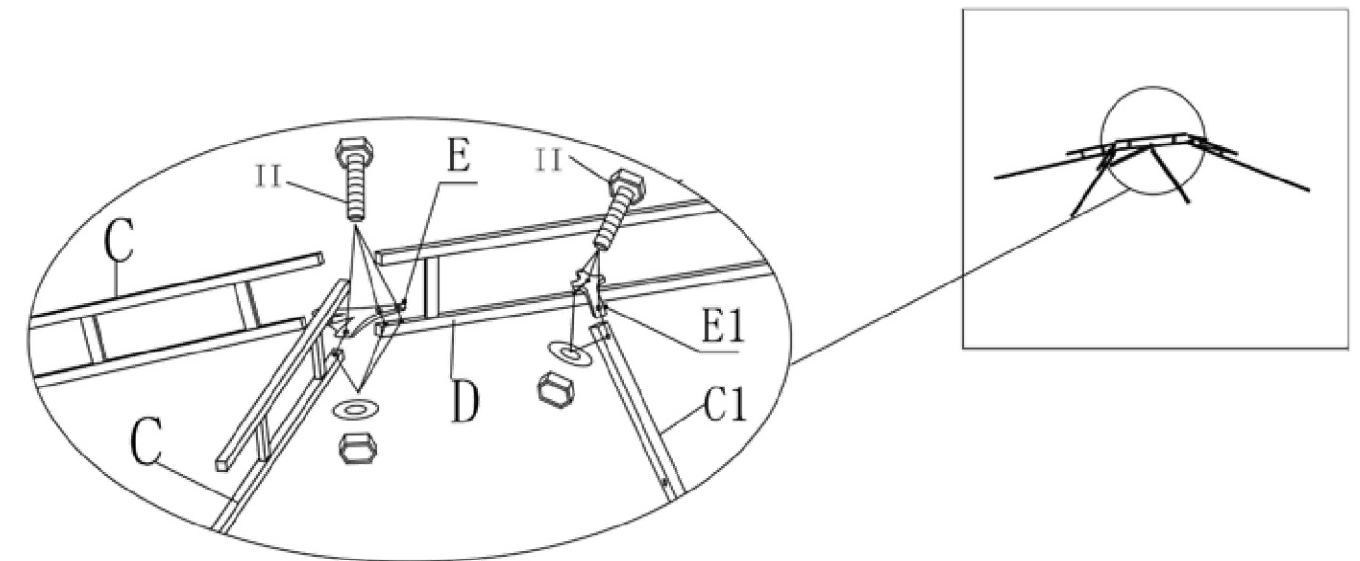

4

