


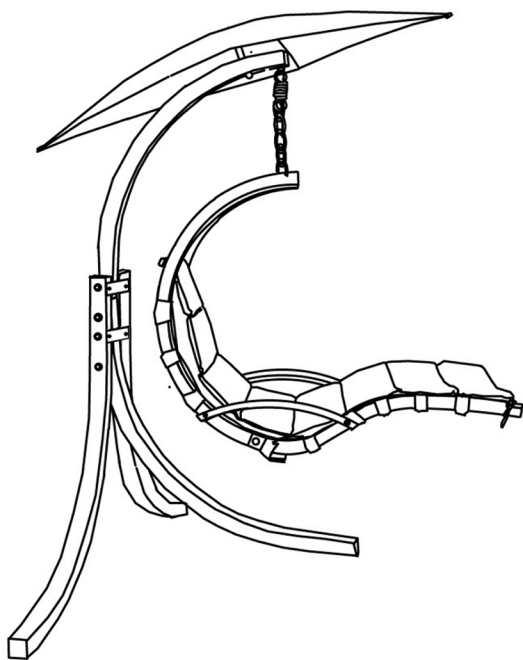








 


 

 

 
 



 







 


01-0856



Please read these instructions and warranty information carefully before use and keep them properly for future reference.


OPERATING INSTRUCTIONS

Part List


	AX4	M8*50MM		MX1
	CX2	M8*60MM		NX1
	DX4	M8*100MM		OX1
	EX8	M8*65MM		PX1
	FX2	M10*70MM		Q1X3
	GX1	M10*110MM		Q2X1
	HX4	M10*200MM		aX1
	IX1	M10*85MM		bX4
	JX8			
	KX15			
	LX18			
	RX2			WX2
	SX2			Xx1
	TX1			YX1
	UX2			ZX2
	VX1			

Assembly Instructions


1

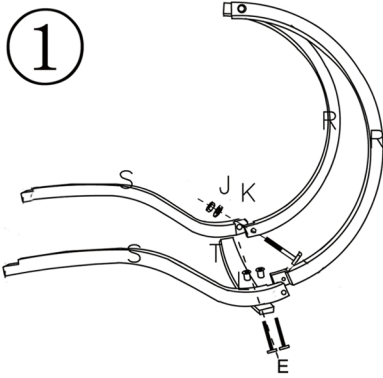


2

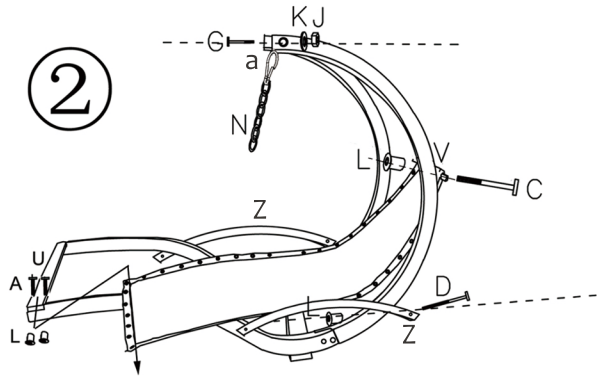

3

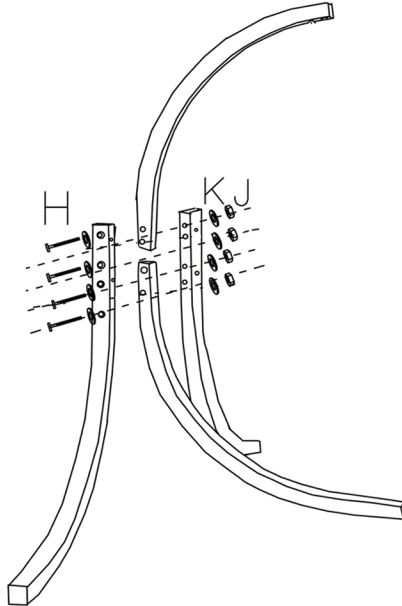

④

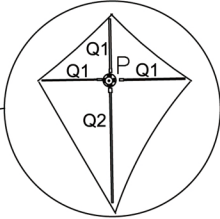

⑤

