



# **18 ft. TELESCOPING WAND INSTRUCTION MANUAL**

 
845-098



# 18 ft. Telescoping Wand

## PACKAGE CONTENTS

Part #	Description	Quantity
1	17 ft. Telescoping Wand	1
2	15 in. Extension Wand	1
3	Adaptor Hose-to-gun	1
4	Black belt	1
5	Jet flush	1
6	Jet soap	1
7	Gutter cleaner	1

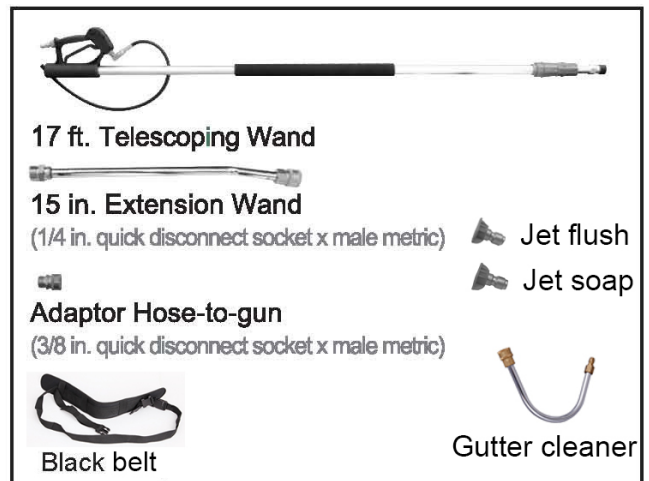

## ⚠️ WARNINGS AND CAUTIONS

**WARNING = indicates potentially hazardous situation which if not avoided could result in death or serious injury.**

- Beware of overhead power lines. Contacting these lines with the long wand may result in electrocution, injury, or even death.
- Always shut down pressure washer / water supply and depressurize before removing or cleaning accessories.
- Wear Safety glasses when operating unit.
- Never point spray nozzles or guns at humans or animals. Never place any body part in the water stream.
- Serious injury can result from the high pressure discharge produced by pressure washers.
- To prevent accidental discharge from the gun always use the trigger lock when you've finished spraying.

**CAUTION = indicates potentially hazardous situation which if not avoided may result in minor or moderate injury.**

- Fits gas and electric pressure washers rated up to 4000 PSI.
- Make sure all connections are secure. Hold the gun securely while starting pressure washer unit.
- When operating pressure washer always stand on a permanent, stable surface. Do not stand on ladders, chairs, etc.
- Before changing out tips, make sure the pressure washer has been turned off and depressurized. The collar on the quick disconnect socket will snap back into its original forward locking position when tip is inserted correctly.
- Do not fully extend the telescoping wand. A minimum of 6 inches must remain inside each section of the wand for stability.

## PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

- Estimated Assembly Time: 10 minutes
- Tools Required for Assembly: 1 in. Adjustable Wrench and pipe thread tape (not included)

## ASSEMBLY INSTRUCTIONS

### 1. HOSE CONNECTION

Apply pipe tape to male threads on ends of hose assembly. Thread the end of the hose assembly (of telescoping wand) into gun elbow and tighten with adjustable wrench.

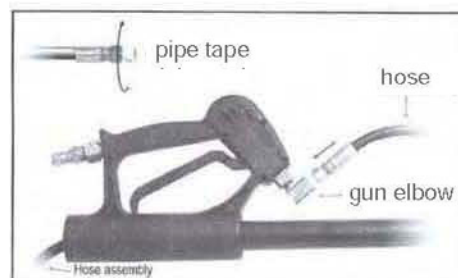


Fig. 1

### 2. WAND & EXTENSION WAND CONNECTION

Screw female metric (of telescoping wand) onto male metric end (of extension wand) and hand tighten.

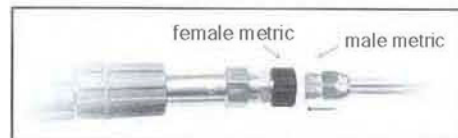


Fig. 2

### 3. QUICK DISCONNECT SPRAY TIP CONNECTION

Pull back on socket collar and insert plug, or pull out to remove, then release collar.

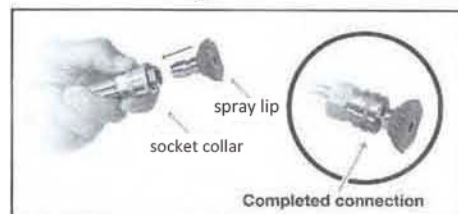


Fig. 3

## INSTALLATION INSTRUCTIONS

choose one: Step 4. Gun & Quick Disconnect Hose Connection or Step 5. Gun & Metric Hose Connection.

### 4. GUN & QUICK DISCONNECT HOSE CONNECTION

Pull back on socket collar and insert plug, or pull out to remove, then release collar.



Fig. 4

### 5. GUN & METRIC HOSE CONNECTION

Insert the plug into the socket. Next screw female metric (of hose) onto male metric end (of adaptor) and hand tighten.

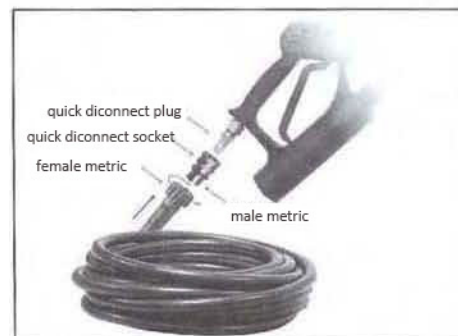


Fig. 5

## OPERATION INSTRUCTIONS

### 6. ADJUST WAND LENGTH

Twist grey knobs to unlock and then pull to extend to desired length. Turn knobs in opposite directions to retighten. **IMPORTANT:** Overtightening the knobs can cause damage.

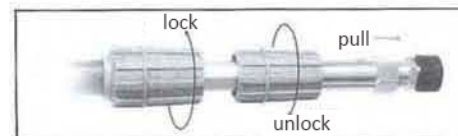


Fig. 6

### 7. INSTALL THE STRAP (Option)

Connect the 2 hooks (on the strap) to the 2 holes (on the wand).

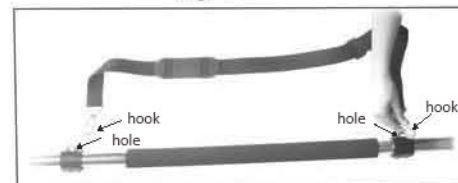


Fig. 7

**OPERATING INSTRUCTIONS continued**

**8. CLEANING SURFACE**

Put the strap on one shoulder to reduce load during usage. Grasp the gun firmly with one hand and place the other hand on the long wand. Use a side to side motion to clean desired surface.



Fig. 8

**CARE AND MAINTENANCE**

To promote longer life of accessories, run clean, fresh water through them, and then turn off pressure washer and water supply. Depressurize by squeezing the gun trigger until all of the water has been drained out of the unit. Accessories can now be disconnected safely for storage in a cool, dark area. If debris exists after connection, clean before storing.

**TROUBLESHOOTING**

Problem	Possible Cause	Corrective action
Connections leak	<ol style="list-style-type: none"> <li>1. Loose connections</li> <li>2. Sealant Worn</li> <li>3. O-ring is worn</li> </ol>	<ol style="list-style-type: none"> <li>1. Retighten fittings</li> <li>2. Reapply pipe tape</li> <li>3. Replace o-ring</li> </ol>
Unit won't spray	<ol style="list-style-type: none"> <li>1. Unit power / water supply off</li> <li>2. Unit is clogged</li> </ol>	<ol style="list-style-type: none"> <li>1. Consult owners manual</li> <li>2. Reverse flush unit with water</li> </ol>
Grey knobs won't turn	<ol style="list-style-type: none"> <li>1. Overtightened</li> </ol>	<ol style="list-style-type: none"> <li>1. Spray lubricant on threads on inside of grey knobs ("Tool Free" telescoping mechanism)</li> </ol>

**WARRANTY**

**ONE YEAR LIMITED WARRANTY.**

The manufacturer warrants this product against defects in materials and workmanship for one (1) year from date of purchase. If within this period a product is found to be defective in material or workmanship, the product must be returned with a copy of the bill of sale as proof of purchase to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. This warranty does not cover the product becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on how long an implied warranty lasts, the above exclusion and limitation may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.

**REPLACEMENT PARTS LIST**

For replacement parts, call our customer service department at 1-800-444-6742, 8 a.m.-6 p.m., EST, Monday-Thursday; 8 a.m.-5 p.m., EST, Friday.

Part #	Description
1	17 ft. Telescoping Wand
2	15 in. Extension Wand
3	Adaptor Hose-to-gun
4	Black belt
5	Jet flush
6	Jet soap
7	Gutter cleaner

