



## Lawn Roller

## Instructions for Use

Please read and retain these instructions for future reference

845-253



### TECHNICAL DATA:

Drum size 42cm wide  
x 30cm diameter.  
Overall height including  
handle is 100cm.  
Weight 6kg (empty)

### PARTS:

6 x self-locking nuts  
6 x bolts  
6 x washers  
2 x metal upright bars  
1 x cross bar  
1 x handle  
1 x drum

### PARTS REQUIRED:

(not supplied)  
10mm spanner  
Water / Sand / Cement

### ASSEMBLY:

Attach handle and 2 x metal upright bars together using 4 x bolts, washers and nuts (loosely tighten all 4 nuts at this stage).

Attach the handle and upright bars to the drum and attach the cross bar using 2 x bolts, washers and nuts. Tighten all 6 nuts and bolts securely.

Remove cap on the drum and fill carefully with either wet sand or concrete mix until completely full. Replace cap securely. Water can be used, however we do not recommend this as water may seep from around the bung during use.



Use a lawn roller when seeding a new lawn or to improve the overall appearance of your lawn. For best results, rolling is advised every time the lawn is cut.

**WARNING:**

Take care when using on slopes.

**CARE**

Please wipe clean after each use.

Please store away in covered protection from adverse weather when not in use.

**DISPOSAL**

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.