



845-327 C000000

1



2



3

Unfold the stroller / Dépliez la poussette  
Kinderwagen aufklappen / Desdoble la carriola  
Aprire il passeggino



4

Push the button to adjust the handlebar between 0°-180° in 7 levels.  
 Appuyez sur le bouton pour régler le guidon entre 0 ° -180 ° sur 7 niveaux.  
 Pressen Sie den Knopf um den Winkel des Griffs von 0 bis 180 Grad in 7 Leveln zu verändern.  
 Presione el botón para ajustar el manillar entre 0 ° -180 ° en 7 niveles.  
 Premere il pulsante per regolare il manubrio tra 0 ° -180 ° in 7 livelli.



5



6

Pull the black strap to fold the stroller  
 Tirez sur la sangle noire pour plier la poussette  
 Ziehen Sie an dem schwarzen Gurt um den Kinderwagen wieder zusammenzuklappen  
 Tire de la correa negra para doblar la carriola  
 Tirare la fibbia nera per ripiegare il passeggino



US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it