



INbza002V02_UK

842-084



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

UESR'S MANUAL

Dear Customer,

We congratulate you by buying this patio heater. May we insist that you read this manual thoroughly BEFORE assembling and using this product?

This manual should be kept with the heater for further reference for future use, even if the heater changes owner.

Repair should always be done by a qualified technician. Always contact your dealer first.

Do not attempt to disable or modify this heater in any way.

With kind regards,
MH Star UK Ltd.

SAFETY INSTRUCTIONS

PLEASE READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND USING THE HEATER!

The user accepts all risks of installing and using the heater. If the warnings and instructions are not followed in this manual, material damage, serious injury or even death may result. When you do not understand this manual, please contact your dealer.

- Use only for intended household as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
- Do not use the heater in reach of a shower, bath or swimming pool.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
- DO NOT touch the control panel with a wet hand.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Persons under the influence of drugs, alcohol or medication must not use the heater.
- Extreme caution is necessary when the heater is used by or near children or the disabled.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave the heater operating and unattended.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided
- Do not use the heater with a programmer, timer, separate remote-control system or any other

device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

- Take good care of the heater. Don't let the head be a subject to vibrations or shocks.
- These appliances must be supplied with proper voltage and frequency (AC220-240V, 50Hz), and connected to an individual, properly grounded branch circuit, protected by a circuit breaker which in accordance with wiring rules. Power cord of this appliance must be fastened with the chain, installation can only be carried out by qualified person in order to avoid a hazard.
- Do not operate any heater with a damaged cord or after the heater malfunctions, has been drooped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Never unplug the heater by its power cable from the socket.
- Never wrap the power cable around the heater.
- The power cable must always be completely unwound when the heater is to be used.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- If the cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard.
- This heater may get hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.
- Always turn off the unit before moving or cleaning, or whenever the heater is not in use.
- Never move or lift the heater by pulling its power cable.

ASSEMBLY INSTRUCTIONS

- When unpacking check the heater and its components for transport damage and completeness.
- Before assembling and using the device, remove protective packaging. Clear away the packing materials immediately. They can be dangerous for children and animals.
- By assembling the heater consider the safeguard distances as shown in the figure.
- The voltage available must not exceed the voltage stated in the specifications of the patio heater.
- Be careful during assembly. Do not touch live wires.
- Never insert the plug in the socket before the heater is completely assembled and installed.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- The power cable must never come in contact with the heater or hot parts of the heater. Keep the power cord at a safe distance.
- The heater shall not be located immediately below a socket-outlet.
- For safety reasons, you must be in a position to pull the plug from the socket immediately in a safe manner.
- The heater should be placed on a sufficiently solid flat surface.
- Never install the heater on flammable materials like wood. Fire hazard!
- It's dangerous to install the appliance close to curtains and other combustible materials. Fire hazard!
- Connect to properly grounded outlets only.
- The marking concerning covering shall be visible after the heater has been installed.

SUPPLIED PARTS

- 1 Patio heater with pull setting switch at the botton.
- 1 chain

- 1 self tapping hook screw

ASSEMBLY

Attachment to a ceiling

The heater should be assembled to a concrete ceiling. The supplied mounting parts are not suitable for other surfaces.

1. Drill a hole with a diameter of 8 mm in the ceiling.
2. Push the self tapping hook screw in the drilled hole.
3. Tighten the hook firmly.
4. Hang the heater with the chain to the screw. Ensure that the distance between ceiling and the heater is at least 30 cm. The height between the floor and the heater must be at least 1.80 m.
5. Route the power cable alongside the chain to the socket. The power cable must be attached to the chain with a pull strap, but make sure it does not make contact with the first three links of the chain. The power cable must under no circumstances touch the heater. The heater should not be hung up by the power line.

Attachment to a Gazebo

Make sure the frame of the tent in which the heater is suspended, is sufficiently strong to support the weight of the heater.

1. Hook the chain to the heater.
2. Wind the chain several times around the frame and attach the other end, just like the first, also to the heater. Make sure that the distance between the point of suspension and the heater is at least 30 cm. The height between the floor and the heater must be at least 1.80m.
3. Make sure the heater hangs securely.

OPERATING INSTRUCTIONS

- Do a visual check of the patio heater, power cable and accessories before every use! If you notice damage, do not use the heater but contact your dealer.
- **CAUTION: Risk of Electric Shock.** Do not open or try to repair the heater yourself.
- Never use the heater as a dryer or to heat a sauna.
- Never use the heater for heating of premises where animals stay.
- Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3ft from the front of the heater and keep them away from the sides, top, and rear. Do not place towels or other objects on the heater. Fire hazard!
- A heater has hot and arcing or sparking parts inside. Do not use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames. Fire hazard!

TURNING THE PATIO HEATER ON AND OFF

1. Insert the plug into the socket.
 2. Turn on the heater by pulling the pull setting switch.
 3. Turn off the heater by pulling the pull setting switch.
- After using the heater, it always must be turned off with the button, the remote control and

the power plug must be pulled out of the socket.

- Allow the heater to cool completely before moving and storage.
- Never use the heater when there are bad weather conditions like rain, snow, hail, or a thunderstorm.
- Pay attention that, no combustible material due to wind or other environmental influences covers or obstructs the appliance, such as curtains, marquees, flags, plastic foil etc.

TECHNICAL SPECIFICATIONS

Voltage Rating	AC220-240V 50/60Hz
Power Consumption	1500W
Power Cord Length	1.6 m
Unit Size	((H x W x D) 270 x 415 x 415 mm)
Lamp type	Halogen
Lamp life*	3000 hours
Number of lamps	1
IP	IP34
Radiation area*	14 m ²

* These values are indicative

Operation Instructions

- 1 Connect the power cord plug with an AC outlet
- 2 Pull the pull setting switch once, the machine will turn on and start to work.
- 3 Pull the pull setting switch again, the machine will turn off and stop working.
- 4 There is only one heat setting for this machine: 1500W.

CLEANING AND MAINTENANCE

- In an environment with salty air such as at the seaside, corrosion occurs earlier than usual. Check the heater regularly on corroding parts and have those parts repaired immediately.
- Always turn off the circuit breaker and let the unit cool completely before maintenance.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
- Do not use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- Although this heater is outdoor approved (balconies and patios), do not immerse the heater in water for your safety. Wait until the unit is completely dry before use.

All rights reserved.

Nothing may be copied from this publication, stored in a database and / or made public in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission from MH Star UK Ltd.

Importer: MH STAR UK LTD

The address

**Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH**

