 


Outsunny

INbza023_UK

842-283V70

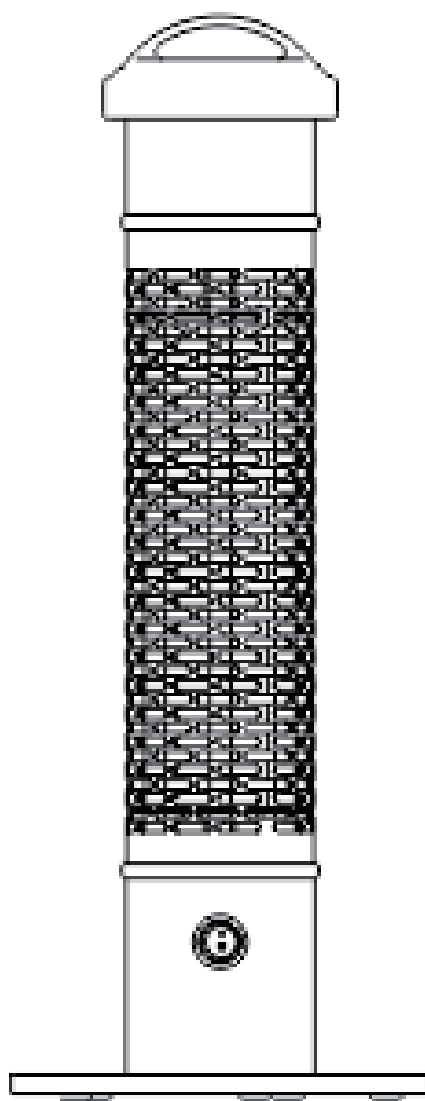

**UK
CA** **CE**

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

**FR_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION
ULTÉRIEURE.**

ES_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.

DE_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.

**IT_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E
LEggerlo ATTENTAMENTE.**

Unpack the heater, making sure all items are present and that there are no components left behind.

Use the diagrams and follow the steps to assemble this heater.

Do not plug in until all assembly is complete.

If the power cord or components are damaged, do not plug in this appliance.

If in doubt, contact your supplier.

Under guided supervision, this appliance can be used by children aged eight years and above, provided they understand the potential risks and hazards. Under guided supervision, the appliance can be used by persons with disabilities or persons without experience, provided they understand the potential risks and hazards.

Children must be supervised, ensuring they do not play with this appliance.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms if there are persons incapable of leaving on their own, unless constant supervision is provided.

Children from three years and less than eight years, shall only switch on/off the appliance, provided it has been placed in its intended position and they have been given supervision or instruction concerning the use of the appliance, understanding the hazards involved. Small children must not plug in, regulate, clean or maintain this appliance.

CAUTION! Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.

Caution

Only use the heater on a flat and even surface, where all feet on the base touch the floor. If the heater tilts or falls, the auto cut-off switch will activate.

 
 
1. Place the heater outside or in a large open area, away from flammable materials such as branches, curtains and furniture (a minimum distance of 1m).
2. Do not use near bathtubs, wash areas or swimming pools.
3. Do not use in unventilated areas.
4. Do not use where gas, petrol, paint or other flammable items are stored.
5. Do not push any items through, obstruct or cover the grill head.
6. Do not place directly above or below an electrical socket.
7. Do not move when plugged in. Before storing or cleaning, wait for the heater to completely cool down.
8. Do not touch the heater head when in use.
9. When turned on, do not leave unattended, especially when children and pets are nearby.
10. The different position of switches must be visible from 1m away.
11. The markings concerning covering must be visible after installation. Do not place on the back of portable heaters.
12. There must be 100cm of space between the unit and wall.
13. The unit must be correctly installed according to the instructions.
14. The unit must be securely placed on a flat and even surface.
15. This unit gets hot during use. When turned off, the unit remains hot for a short period. Wait until it has completely cooled down before touching.
16. Do not cover the unit when in use. When turned off, wait until it has completely cooled down before covering.
17. Do not wrap the power supply cord around the unit.
18. Handle this unit with care – do not hit or drop.
19. The unit must be securely grounded when in use.
20. If the unit gets damaged, it must be repaired by the manufacturer, its service agent or qualified electrician.
21. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or qualified electrician.
22. Do not place this unit directly below an electrical socket.
23. When assembling, keep away from flammable materials.
24. Constant supervision is required when small children are nearby.
25. It is not safe to install the unit by a swimming pool, in a bathroom or a shower area.
26. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
27. The head of this unit gets very hot during use. Before cleaning, unplug the unit and wait for it to completely cool down.
28. Do not use in places where there is dust, steam, gas, etc.
29. Do not use to dry clothes, towels or other fabrics.
30. Do not use this unit as a sauna.
31. Do not use this unit as a room heater.
32. Do not immerse this unit in water when cleaning.
33. The unit should be plugged into a socket, which is easily visible and reachable.
34. When turned on, there might be a dark point on the surface for the first few minutes. This is normal – it will not affect the performance of the unit.
35. **WARNING!** To avoid overheating, do not cover the heater.
36. Do not use this heater with a programmer, timer, separate remote-control system or any other device that turns the unit on automatically. Covering or positioning the heater incorrectly is a fire hazard.

37. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed.

38. Children must be supervised, ensuring they do not play with this appliance.

Assembling Process

Step 1: Using three M6*25mm screws, fix the heater pole onto the base.

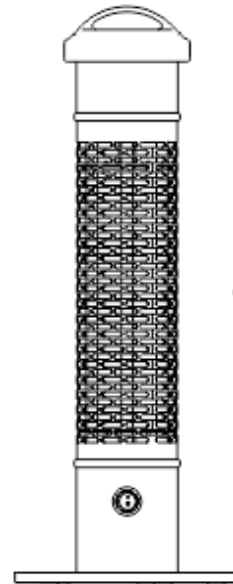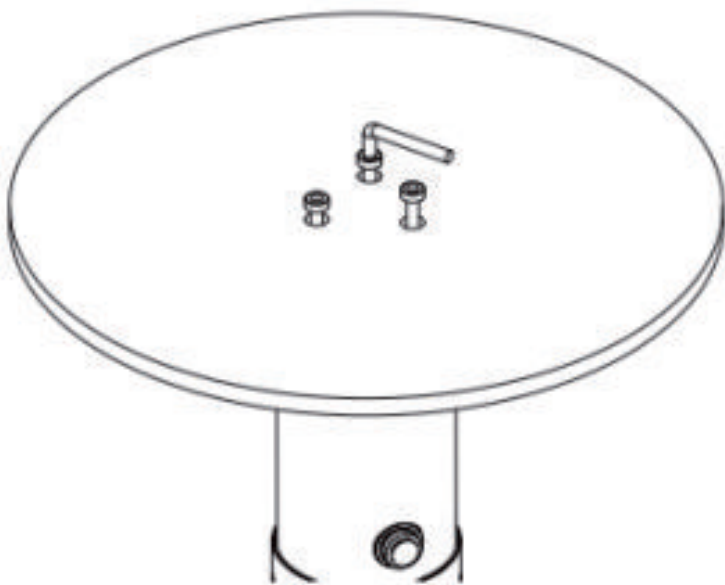

Operation

Connect the power cable to a 13 amp supply, which is in a safe and dry area.

- The switch on the heater is used to control the Heating. (I) for 1200W. The '0' is to turn the heater off.



- Do not use when raining or in wet conditions.
- When not in use, unplug the heater.

Care and maintenance

- When unplugged, clean the outside of the heater with a damp cloth. Never use corrosive or solvent cleaners. Do not immerse in water,
- Any maintenance or repairs, which include replacing the halogen tube, must be done by a qualified electrician or recommended service centre.

Technical specification

- Power supply 220-240V~ 50Hz
- Wattage max 1200W
- Insulation class I
- Height 65 cm