 




INbza026\_US

**842-286V80**

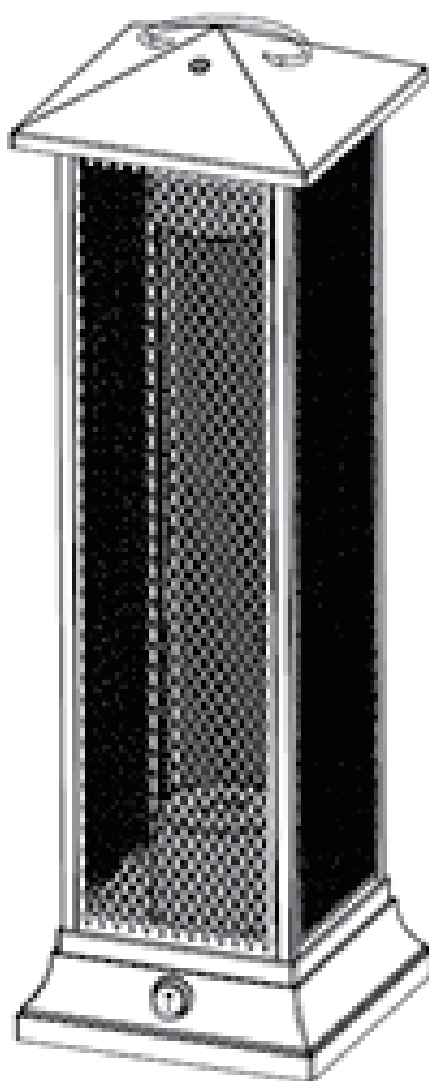

**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

**FR\_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION  
ULTÉRIEURE.**

**ES\_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.**

**DE\_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.**

**IT\_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E  
LEGGERLO ATTENTAMENTE.**

Unpack the halogen heater, ensuring all items are present and here are no components left inside.

Using the diagrams, follow the steps to assemble your halogen heater.

Do not plug in this unit until assembly is complete.

If the power cord or any components are damaged, do not plug in this unit.

If in doubt, contact your supplier.

Under guided supervision, this appliance can be used by children aged eight years and above, provided they understand the potential risks and hazards. Under guided supervision, the appliance can be used by persons with disabilities or persons without experience, provided they understand the potential risks and hazards. Children must be supervised, ensuring they do not play with this appliance.

**WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Small children should be kept away unless continuously supervised.

1. Children from three years and less than eight years, shall only switch on/off the appliance, provided it has been placed in its intended position and they have been given supervision or instruction concerning the use of the appliance, understanding the hazards involved. Small children must not plug in, regulate, clean or maintain this appliance.

 
**CAUTION!** Some parts of this product can become very hot – do not touch to avoid scalding. Particular attention must be given where children and vulnerable people are present.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid a hazard.

Do not place the heater directly below an electrical socket.

Do not use this heater in the immediate surroundings of a bathtub, shower or swimming pool.

**CAUTION:** To avoid a hazard due to accidentally resetting the thermal cut-out, do not use an external switching device, such as a timer or a circuit that is regularly switched on and off.

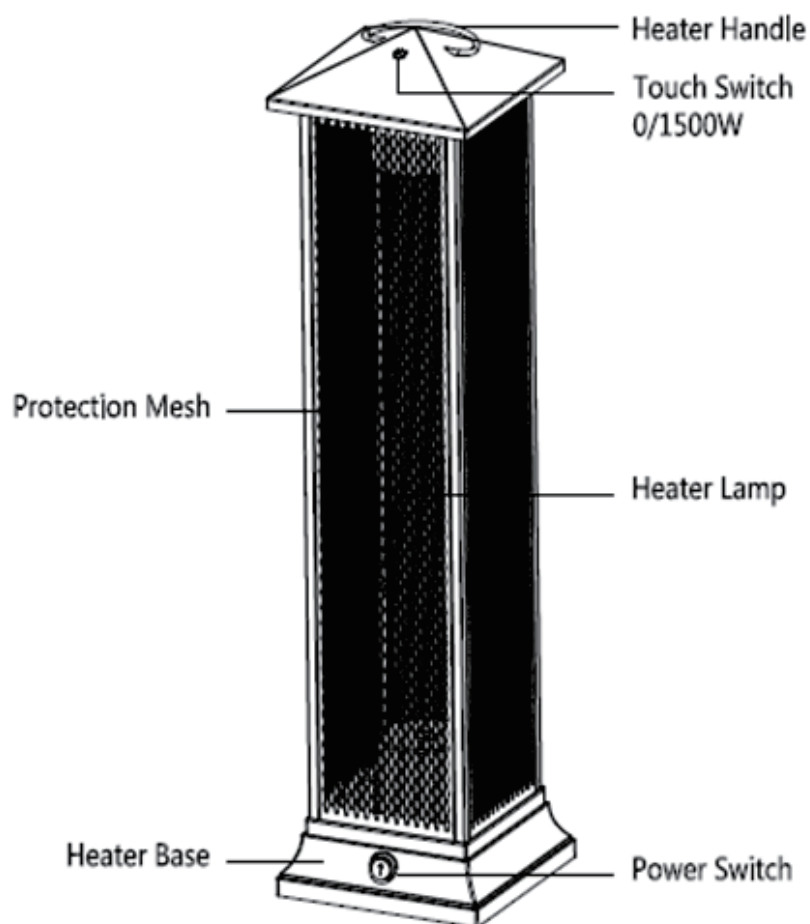

### Caution

 
Only use the halogen heater on a flat and even surface, where all feet on the base touch the floor. If the heater tilts or falls, the automatic cut off switch will activate.

1. Place the heater outside or in a large open area, away from flammable materials such as branches, curtains and furniture (a minimum distance of 1m).
2. Do not use near bathtubs, wash areas or swimming pools.
3. Do not use in unventilated areas.
4. Do not use where gas, petrol, paint or other flammable items are stored.
5. Do not push any items through, obstruct or cover the grill.
6. Do not place directly above or below an electrical socket.
7. Do not move this unit when plugged in. Wait for the heater to completely cool before storing.
8. Do not touch the heater head when in use.
9. When turned on, do not leave unattended, especially when children and pets are nearby.
10. The different position of switches must be visible from 1m away.
11. The markings concerning covering must be visible after installation. Do not place on the back of portable heaters.
12. There must be 100cm of space between the unit and wall.
13. The unit must be correctly installed according to the instructions.
14. The unit becomes very hot during use. When turned off, it remains hot for a short period. Do not touch until it has completely cooled down.
15. Do not cover the unit during use. Wait for the unit to completely cool down before covering.
16. Do not wrap the power supply cord around the unit.
17. Handle the unit with care – do not hit or drop.
18. The unit must be securely grounded when in use.

19. If the unit or power cord is damaged, it must be repaired by the manufacturer, its service agent or a qualified electrician.
20. When assembling, keep clear from flammable materials.
21. Children must be constantly supervised when near this product.
22. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
23. The head of the unit gets very hot during use – do not touch to avoid scalding.
24. Before cleaning, unplug the unit and wait until it cools down.
25. Do not use in places where there is dust, steam, gas, etc.
26. Do not use this unit to dry clothes, towels or other fabrics
27. Do not use this unit as a sauna.
28. Do not use this unit as a room heater.
29. Do not immerse this unit in water when cleaning.
- 30.** The unit should be plugged into a socket, which is easily visible and reachable.
31. When turned on, there might be a dark point on the surface for the first few minutes. This is normal – it will not affect the performance of the unit.
32. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- 33. WARNING!** To avoid overheating, do not cover the heater.
34. Do not use this heater with a programmer, timer, separate remote control system or any other device that turns the unit on automatically. Covering or positioning the heater incorrectly is a fire hazard.
- 35.** The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervision or instruction.

#### 1. Assembling Process

Step 1: Make four holes into the floor, then fix the heater using four wedge bolts. Tighten the screws using a spanner.

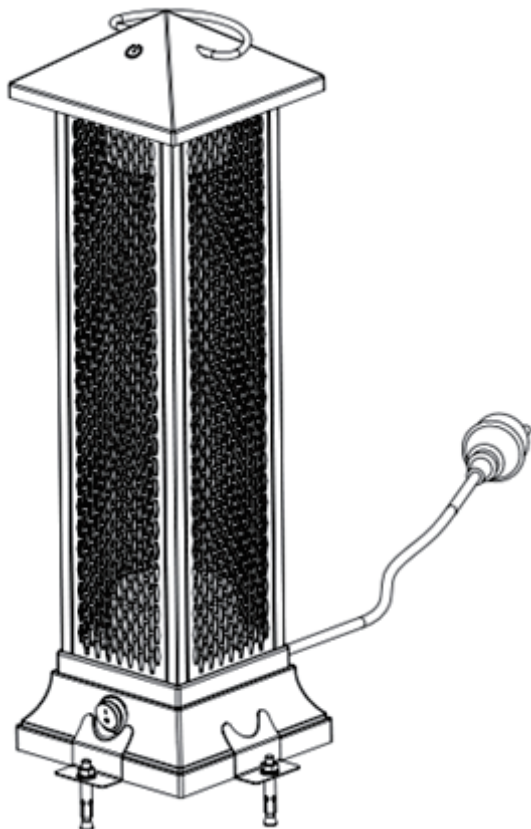

Complete!



This symbol indicates the surface is hot and caution is required.




This symbol indicates the heater should not be covered.



### Operation

 Connect the power cable to a 13 amp supply, which is in a safe and dry area.

Once plugged in, press the power switch on the heater.

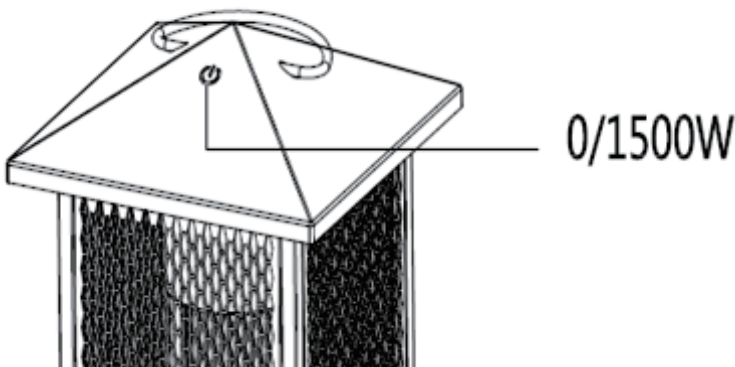

Press the switch to turn the heater on (1500W).  
Press again to switch off.

- Do not use when raining or in wet conditions.
- When not in use, unplug the unit.

### Technical specification

- Power supply 120V AC / 60Hz
- Wattage 1500W
- Insulation class I

### Care and maintenance

- When unplugged, clean the outside of the heater with a damp cloth. Never use corrosive or solvent cleaners. Do not immerse in water.
- Any maintenance or repairs, which include replacing the halogen tube, must be done by a qualified electrician or recommended service centre.

### STORAGE

If not in use for a long period, store in a cool, dry location. To prevent dust and dirt building up, use its original packaging to store the unit.

### TROUBLESHOOTING

If the heater is not working, follow these steps before seeking service:

- Ensure the power cord is properly plugged into an electrical outlet.
- Check if the electricity to the main fuse is working.
- Ensure the power switches are on. If not, choose a setting.

### WEEE



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.