



 



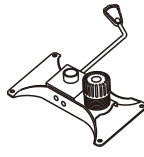



 
 
 


 
INcbb023\_US\_CA



**921-324**



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

**ASSEMBLY INSTRUCTION**

 <b>① x 5</b>	 <b>② x 1</b>	 <b>③ x 1</b>	
 <b>④ x 1</b>	 <b>⑤ x 1</b>	 <b>⑥ x 1</b>	 <b>⑦ x 1</b>
 <b>⑧ x 1</b> R L	 <b>⑨ x 2</b> M6*20	 <b>⑩ x 12</b> M6*35	 <b>⑪ x 10</b>
 <b>⑫ x 1</b>	 <b>⑬ x 1</b>	 <b>⑭ x 1</b>	

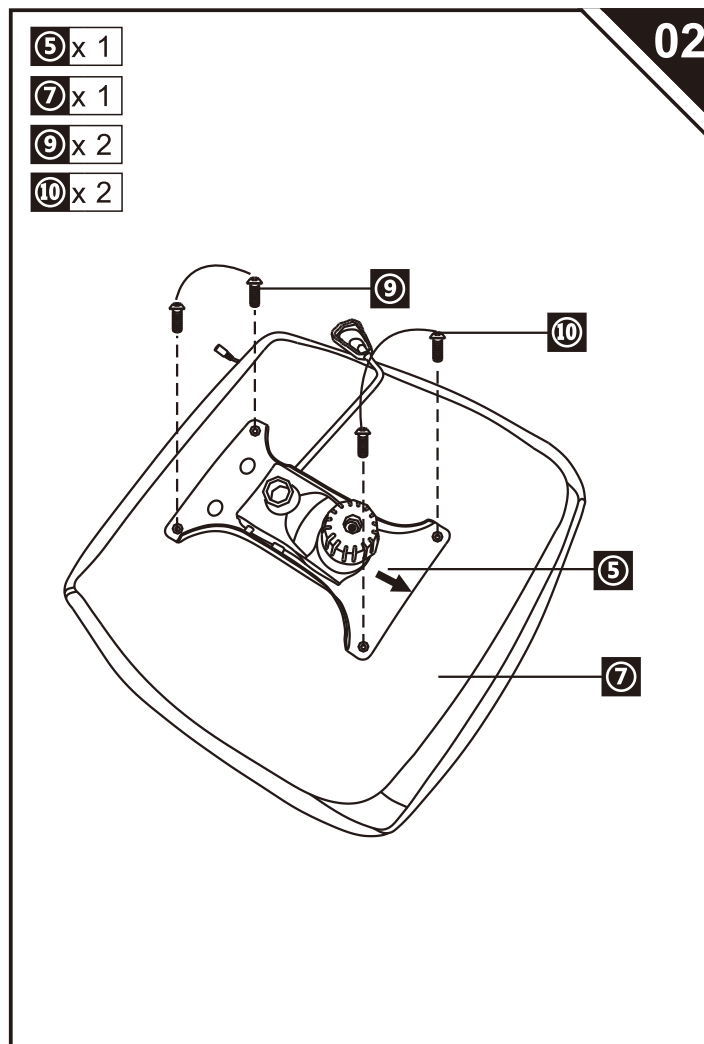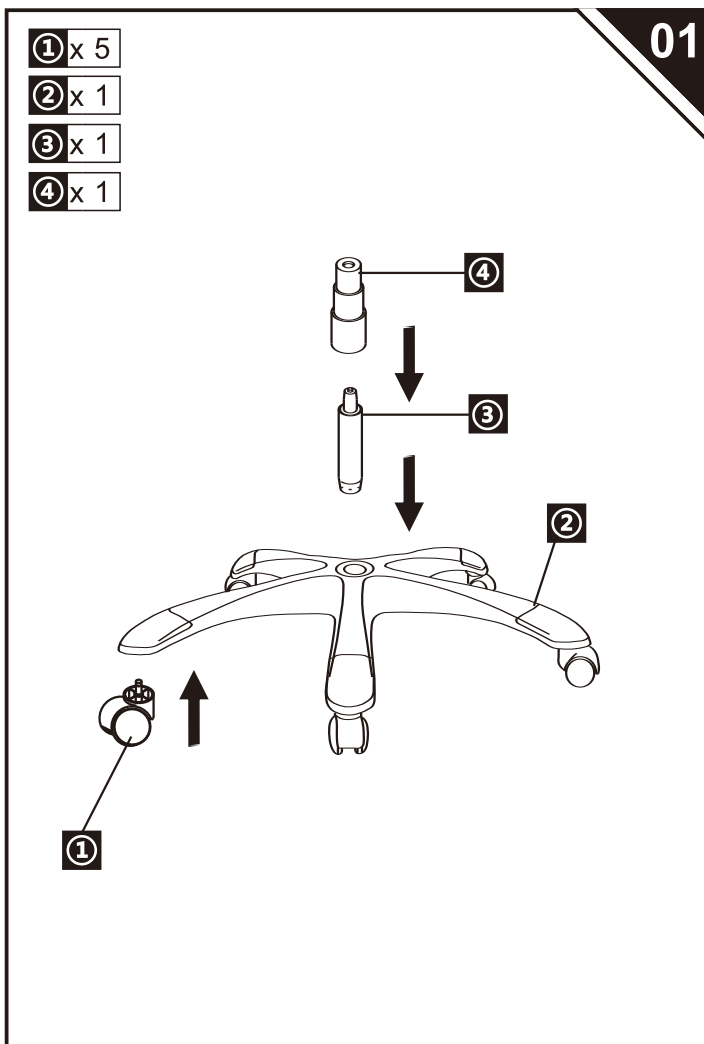


03

⑥ x 1

⑩ x 4

⑪ x 4

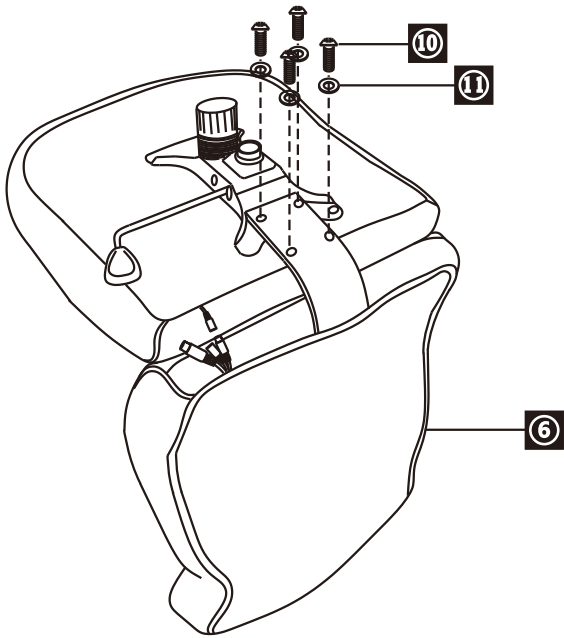


04

⑧ x 1

⑩ x 6

⑪ x 6


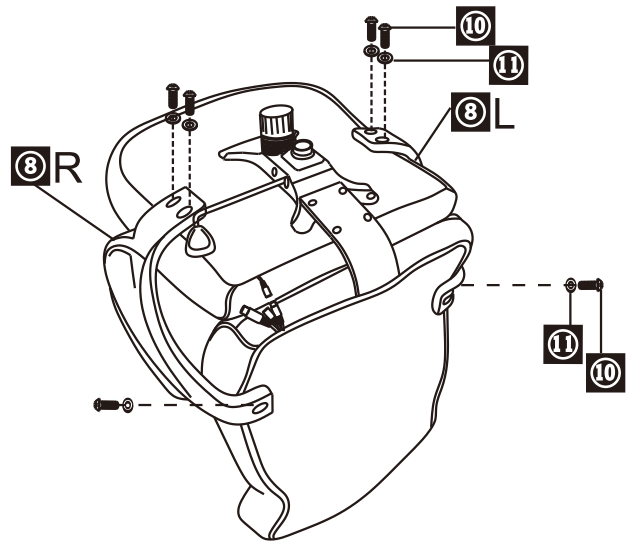


05


⑬ x 1

⑭ x 1

Done

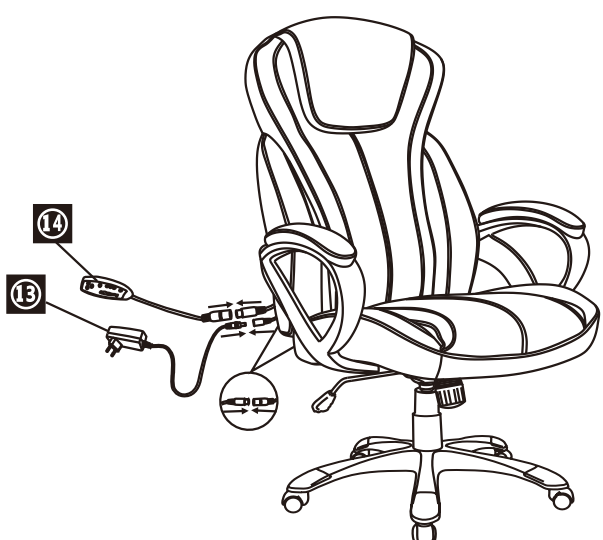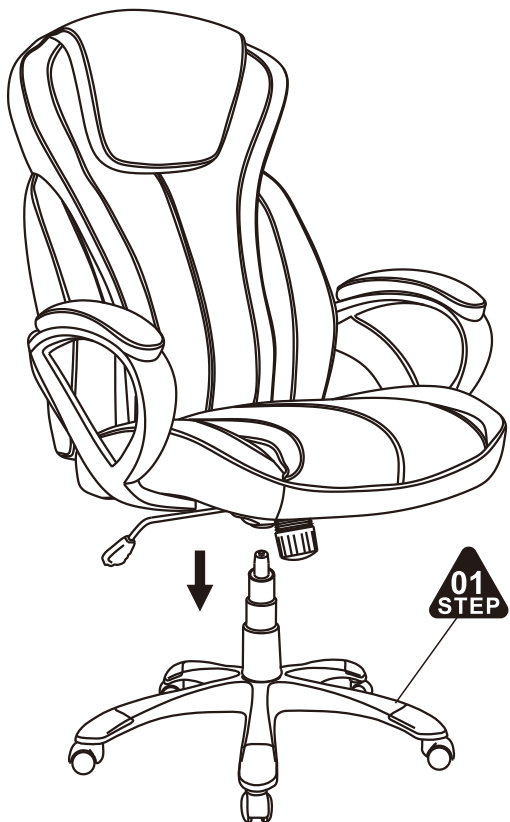

## Functional Description of Massager

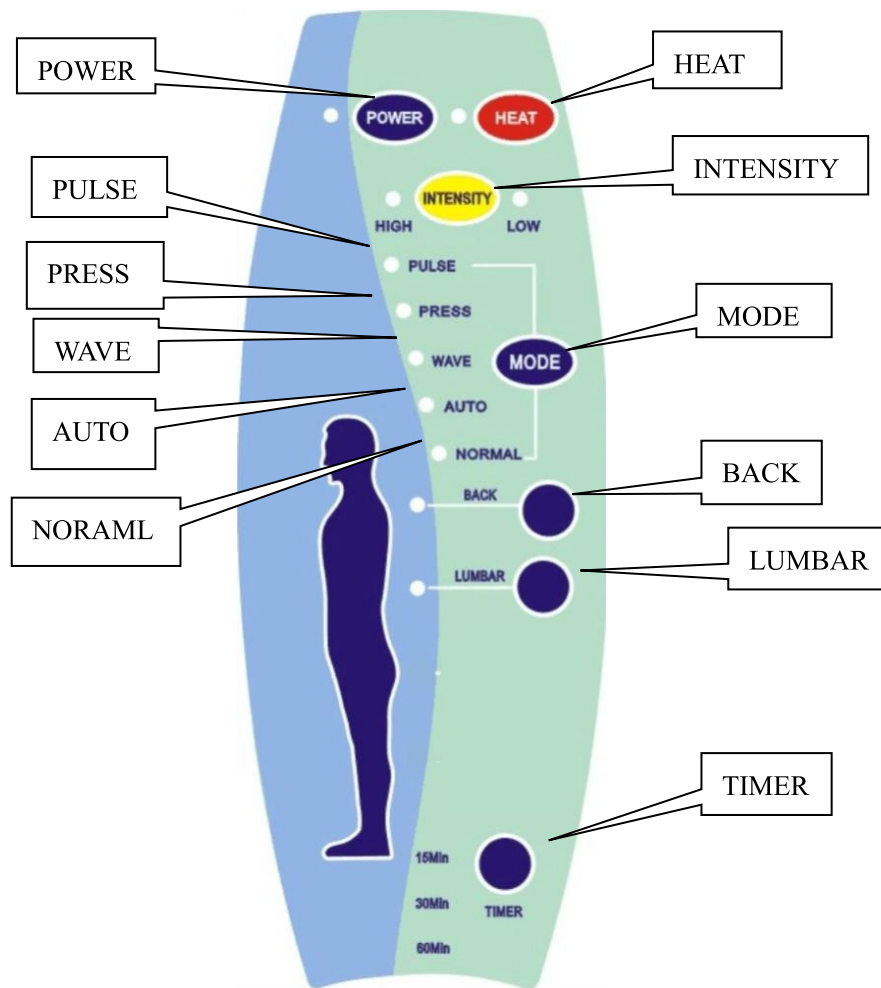

This massager is in 4-point, composed of a manual control board, wire rod and motor. It is available in 5 functional modes, and is provided with manual/automatic function, heat, time control and strong/weak control function.

### I. Specification of Massager

1. The required input voltage of the massager is 220V,50Hz.
2. The required output voltage of the massager is DC12v, 1.2A.

### II. Graphic presentation of Controller

1. POWER: turn on/off selection key

2. HEAT: heating on/off key
3. INTENSITY: strong/weak selection key.
4. MODE: working mode selection key
5. BACK: back massage function selection key
6. LUMBAR: lumbar massage function selection key
7. TIMER: set working time key

### **III. Operating Instructions**

1. Insert the power into the DC socket
2. Press the POWER key to start the unit, when the unit will enter the first mode to run for 15min in the medium step, with all the corresponding indicators illuminated.
3. Press the HEAT to turn on the heating function.
4. Press the TIMER key, the unit's control time will switch between 15min, 30min and 60min.
5. Press the FUNCTION key to select different working modes (PULSE, PRESS, WAVE, AUTO, NORMAL)
6. Press the INTENSITY key to select the high and low the intensity of vibration.
7. Press the BACK and LUMBAR key will to massage the different places of the body

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it