 


Vinsetto

INcbd042V01_UK

921-260_921-260V70_921-260V71

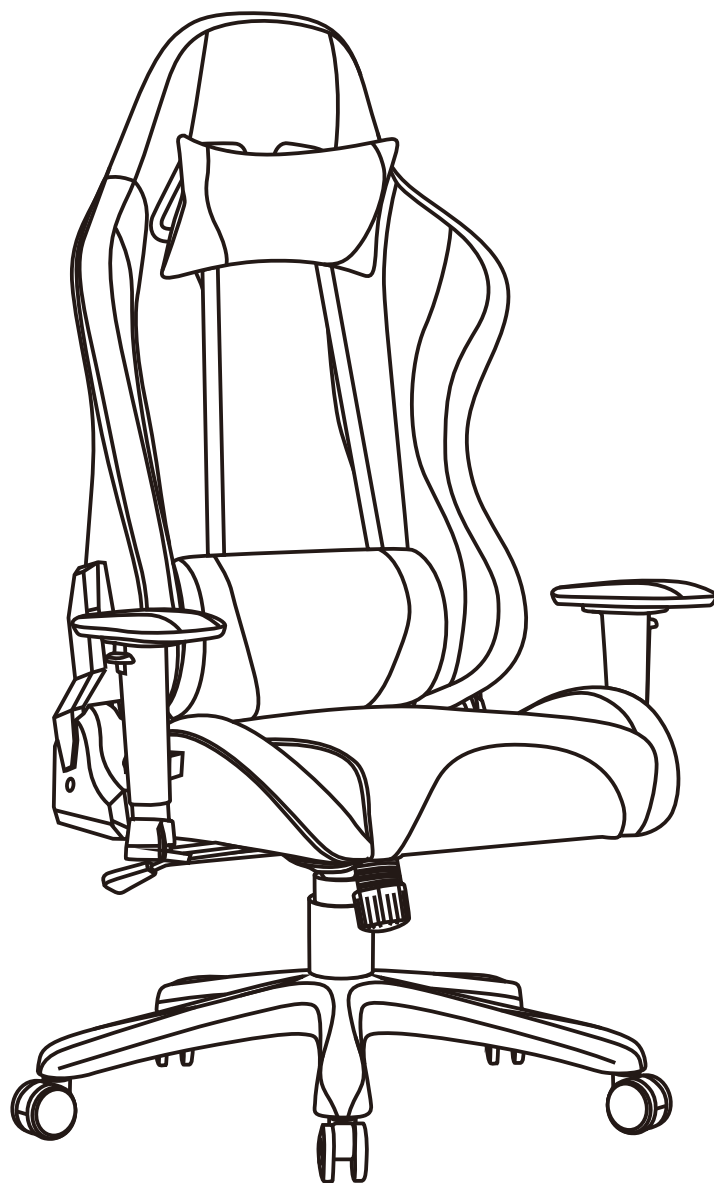

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

 
ASSEMBLY INSTRUCTION

OFFICE CHAIR

IMPORTANT-KEEP THIS INFORMATION FOR YOUR SUBSEQUENT CONSULTATION: READ CAREFULLY

SAFETY INFORMATION

- Maximum weight: 120 KG
- To prevent the chair falling, make sure that the weight is evenly distributed.
- Remove all parts from the box and make sure all parts are included before assembly.
- Keep your feet always on the floor and do not press your head on the headrest when you recline the chair.
- When you adjust the backrest, make sure your fingers are safe and out of harm's way.
- To avoid damage, never pull fast and strongly in your house.
- This chair is designed to sit only and nothing else.
- Don't use it as a base or as a ladder.
- Don't sit in the arms of the chair.
- This chair is designed to seat only one person at same time.
- If some parts are missing, damaged or worn, stop using it immediately.
- Avoid direct sunlight on the chair so that the plastic components won't become brittle.

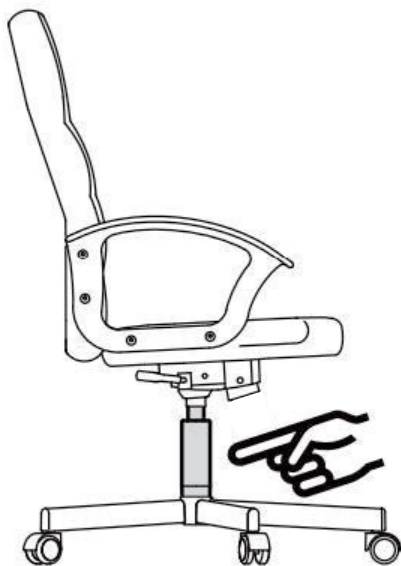

MAINTENANCE INSTRUCTIONS

- Clean with vacuum cleaner.
- Wipe with a fabric dampened with water.

 
Warning! The replacement and repair of the components for the adjustment of the height of the chair with accumulators of energy must be carried out only by qualified personnel.

Importer


MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden Lane South
Perivale, UB6 7RH

<https://www.aosom.co.uk>


Made in China

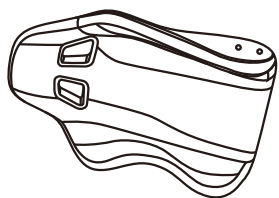


A x 1

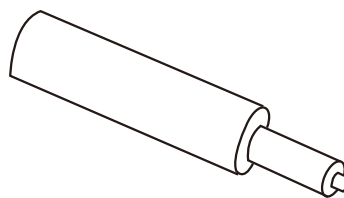 

I x 1

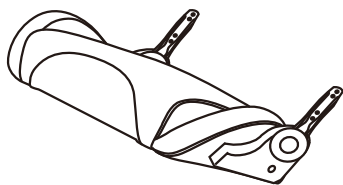 


B x 1

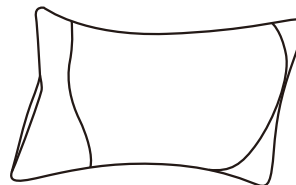 


J x 1



 C x 1

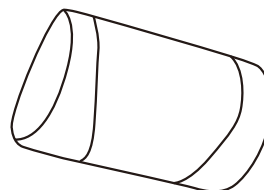


K x 1

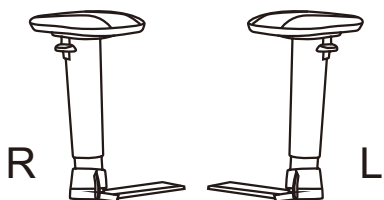 

D x 1



 L x 12

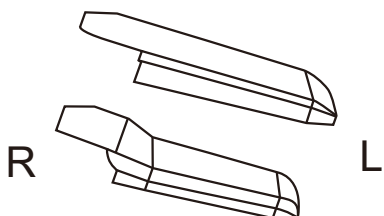


E x 1

M8*25



 M x 4

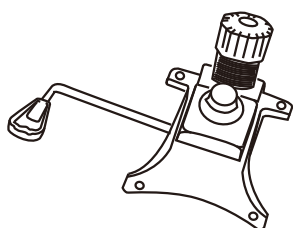


F x 1

M8*20



 N x 2

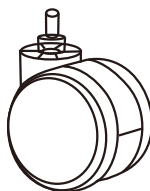


G x 5

M5*10




 O x 4

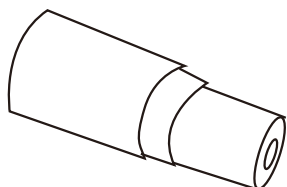

H x 1

 M6











P x 1

M5




        Q x 1

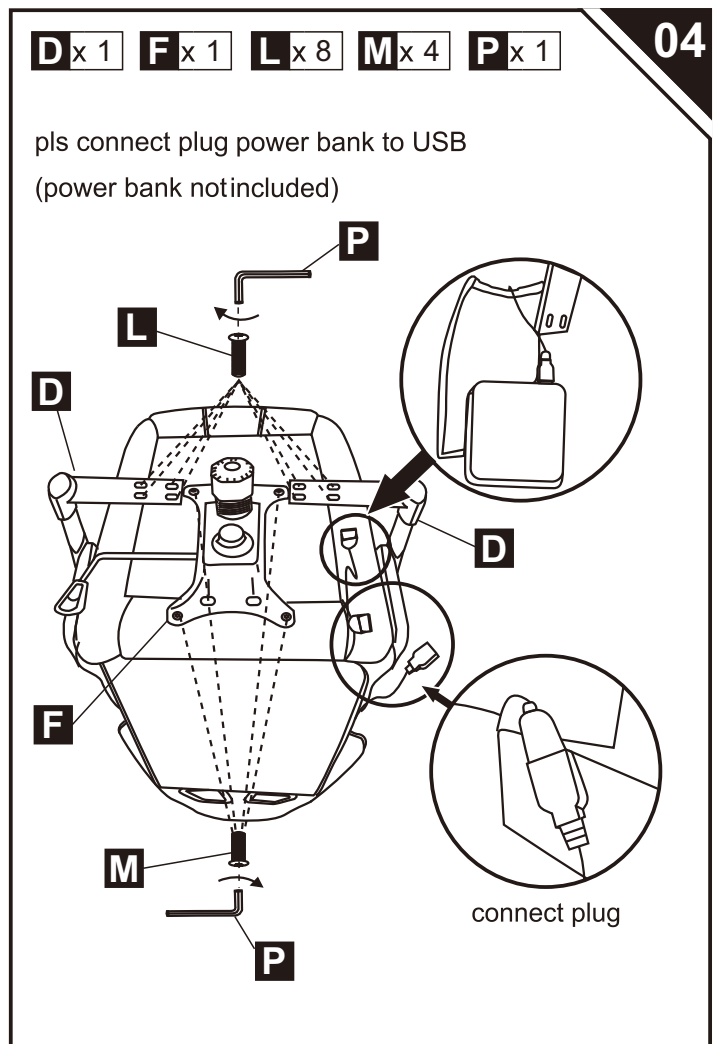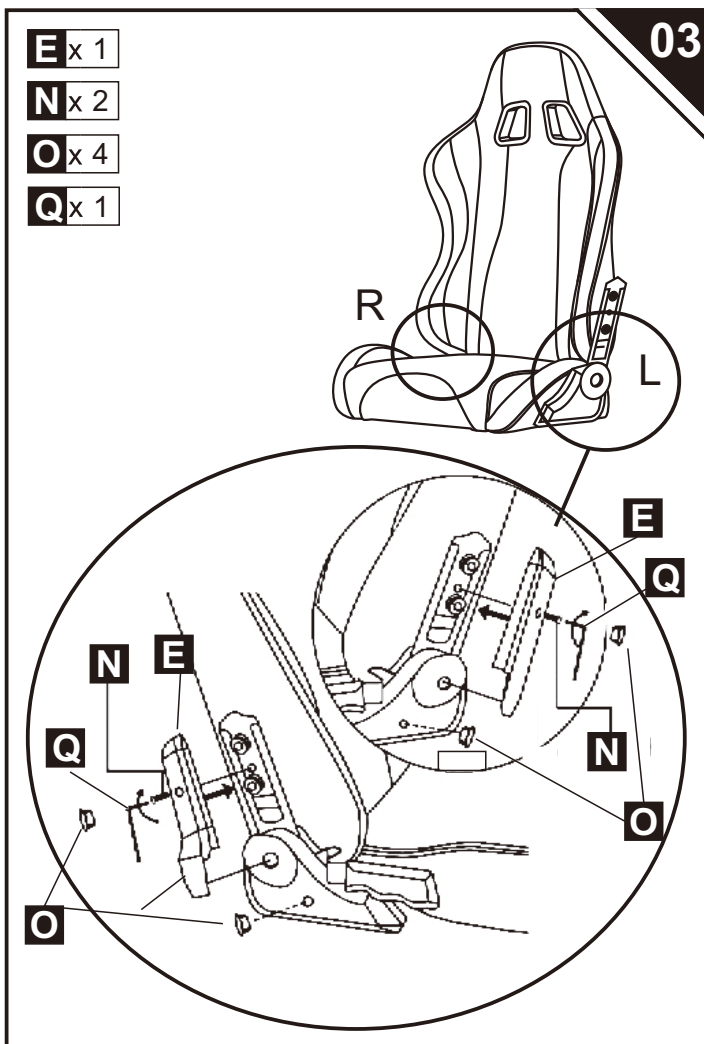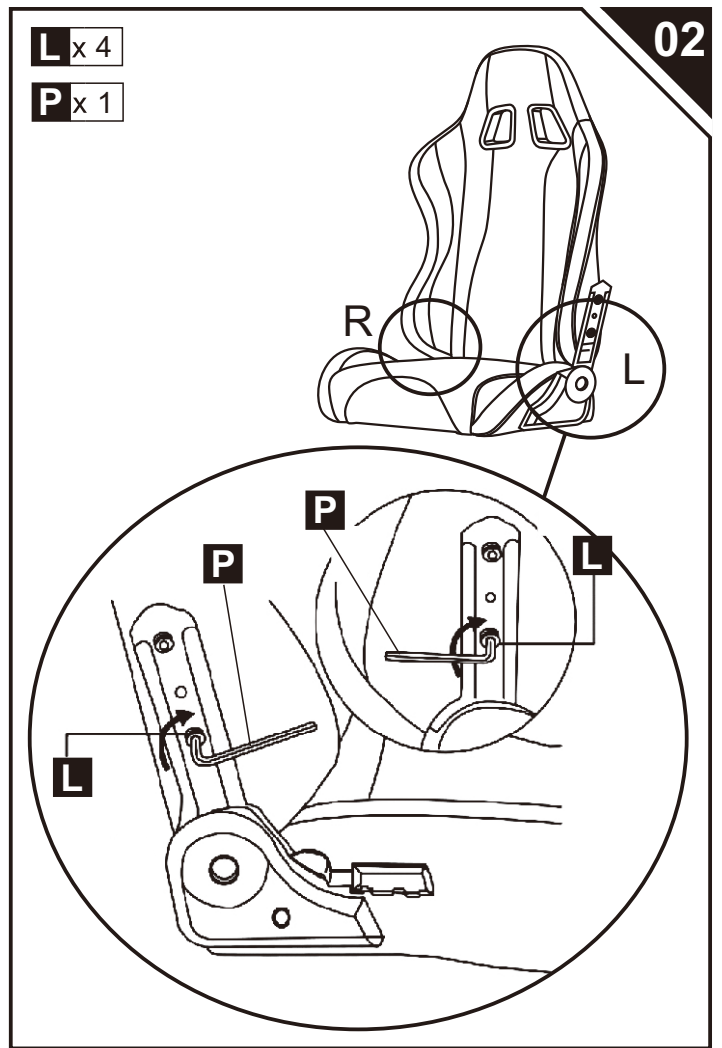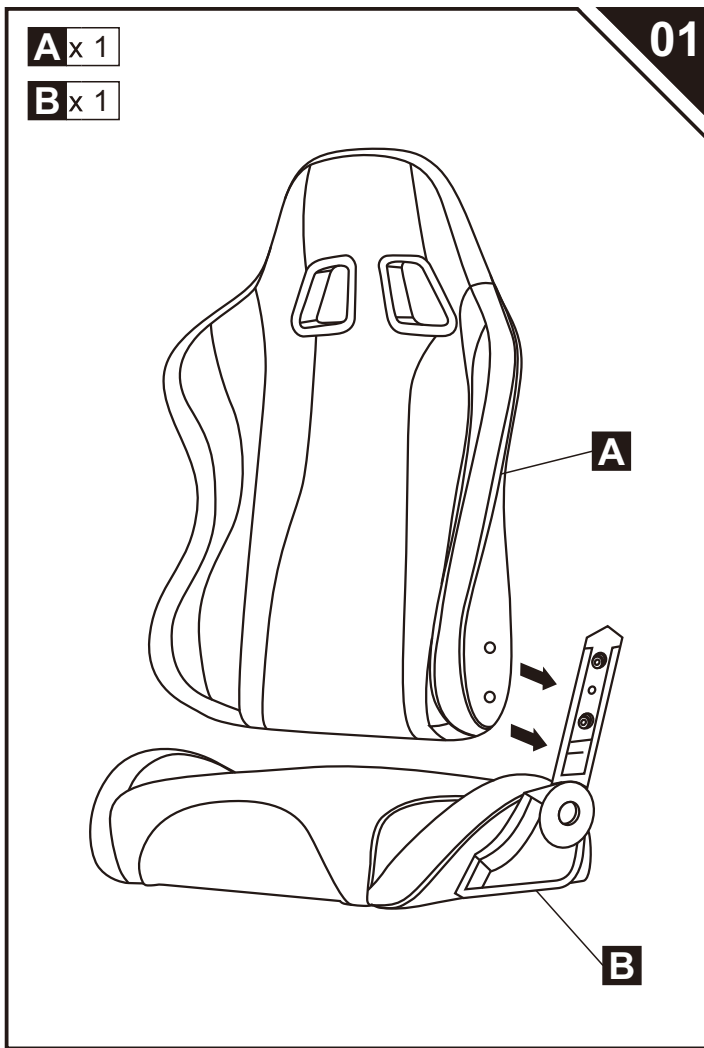

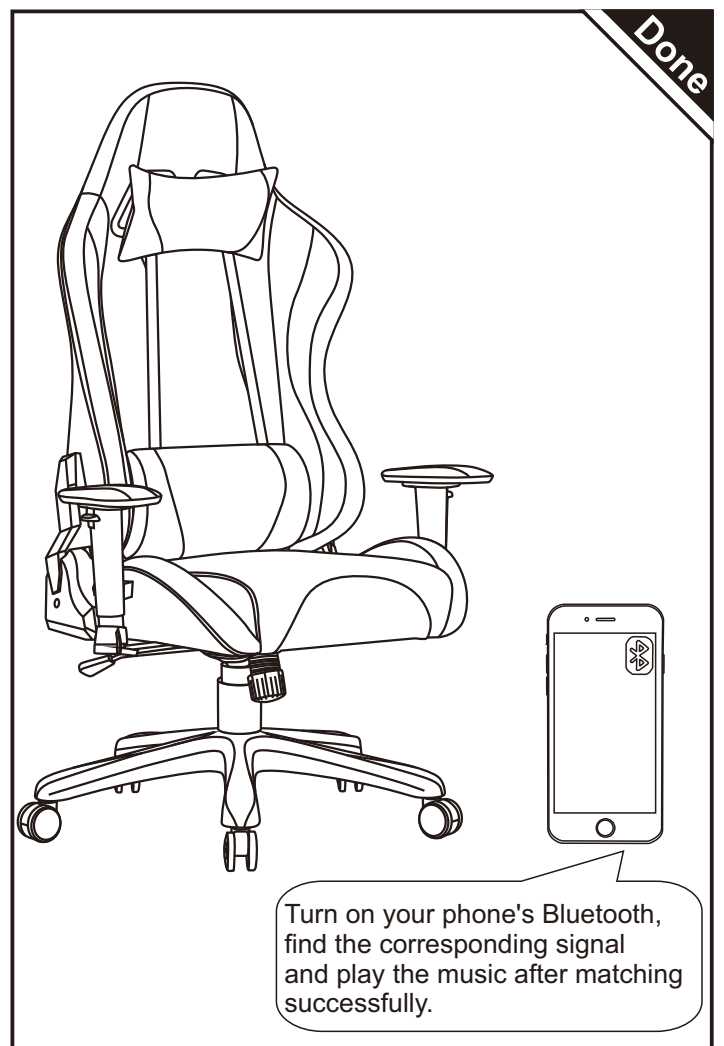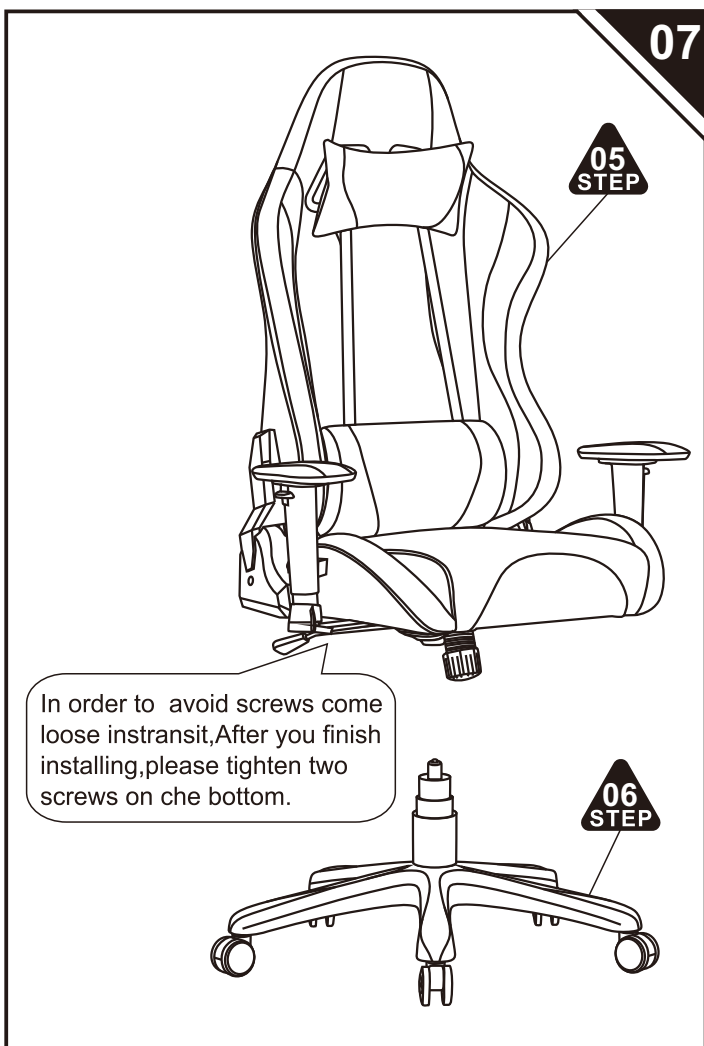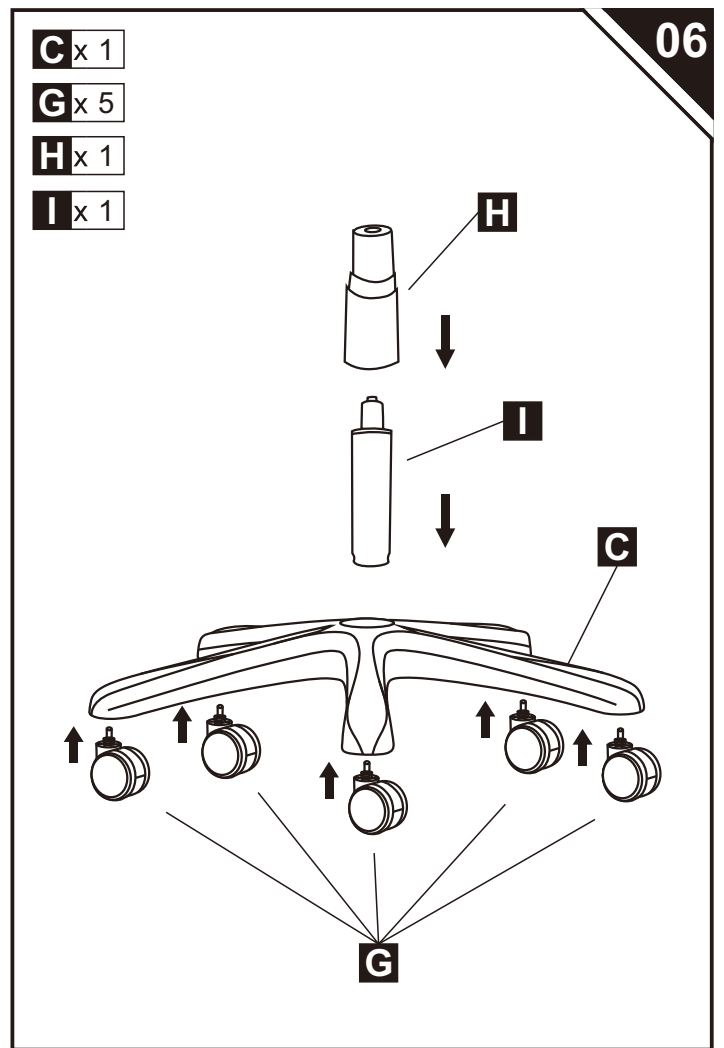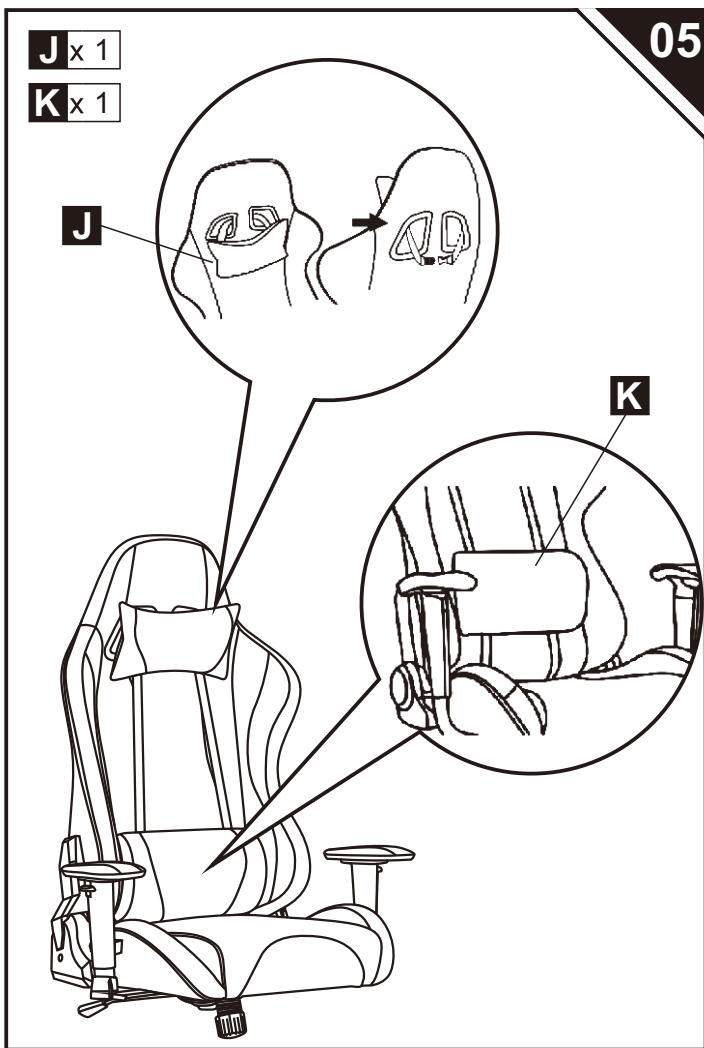

LED Remote Control

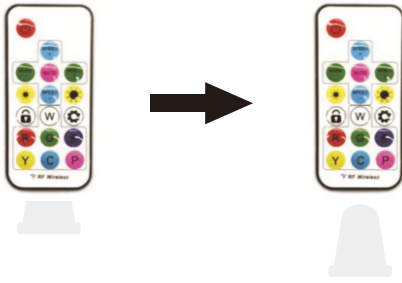 

For remote to operate, pls remove the disposable tag.

17 Keys Mini-RF controller operating instructions



1. Features:

1. RF Remote control, long distance, mini size, wire connection is simple and very easy to use;
2. Support almost every kind of one-wire LED-DRIVER-IC ;
3. With 200 kinds of patterns, which are vivid and beautiful;
4. Each controller can control up to 2048 pixels;
5. With user setting saving functionality;
6. Brightness adjustable.
7. Preventing reverse connection of power supply.

2. Remote Controller

1. Functions Of Each Button:

ON/OFF	AUTO	SPEED UP	SPEED DOWN	MODE UP	MODE DOWN	BRIGHTNESS UP	BRIGHTNESS DOWN	
MATCH	SETTING	RED	GREEN	BLUE	WHITE	YELLOW	CYAN	PURPLE

2. Usages:

Testing	Continuously pressing the AUTO button 5 times until LED is off, release the AUTO button to into the mode of switch in red, green, blue, yellow, purple, cyan and white, witch can test the your LED.
Matching	Continuously pressing the MATCH button 5 times until LED flash in white quickly to match the Remote control with the receiving controller. Pressing the MATCH button for 5 times till LED flash in white slowly to un-match;
Reorder RGB	Differ from kinds of LED, The R G B keys may don't perfectly match to your LED, Reorder them if needed. Continuously pressing SETTING button 5 times until LED flash in white once and then turn into all white, Pressing the R button until LED is red, Pressing G button until LED is green, pressing the B button till LED is blue, then press the SETTING button once to confirm your setting;
Adjust Num of pixels	The factory default setting of the number of controlled pixel is 600. Continuously pressing the SETTING button 5 times until LED flash once and turn all white, pressing MODE+ to add pixels ,pressing MODE- to decrease pixels,(each pressing add decrease 60 pixels) then press the SETTING button to confirm your setting; Can be regulated to up to 2048 pixels, The minimum number is 300 pixels.

3. Receiving Controller:

●The receiver controller working voltage :5V—24V-supply-voltage;

●**Cautions: Please make sure the power supply voltage is match to your controller before you power it.**

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it