


ELECTRONIC SAFE

OPERATING INSTRUCTION MANUAL

1-TO PROGRAM AND CHANGE THE USER CODE

- First open the door of your safe, without turning the rotary knob. Remove the battery compartment cover on the back of the door and place the batteries (4x1.5 batteries type AA) into the battery holder correctly (Batteries included inside the safe) .
- Press the red button behind the door while the door is open, the yellow light will come on and give a short beep, please input the user code from 3-8 digits using any number from “0” to “9” within 30 seconds, then press “E” to confirm it.
- To change the user code, please repeat the same procedures as above.

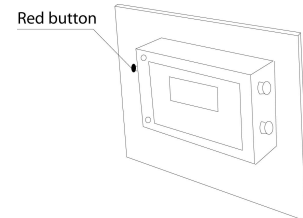

2-TO OPEN THE SAFE

Input the user code you programmed, then press “E”, the green light will come on. Please turn the knob within 5 seconds and pull out to open the safe. If the wrong digit is input, you can press “C” to cancel it.

Note: Each number pressed will make the yellow light flash with a short beep, indicating that the micro processor confirmed it. If the yellow light keeps on flashing with the beep it means the code is wrong. Three times wrong code will result in the micro processor refusing to accept the input for 20 seconds, if the wrong code is entered three times again the micro processor will refuse to accept any code for 5 minutes.

3-TO CLOSE THE SAFE

Close the door and turn the knob anti-clockwise to lock the safe.

4-HOW TO USE YOUR OVERRIDE KEYS

For your convenience, we have engineered a manual override system for your safe, we have supplied 2 sets of override keys. These keys allow you to open the safe at all times, even when the batteries are run down or when you have forgotten your code. The keyhole is situated behind the override cover plate (logo) beside the knob, take off the cover insert the override key and turn anti-clockwise, and then open the safe as usual.

5-TO REPLACE THE BATTERIES

When you input your personal code to open the safe, if the red light is on with green light, it means the batteries are low and should change the batteries. To be sure the batteries are installed correctly. Please have a test before you close the door.

Please always use alkaline batteries only.

6-INSTALLING THE SAFE

To reduce the risk of the safe being stolen it can be secured to floor, wall or in a cupboard. For your convenience, there are four holes both in the bottom and on the back of the safe: therefore it can be fixed by the expansion bolts supplied.

WARNING:

- Please keep the override keys of the safe in another safe place and do not keep inside the safe.
- In the event the keys are lost and the code is misplaced and the batteries are weak – the supplier does not take responsibility for replacing or repairing them
- If taking out batteries for a long time, you need to reset the password.

