



HOMCOM Safety Box

Manual:

First read the manual carefully before you start using the safe.

Product description:

This product is designed for moderate security risks in domestic premises and is not fire resistant.


Choose a location where this product will be convenient to use, but not easily visible to an intruder. Inside a fitted wardrobe or cupboard is often suitable. If possible, select a position where the unit can be bolted to both wall and floor as security will be much higher if it is fixed to two surfaces. Wall fixing must always be to a solid wall, not a stud wall.

Preparation for use:

This product is battery operated. Batteries are not supplied. Only use 1,5V Alkaline AA batteries. For your convenience, we have engineered a manual override system for your safe. To open the door of the safe for the first time, just remove the battery cover plate (d) (see diagram 1). You will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob (a) in a clockwise direction. This will manually open your safe. To install the batteries, just remove the battery cover plate and install the four batteries. Ensure the + and – positions are correct. The display (e) will scan the status of the electronic system automatically. If it is in order, the display will show 'good'.

Opening the safe after installing the batteries:

To open the door of the Safe, press the button 'START' (c) (see diagram 1), the display on the panel will show '____', then input one of the two sets of factory-preset codes: 0,0,0,0,0,0 (user code) or 8,8,8,8,8 (master code) immediately and confirm by pressing the button 'START'. The green light (f) will be on with the display showing 'OPEN' and open the door using the knob within 4 seconds. If you do not want the display to show your codes when you open the Safe, just press the button 'START' twice at the first time of pressing and other steps are the same.

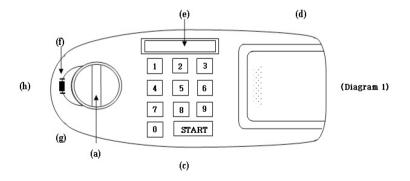

Programming the code:


The Safe can be programmed with two sets of codes. For your safety, after opening the Safe and installing the batteries, you should programme two sets of your new codes to take place of two sets of factory-preset codes.









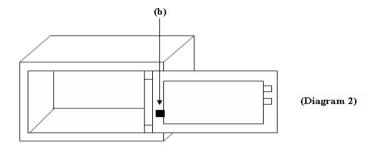

Programming the user code:

- **A.** Press the red button (b) (see diagram 2), then release it and display on the panel will show '____'.
- **B.** Press 'START' immediately.
- C. Now press your 6 bytes numbers that you wish to use as a new user code. The display will show 'IN' and your inputting numbers. It means that the new user code is confirmed.

Programming the master code:

- **A.** Press the 'START' button. The display will show '____'.
- **B.** Now input your new 6 bytes number
- **C.** Press the red button inside (B) (see diagram 2) The display will show 'IN'. It means that new master code is confirmed.

If you or an intruder uses the incorrect group of numbers, the red light (g) will be on and the display will show 'ERROR' and it will not open.

If the incorrect combination code is used 4 times consecutively, the display will show 'ERROR' and the system cannot be entered until after 3 minutes delay. The override key can however be used to open the door during this three minutes. If they key is used to open the door, the buzzer can be cleared by pressing the red button.

Battery replacement:

To test the batteries, just press the button 'START'. If the batteries are low, the display will show 'Lo-BAE', and you should replace the batteries. The Safe requires 4 X Size 'AA' (1.5V R06) batteries. Replace the old battery, the display will scan the status of the electronic lock system automatically. If it is in order, the display will show 'good'. Use of alkaline batteries is recommended.

Override key:

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the battery cover plate and take out the batteries. Your will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob in a clockwise direction. This will manually open your Safe any time. This product is supplied with 2 original keys. Further keys can be obtained by sample only from good local locksmiths. In the event of both original keys are lost you can obtain a spare key from your 'Duralock' supplier. In this case you should hand over the **key code, box code and a copy of the original invoice.** For extra safety your identification card or passport might be requested. The key code you find on your key, the box code you find on the side of your safe. We advice to write these numbers down and keep these outside of your safe for further reference. Do not keep the key in your safe. In event of battery failure you will not be able to open the safe.

