



READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

ASSEMBLY INSTRUCTION


① x 2

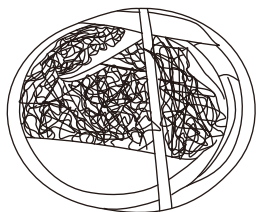


② x 4

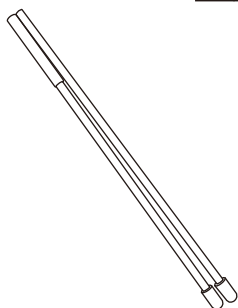




③ x 8

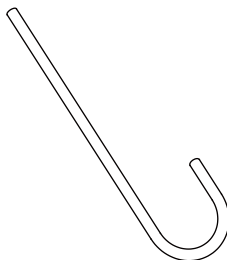

④ x 1

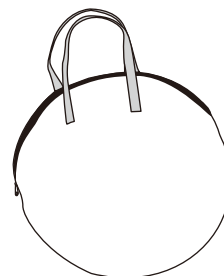


④ x 1

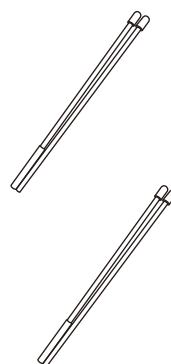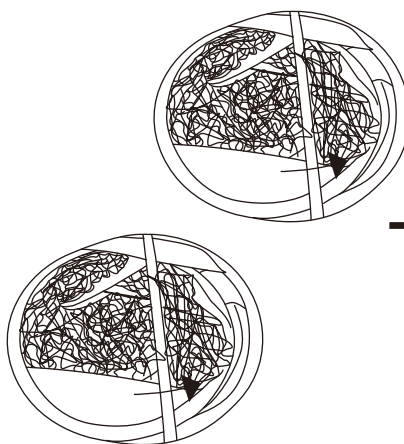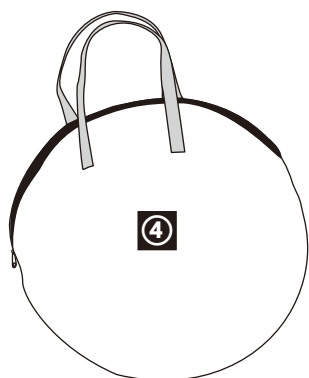

01

① x 1


② x 2

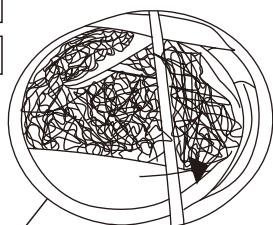

①

②

①

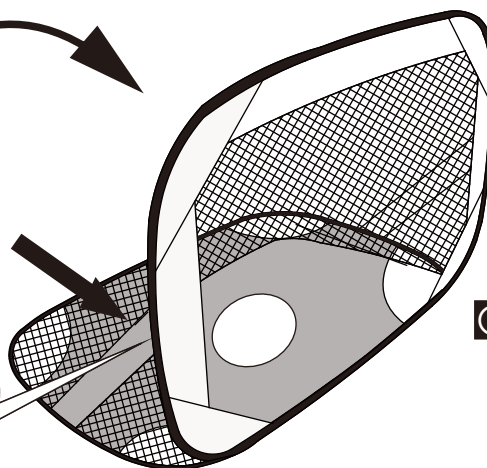

②

②

②

②

②



②

②

x2


02

③ x 4

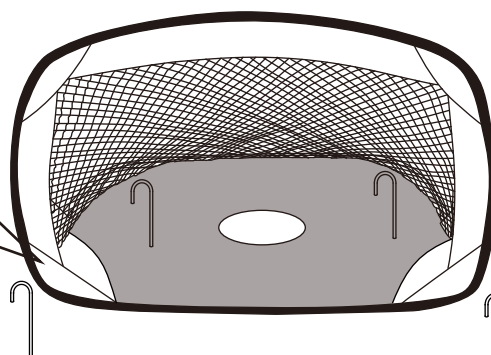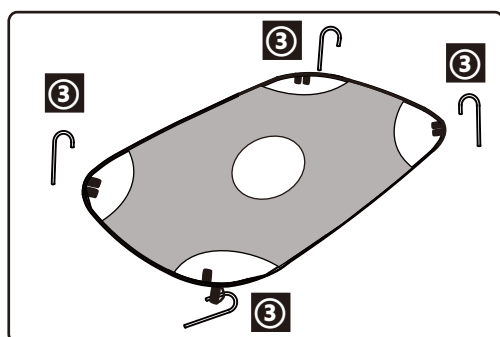


03

x2

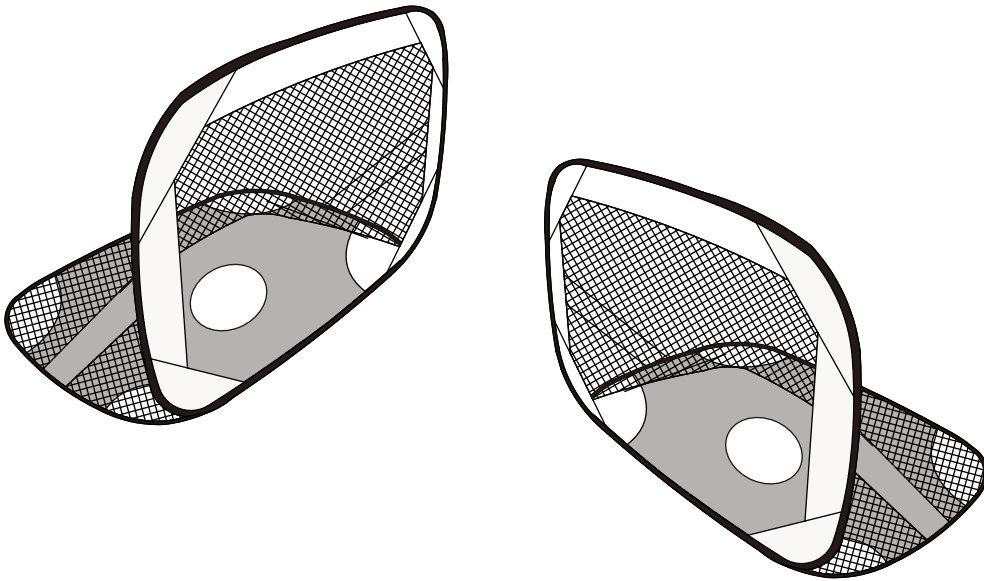


Done


Close

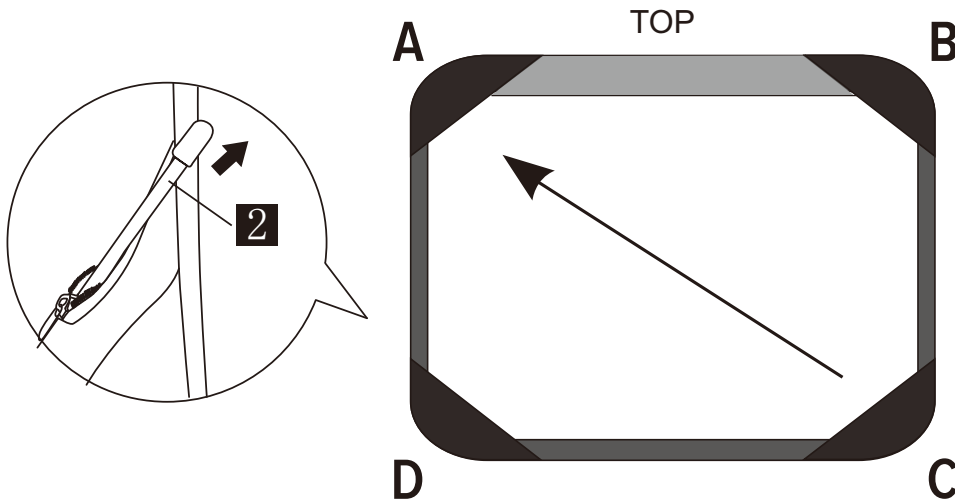


Remove the support poles and flatten the net.

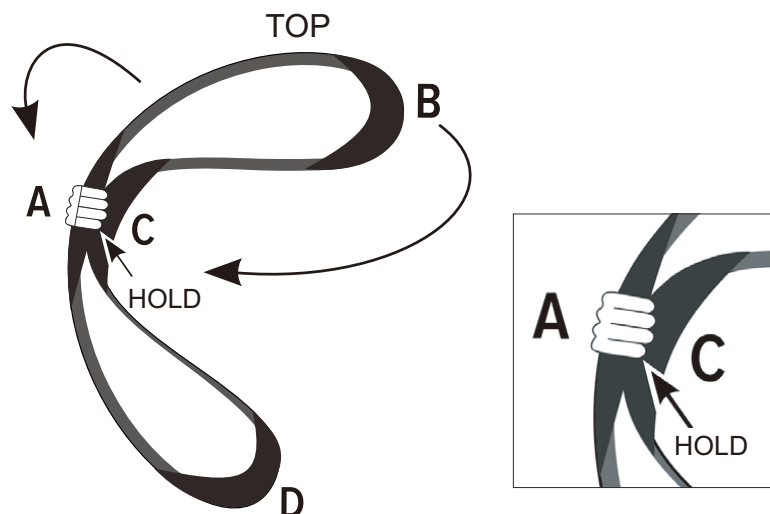


Take top corner A and pull diagonally toward corner C. Hold A and C with your right hand.

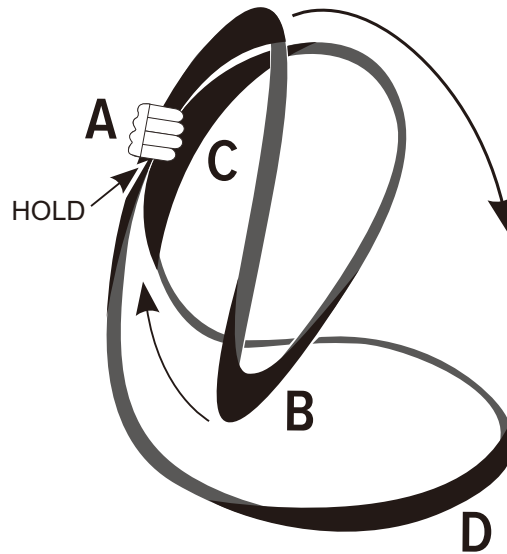

With your left hand, fold the top ring B down towards your hand holding A and C.

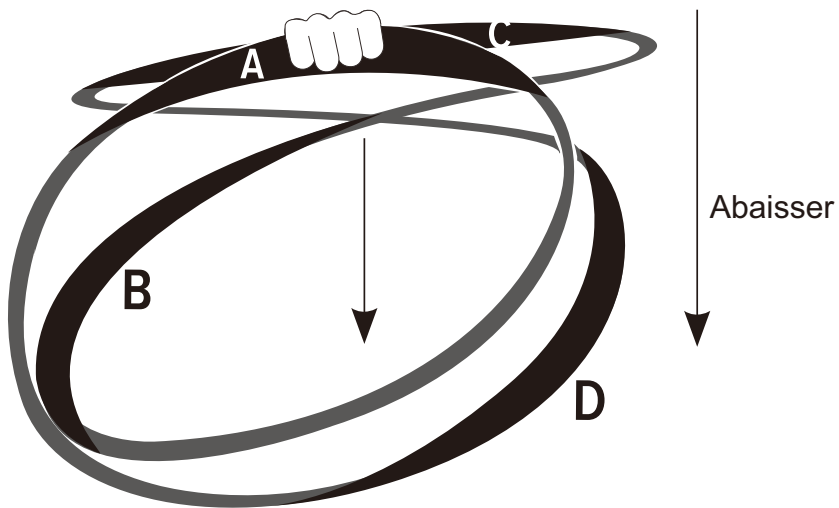

Push D against any surface and push down, allowing A to collapse over C.

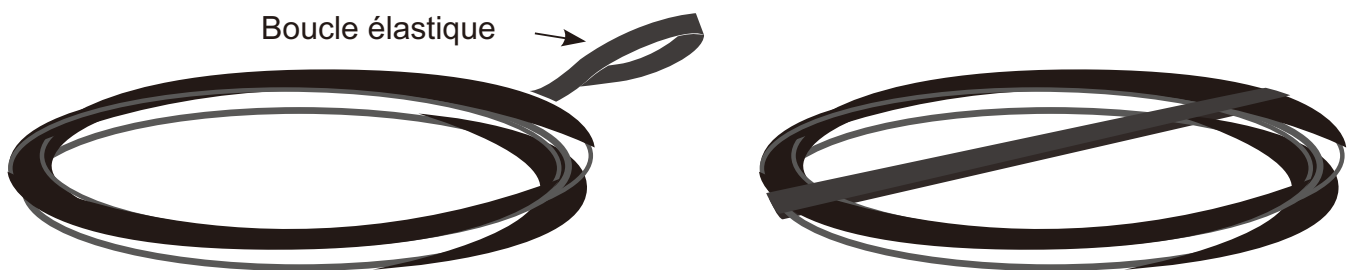

IMPORTANT: Secure with attached elastic loop. (Soccer goal should fold naturally into a circular shape.)

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it