



Instruction Manual for Electronic Safe

Notice: When first opening, please take off the cover (on the middle of keypad), then take out the emergency key from the plastic bag. Insert the key into the lock hole, turn the key, then turn the knob to open the door. After that, put (4) 1.5V batteries in the battery box (on the back of the door), then leave the door open and take the key out.

● **Change or Set the personal code**

Press the reset button, which is located on the left-side of back of the door. The yellow light will be on, and then input any 3-8 digits you want, press “A” or “B” to confirm. You will hear two “beeps”, indicating that the new code has been accepted and stored.

If the yellow light flashes and beeps three times, it means the new code is invalid and you will need to try again.

● **To open the safe**

Input your personal code. You will hear one beep and see the yellow light flashing. Then press “A” or “B” to confirm, the green light will be on, rotate the knob to open the door.

If the code you input is incorrect, you will hear 5 “beeps”.

If you input three incorrect codes, the keypad will be locked for 20s. You will not be able to try again until those 20 seconds are up.

● **Close the safe**

Close the door, and then turn the knob anti-clockwise. The control systems will secure the safe and the door will be locked.

● **Emergency status**

- (1) If you forgot the code, use the emergency key to open the safe, and then press the red button (on the left-side of back of door) to reset the code.
- (2) If both the red light and green light are on, that is indicating that you should change the batteries. Please test before you close the door.

Please keep the emergency keys out of the safe.