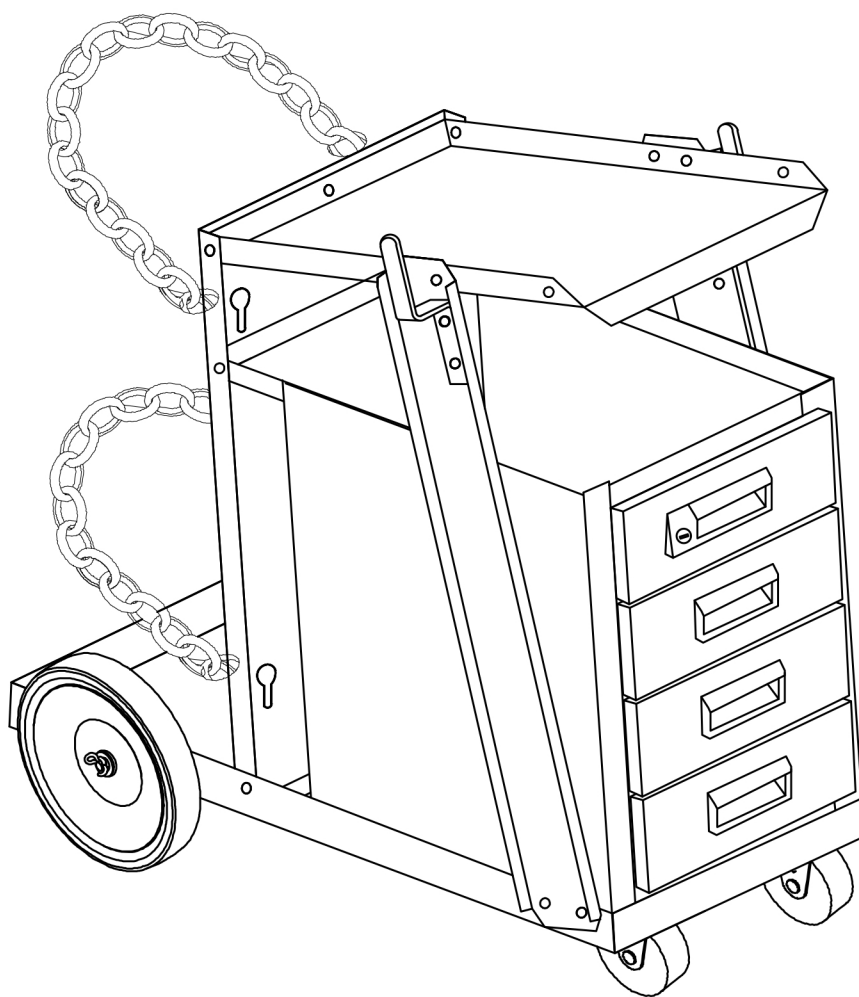 


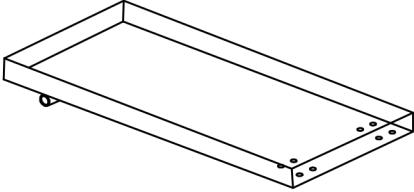 
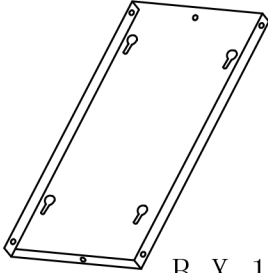 
 
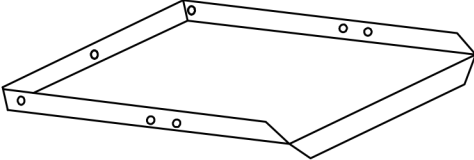 
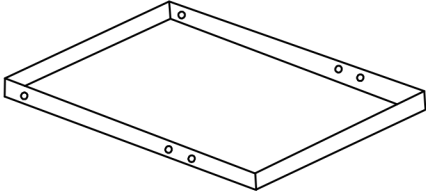 
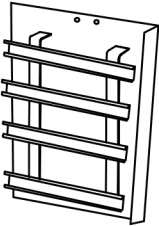 
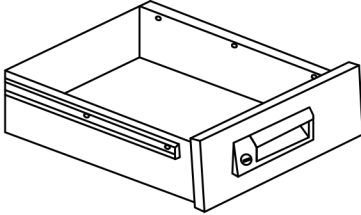 
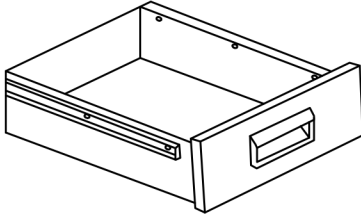 


 
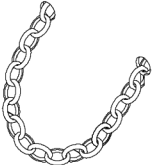 
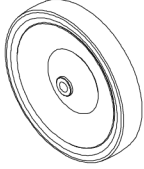 
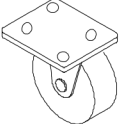 

 

 



 
B20-061




Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS

| | |
|---|--|
|  |  |
| A X 1 | B X 1 |
|  |  |
| C X 2 | D X 1 |
|  |  |
| E X 1 | F X 2 |
|  |  |
| S x 1 | T x 3 |


| | | | |
|---|---|---|---|
|  |  |  |  |
| G x 1 | H x 2 | I x 2 | J x 2 |
|  |  |  |  |
| K x 2 | L x 2 | N x 4 | M6*12 O x 32 |
|  |  |  |  |
| P x 32 | Q x 32 | R x 32 | W x 2 |

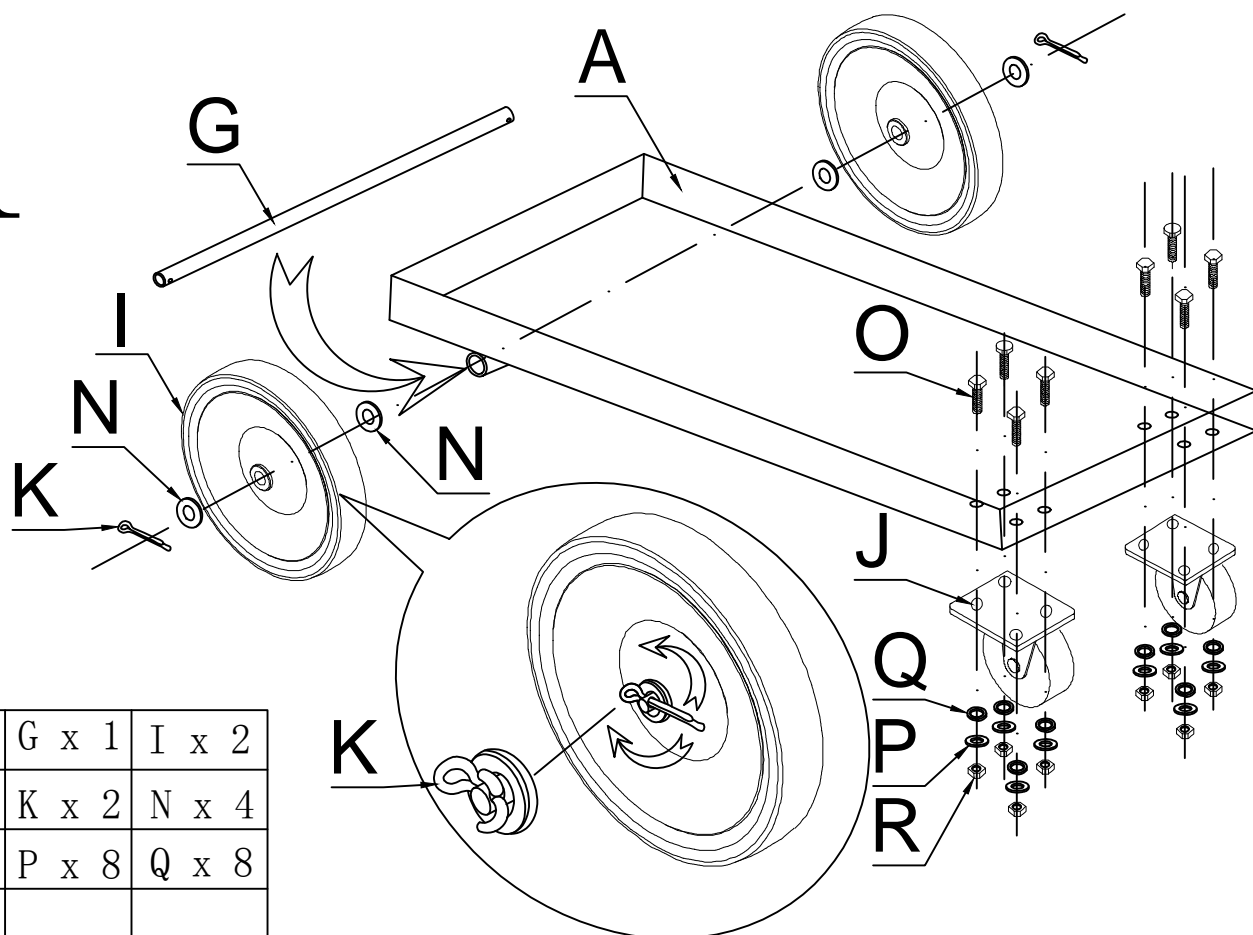 1




| | | |
|-------|-------|-------|
| A x 1 | G x 1 | I x 2 |
| J x 2 | K x 2 | N x 4 |
| O x 8 | P x 8 | Q x 8 |
| R x 8 | | |

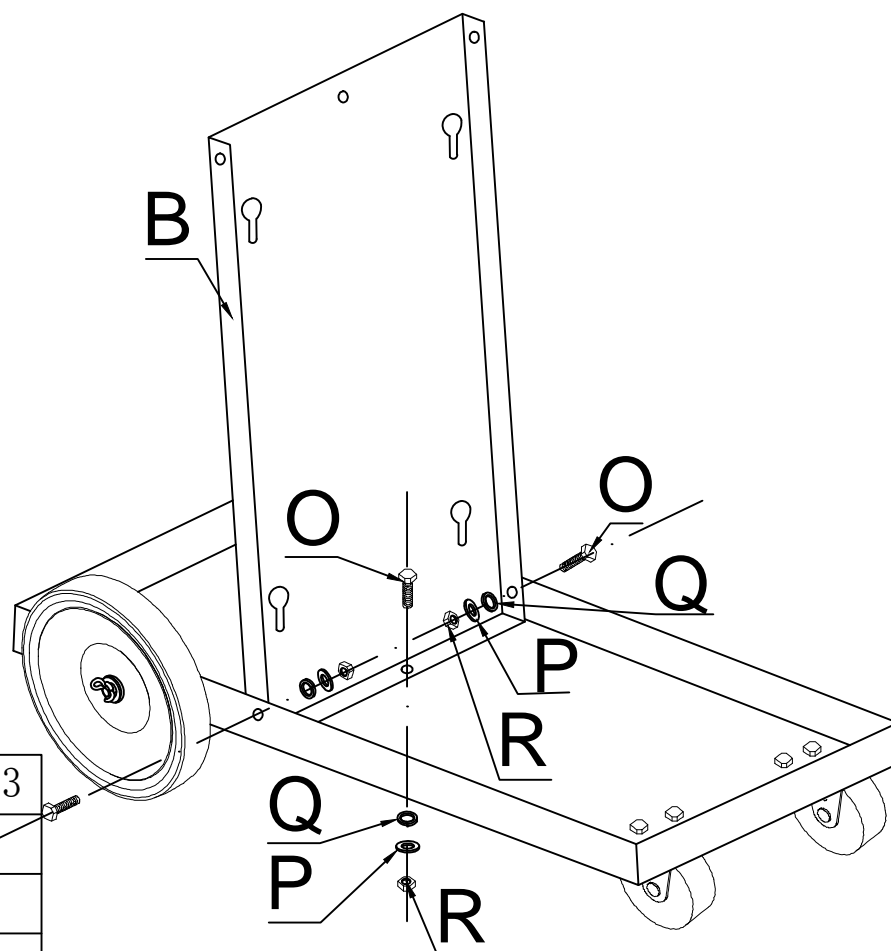 2




| | | |
|-------|-------|-------|
| B x 1 | O x 3 | P x 3 |
| Q x 3 | R x 3 | |
| | | |
| | | |

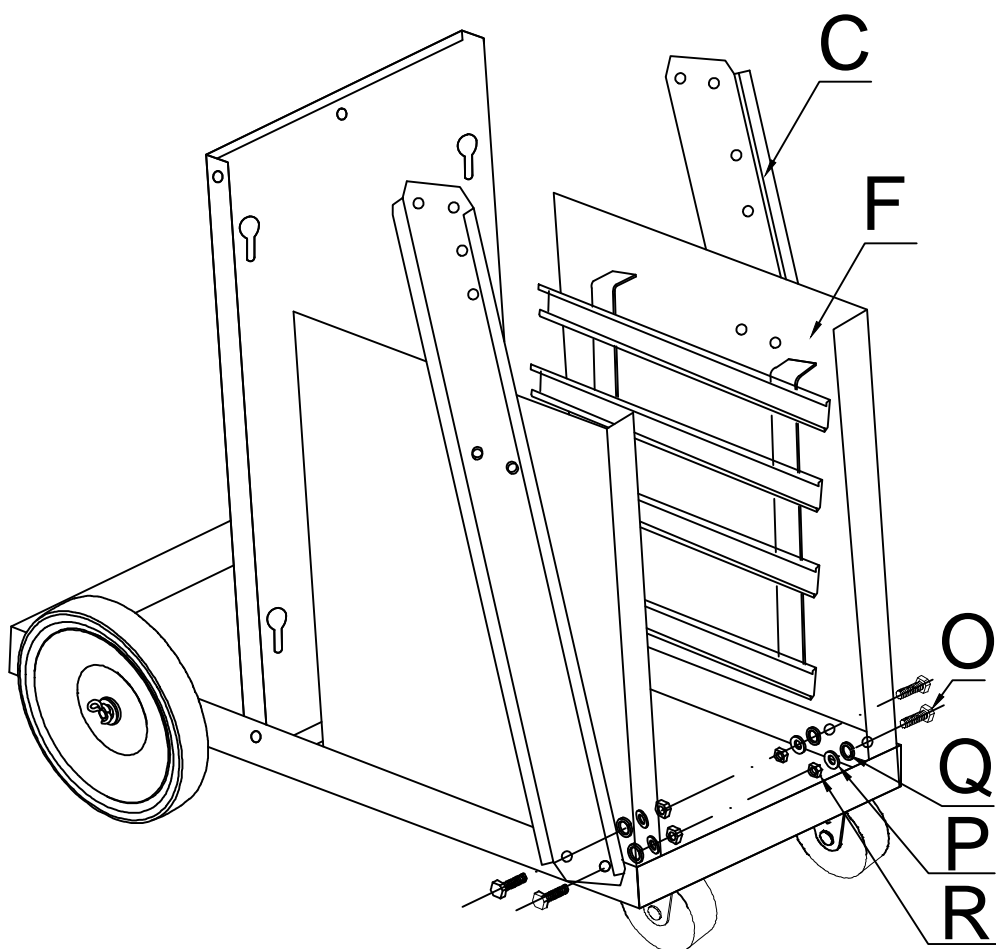 3




| | | |
|-------|-------|-------|
| C x 2 | F x 2 | O x 4 |
| P x 4 | Q x 4 | R x 4 |
| | | |
| | | |

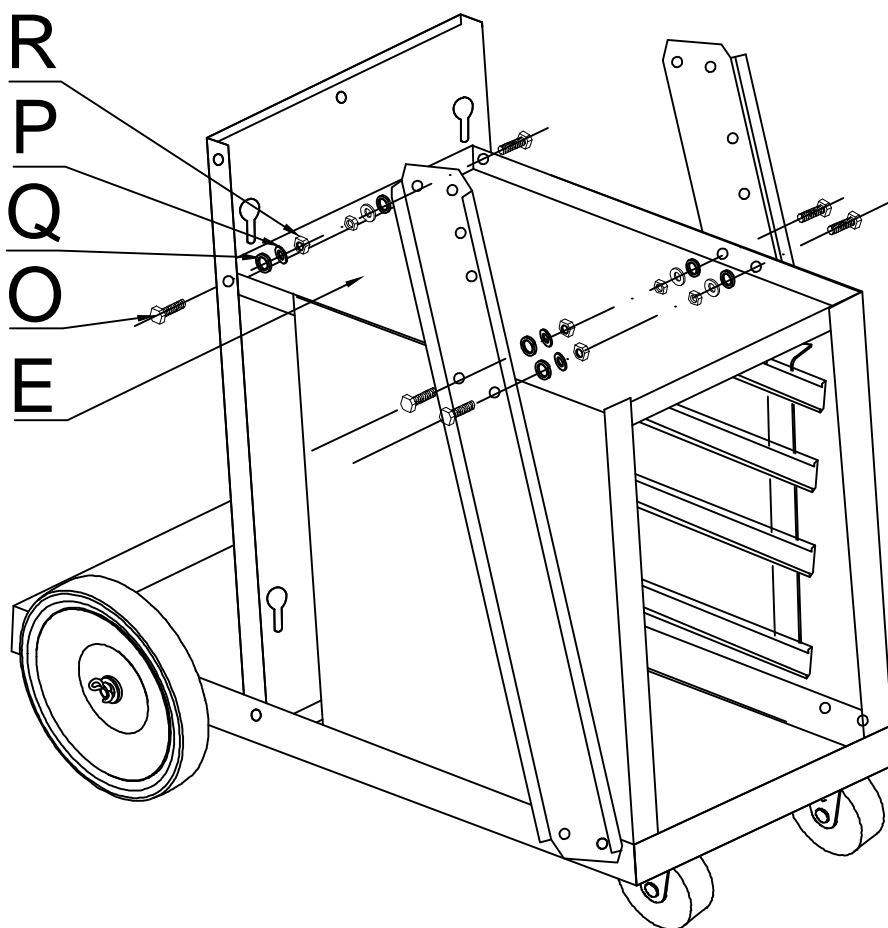 4




| | | |
|-------|-------|-------|
| E x 1 | O x 6 | P x 6 |
| Q x 6 | R x 6 | |
| | | |
| | | |

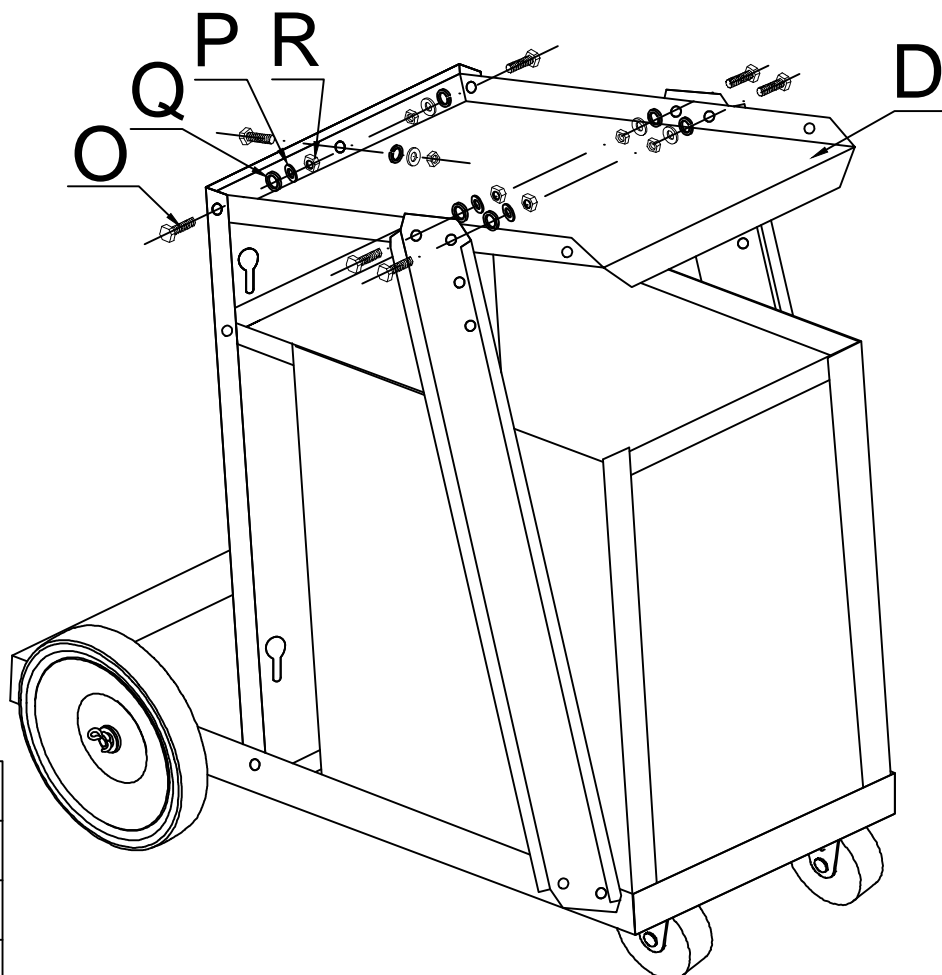 5




| | | |
|-------|-------|-------|
| D x 1 | O x 7 | P x 7 |
| Q x 7 | R x 7 | |
| | | |
| | | |

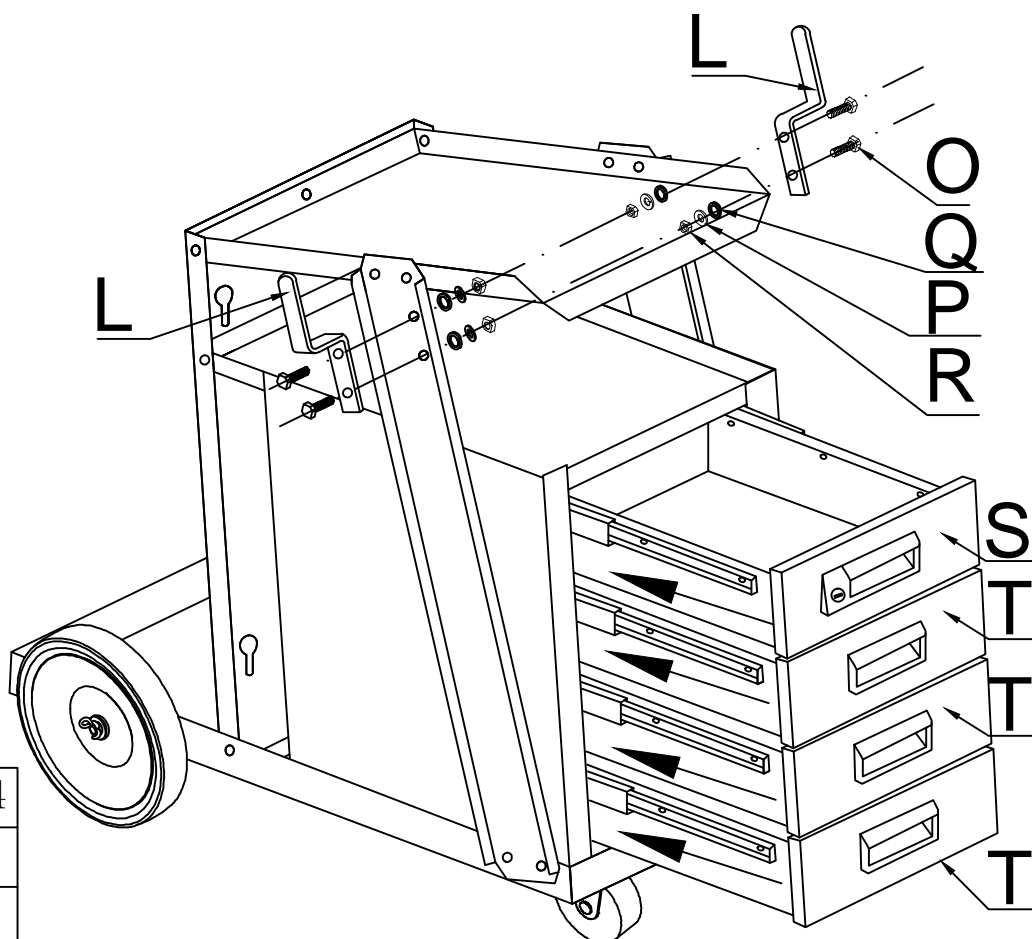 6



| | | |
|-------|-------|-------|
| L x 2 | O x 4 | P x 4 |
| Q x 4 | R x 4 | S x 1 |
| T x 3 | | |
| | | |

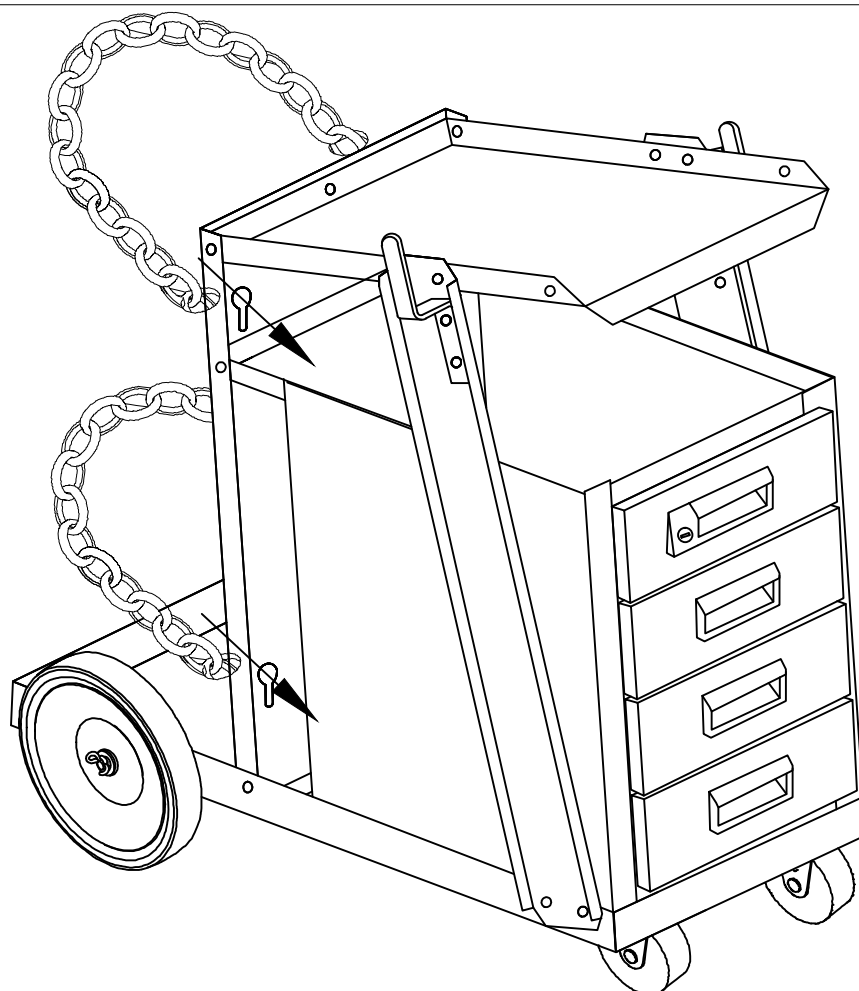 7



| | | |
|-------|--|--|
| H x 2 | | |
| | | |
| | | |
| | | |

8

