


836-161/836-161BK


C000000

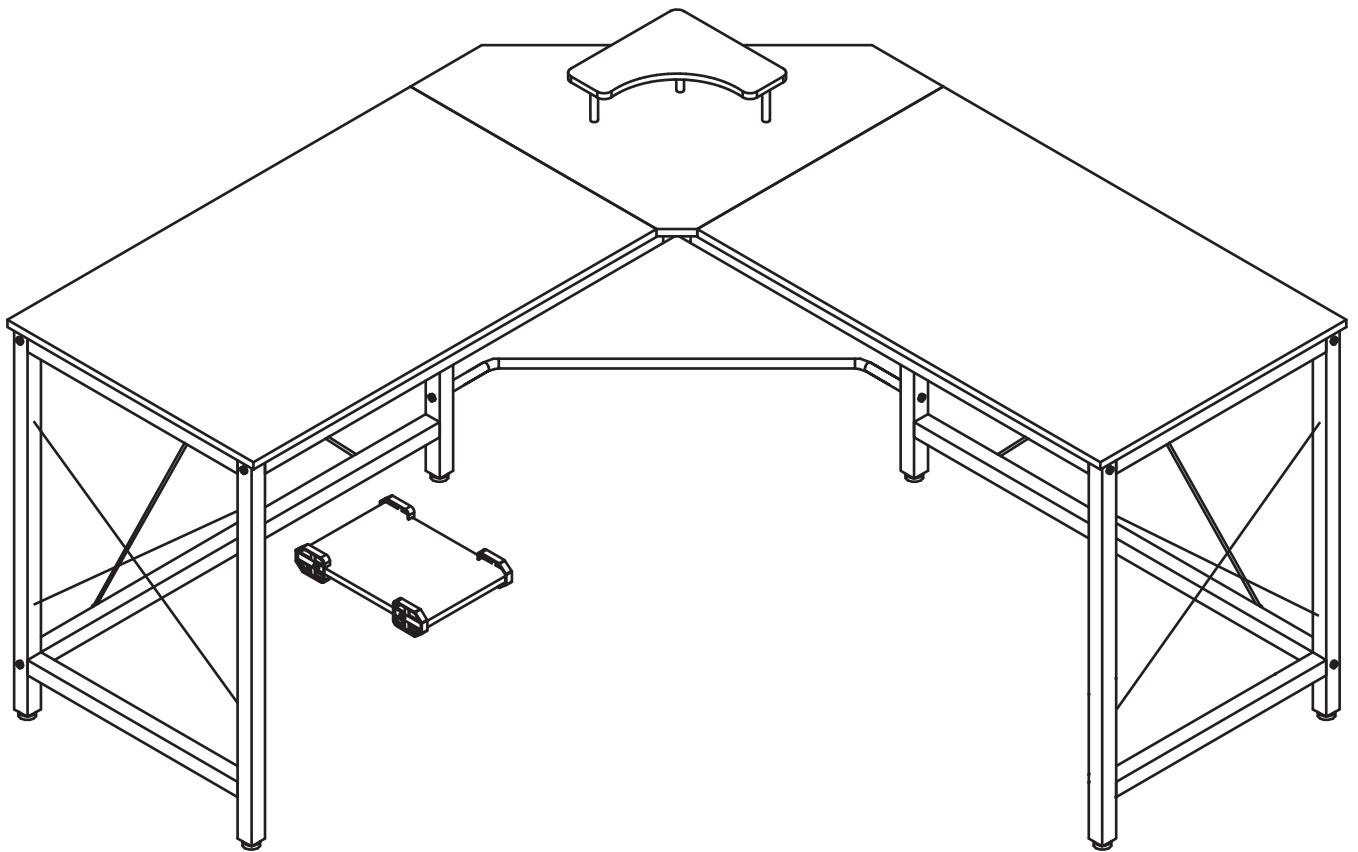

Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING I NSTRUCTIONS

Parts List





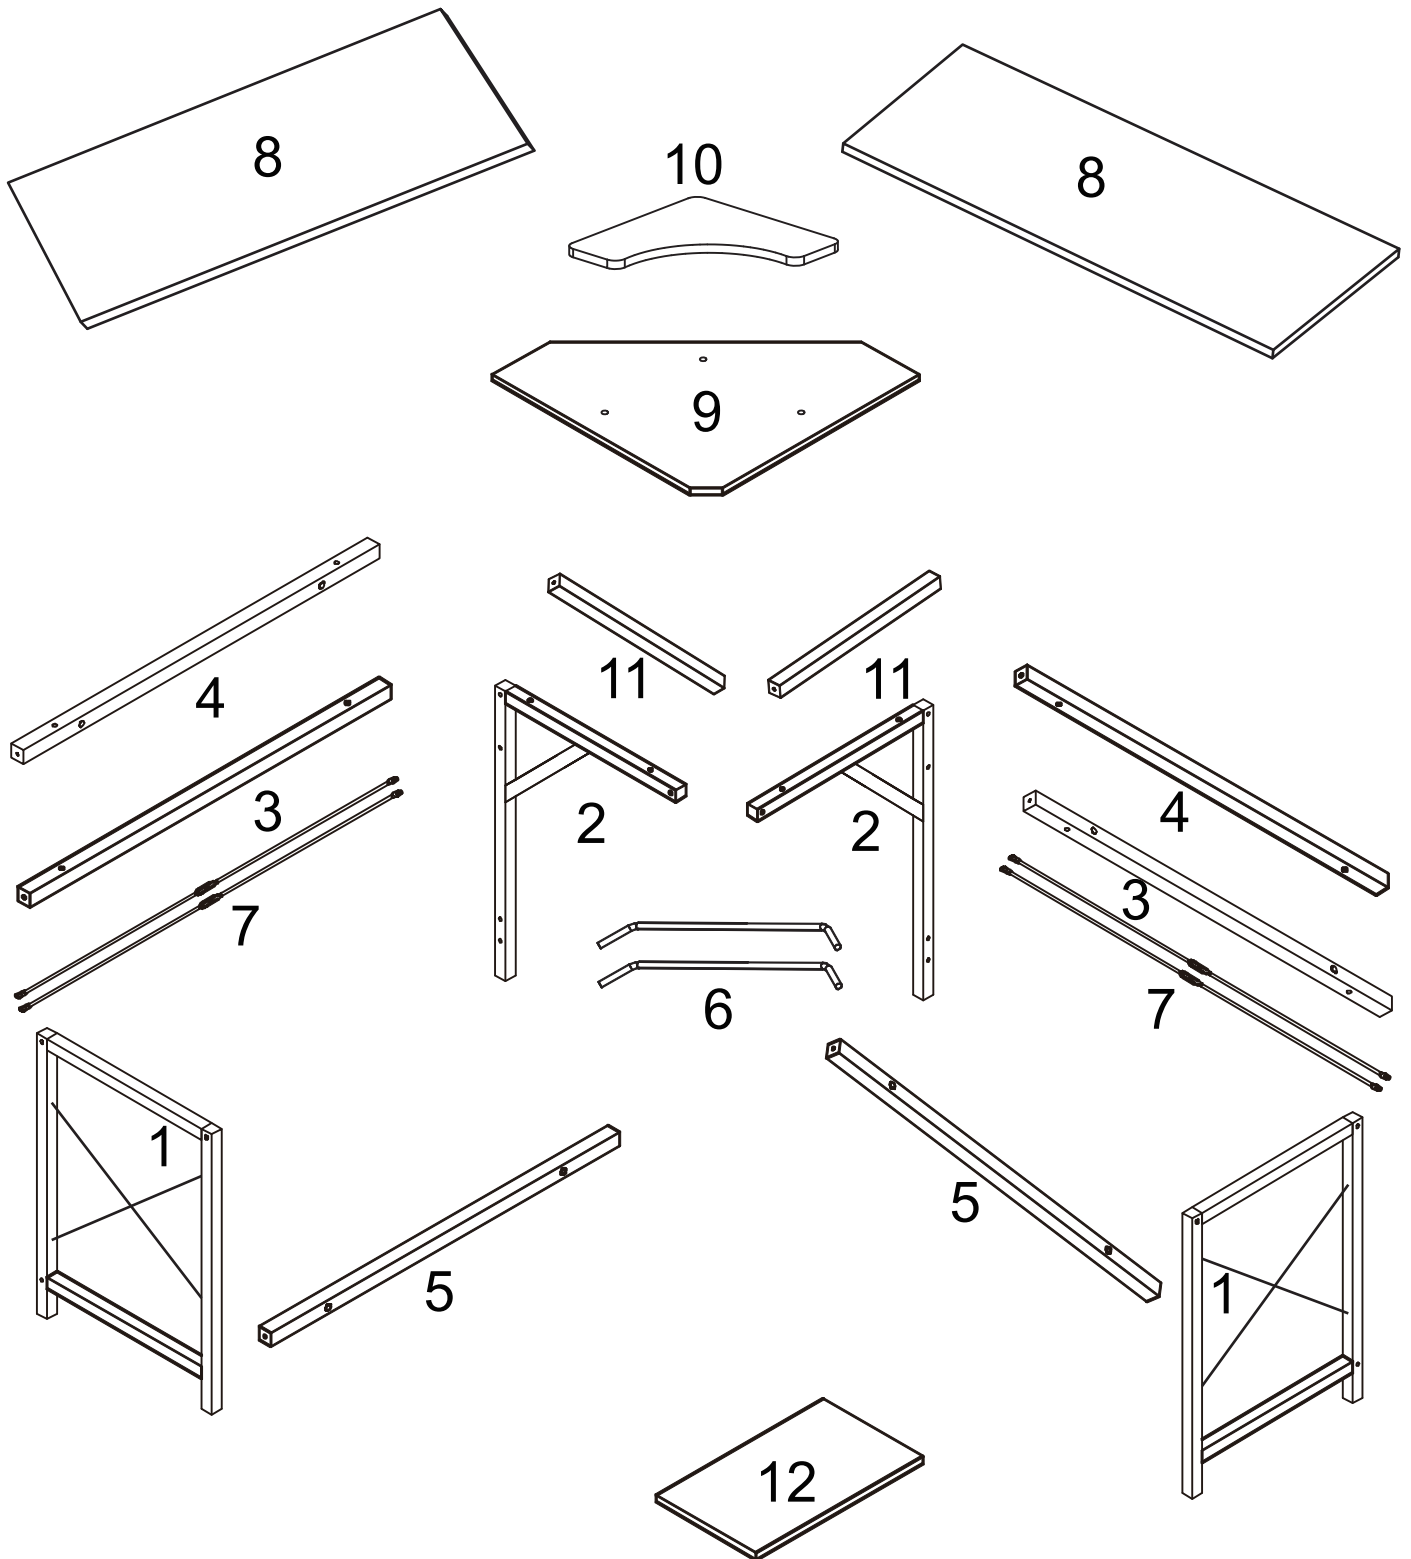


PACKING DETAILS:TOTAL 2 BOXES

BOX 1/2:


[illegible]

     BOX 2/2:


PARTNO.	PARTS	QTY
1		X2
2		X2
6		X2
11		X2
12		X1
A	 M8	X6
B	 M6X12MM	X10
C	 M6X40MM	X12
D	 M6X45MM	X20
E	 M6	X2
F	 M4X12MM	X4
G		X4
H		X3
J	 M6X115MM	X3
		X1
		X1
		X1

This product is packed in 2 outer boxes.Please install it after all.Thank you!

Step 1

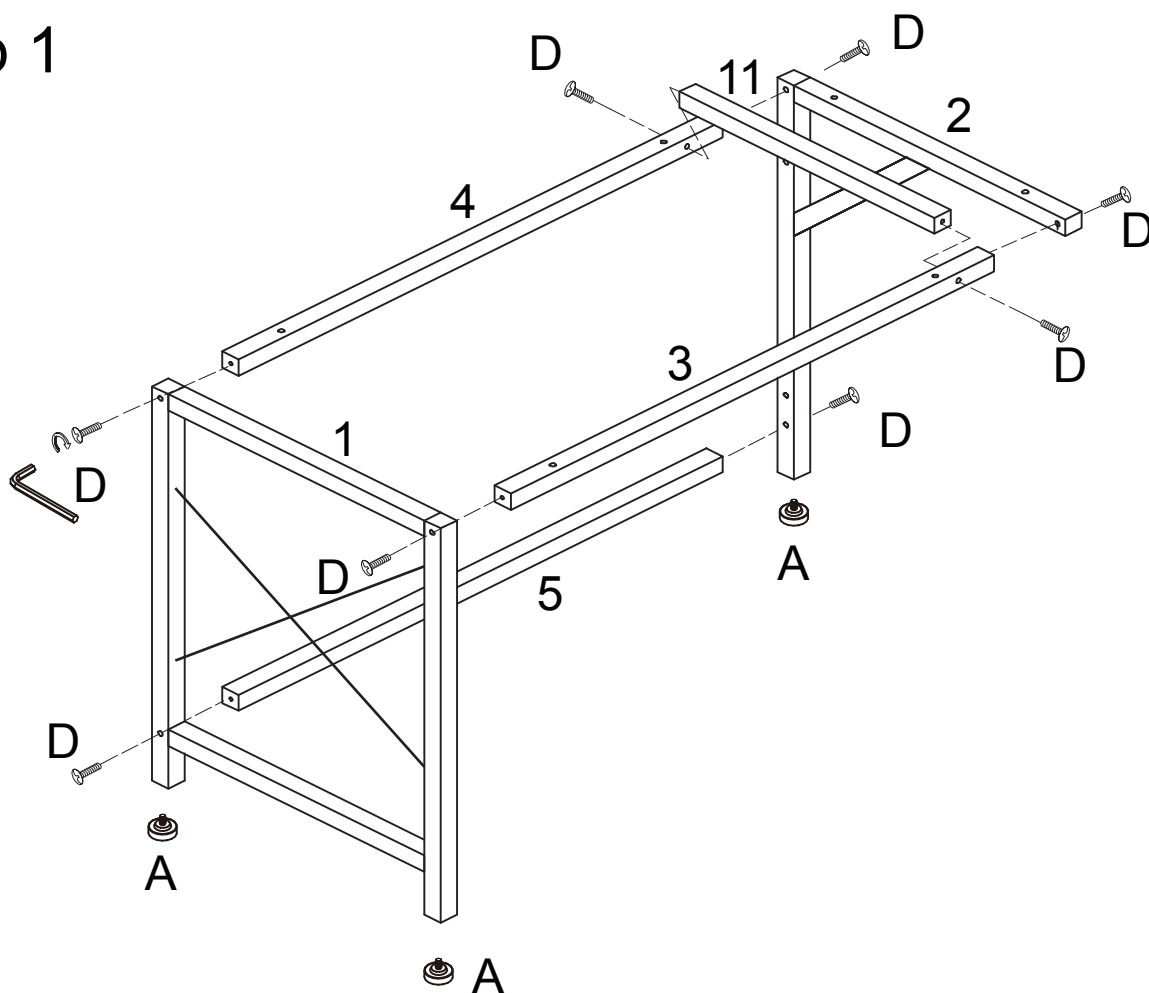


Step 2

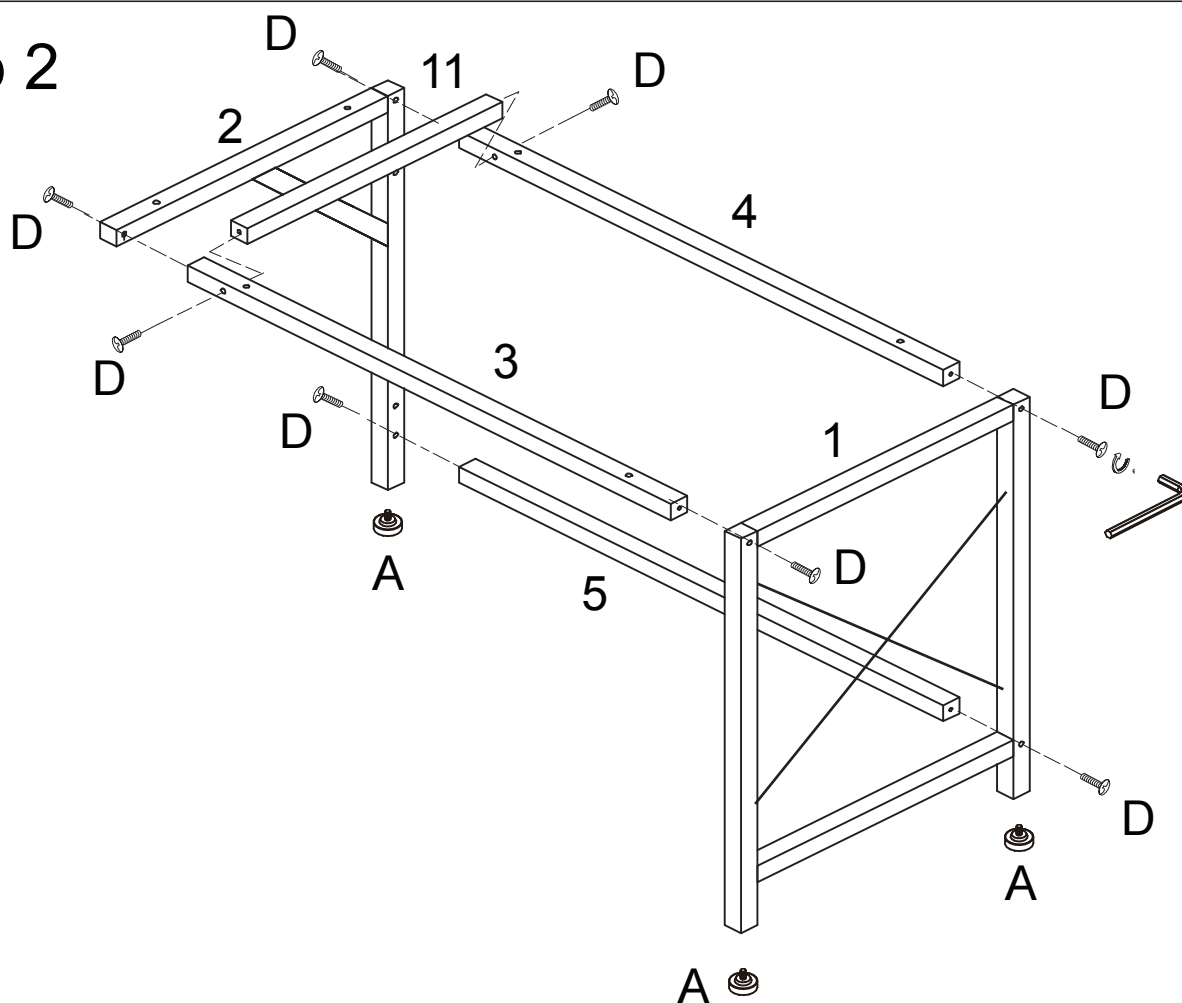


Do NOT tighten the screws until all parts are in right positions.

Step 3

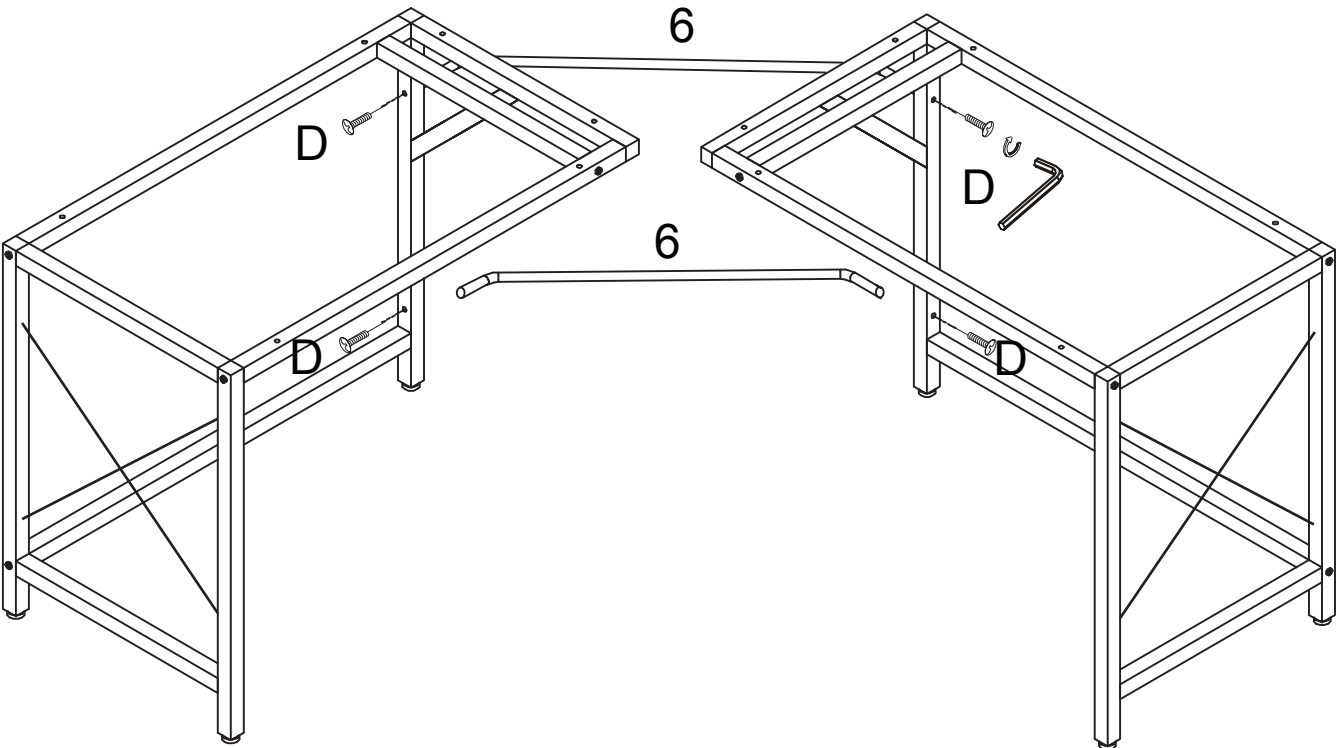


Step 4

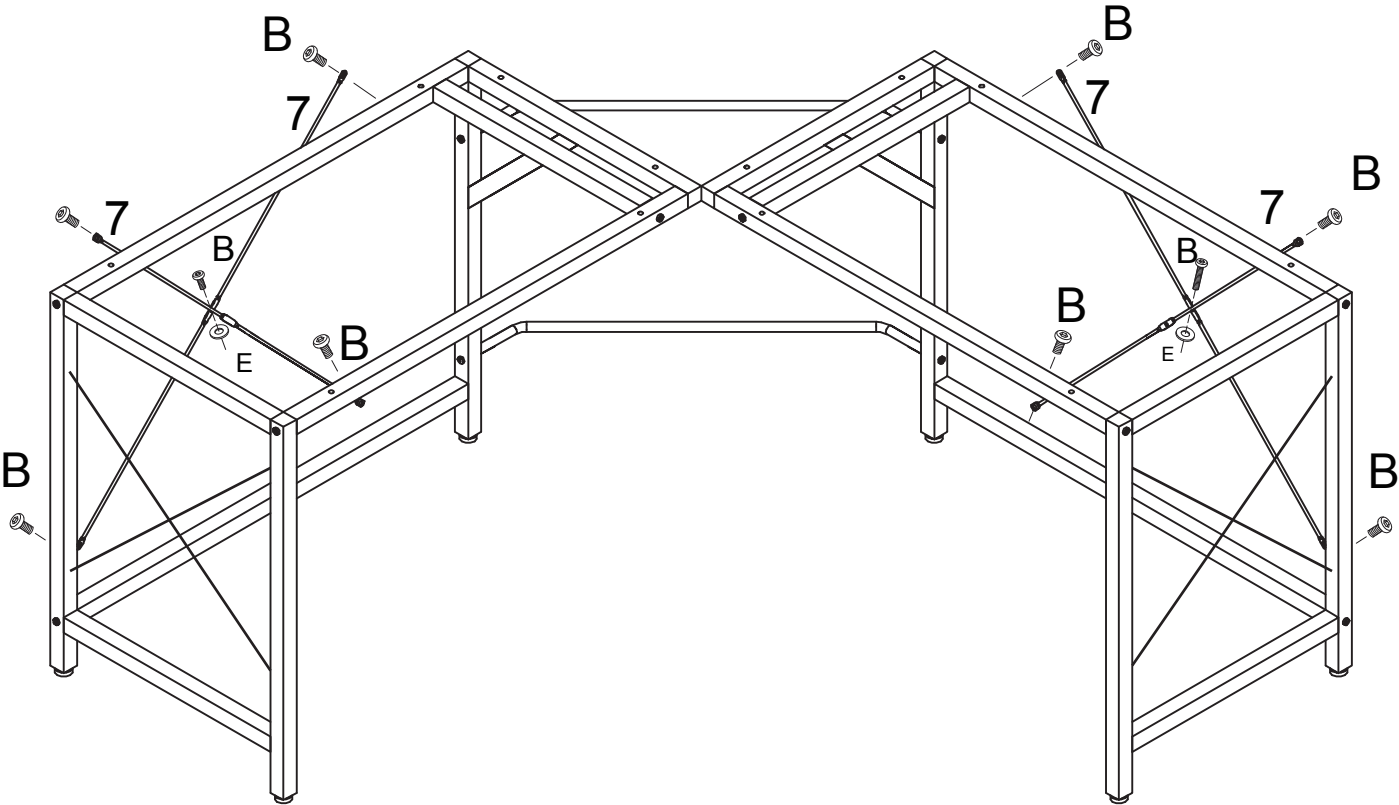


Do NOT tighten the screws until all parts are in right positions.

Step 5

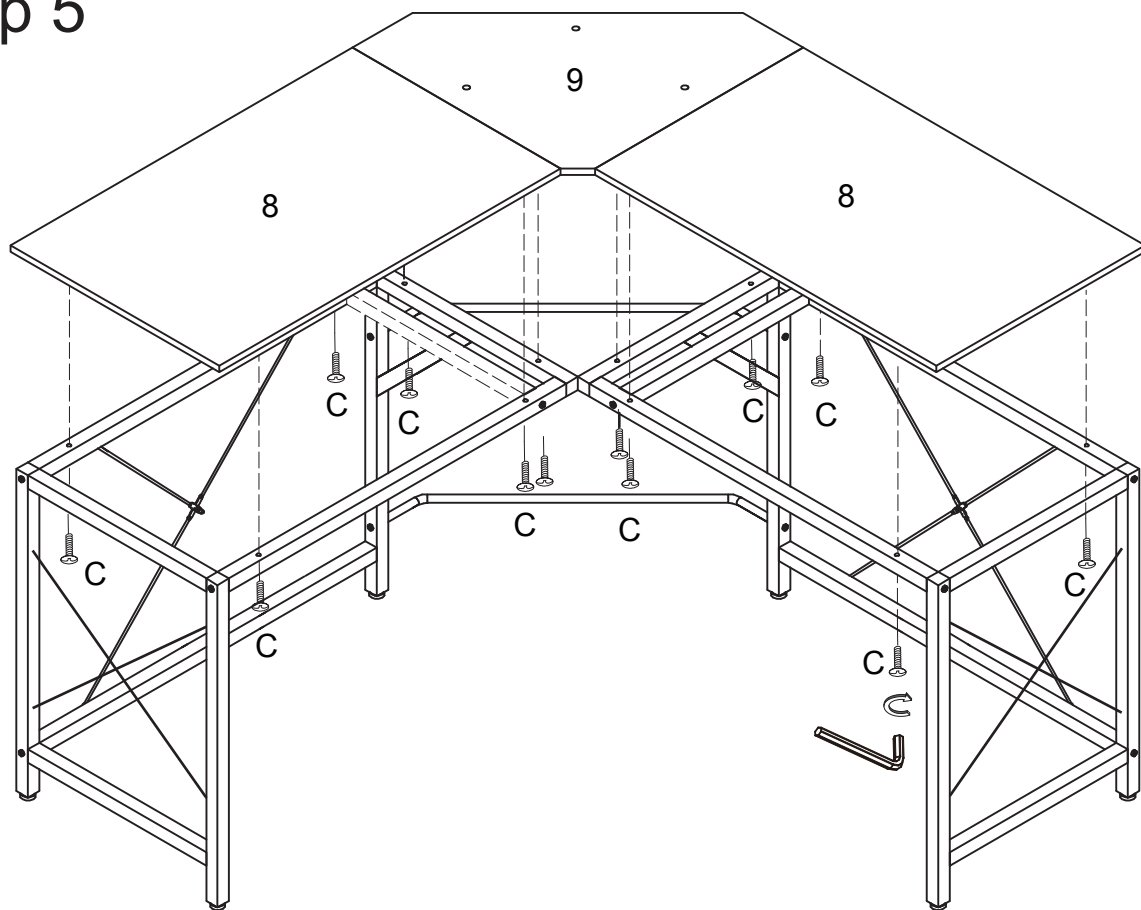


Step 6

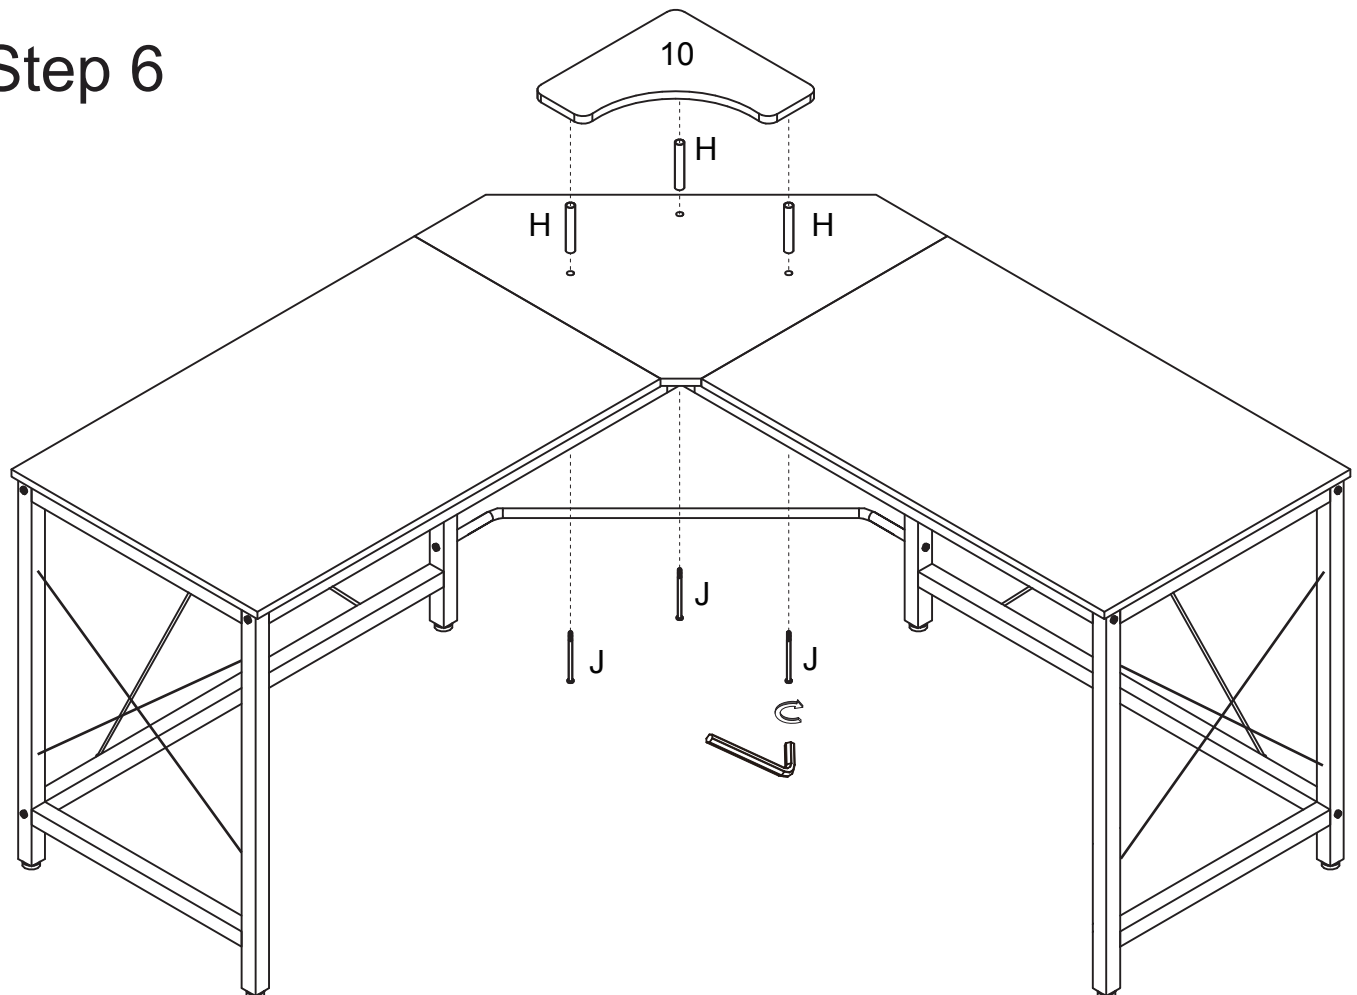


Do NOT tighten the screws until all parts are in right positions.

Step 7

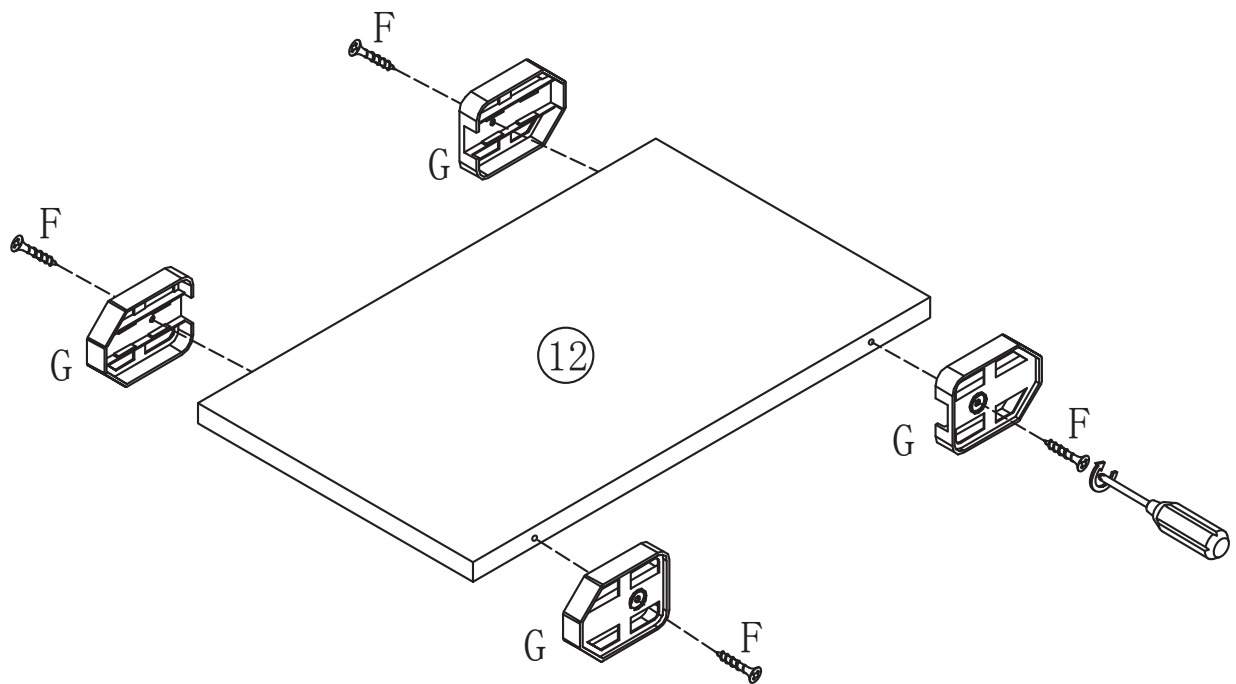

Step 8

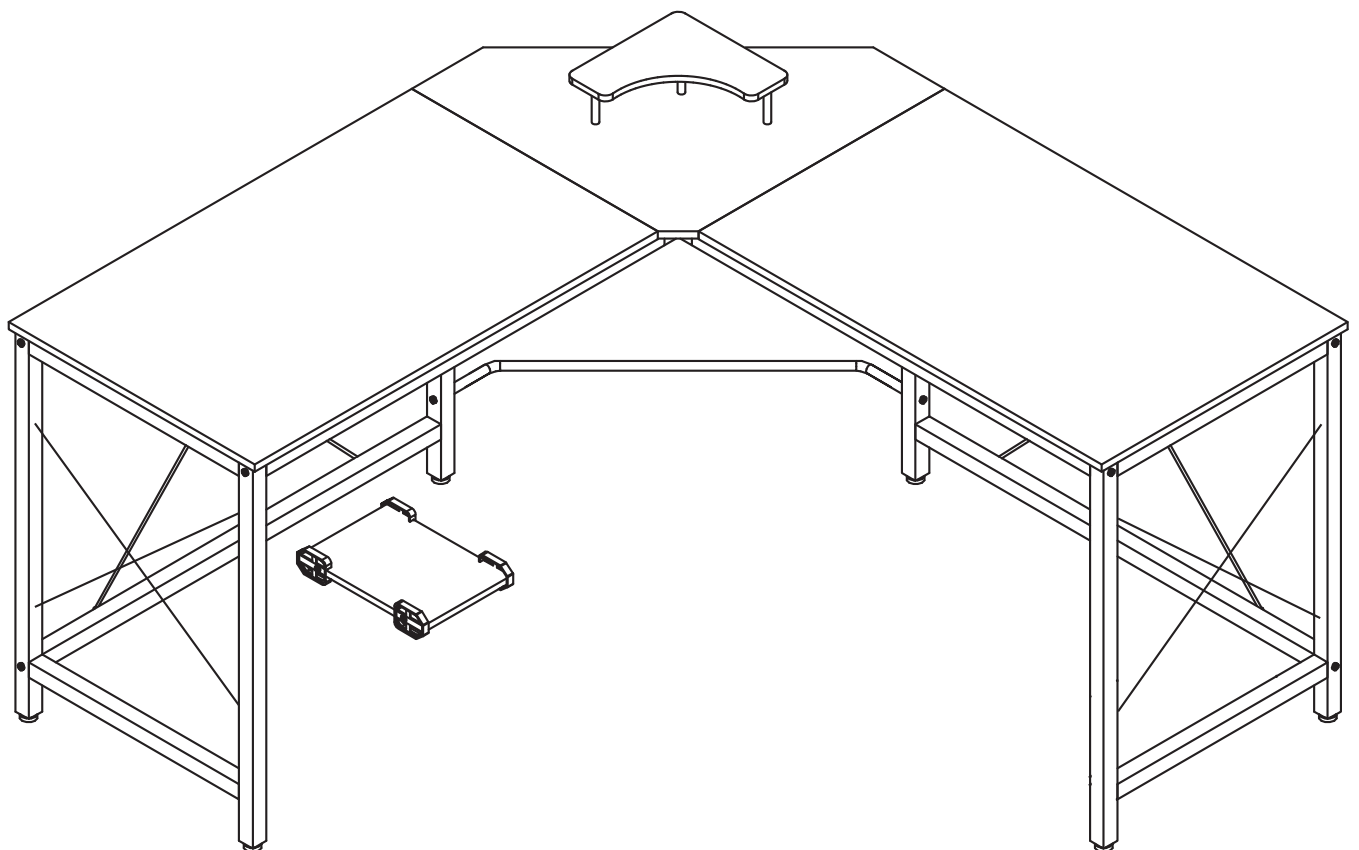

Do NOT tighten the screws until all parts are in right positions.

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it