



Ultrasonic Humidifier (Aroma Diffuser) Instruction

INchb003_UK_701-003

Thank you for buying our products, Ensure to use the product comfortable and safety. Please read the instructions carefully so that you can use them correctly!

HOW TO USE

① Open the upper cover: Lift up the upper cover, please add clean tap water and do not tilt the machine.

②Add water: Please ensure that you fill between the minimum and maximum lines when you add the water to the tank.

③Add essential oil: Drop essential oil in the water tank, and drop at most 2~3 drops(about0.1~0.2ml).

④Connect USB line: Please insert the USB line into DC hole, then flat the machine.

⑤Connect the power supply: plug the USB cable into the power adapter ,or connect to computer as well as power bank can be used, **but every power must be more than 5V =1000Ma.**

⑥Press the Light switch once so it slowly moves through all the colors. Press the light switch a second time will keep the present color lit. To change the color manually, repeatedly press the light switch until you find your preferred color. To turn the light off, hold the light switch down for two or three seconds.

⑦Press the Mist switch first time, this will run for one hour then switch off. To increase the time, you wish the diffuser to run, press the mist button twice for 3 hours and three times for 6 hours. Pressing the mist button for a fourth time turn it on continuously. A fifth time will turn it off.

※The mist volume depend on indoor environment and the water volume in the tank.

※Because of the water temperature and quality external factor, mist volume will be less when you just turn on the machine, and it will be steady after few minutes.

※Due to air temperature, humidity, airflow and so on, if there seems no mist, It's normal phenomenon.

✕This machine has anti-drying burn function: It will be closed by itself, If there is no water in the tank or the water line is too low. Even if the power is turned on, it automatically cuts off.

Announcements

Please pay special attention for failure to comply with the following precautions or other damages.

- Do not disassemble the machine in operation of the machine, or the water will spout.
- It is recommended to use the normal temperature water, or use pure water, mineral water, purified water, etc, do not use unknow liquid or high concentration liquid. In order to avoid failure.
- The water volume must not exceed the max line of the water tank, otherwise the spray is not normal or no mist.
- Please make sure the machine is not tilted when you are adding the water. In order to avoid water leaking and water flow into the machine by air outlet cause mechanical failure.
- Do not touch the atomizer in the tank by hand directly.
- Please keep the air outlet upwards when draining the water, in order to avoid the water infiltrate the air outlet to cause malfunction.
- When the indoor temperature is too high, the mist will change into water droplets in front of the nozzle, When it happens, Please place the towel in front of the nozzle.
- When the machine used in low temperature or high humidity status, it will cause fogging appealing on the mist spay mouth. It's the normal appearance that the upper cover has water drops around, please use towel to clean it.
- Use soft cloth to clean internal of water tank, the dirty on atomization piece, in order to avoid failure, please clean the machine every 5-6 times using.
- When the machine maintenance, make sure to pull off the power adapter from the socket and the power supply is cut off.
- If you do not use the machine for a long time, please drain away water from the water tank and clean it, then keep it safe after it is dry.

Simple troubleshooting

When the machine fault, please make sure the following matters before repairing. The power can't live: Make sure if the power connection status is right, also make sure the connection between power and machine as well as the socket. But just in case, pull out of the DC plug from machine then insert back again, after that make sure the connection status.

Power off when power electricity: The machine will automatic turn off after you push mist switch, if there is no water in machine, please make sure if there have water in tank or water is not enough, please add water.

No mist spray or mist spray state is not well: 1】 check the atomization piece for

dirty; 2】 Make sure that water in water tank is enough or over max water line, the machine cannot spray mist normally if water too much, you should reduce or increase water in the tank until it spray mist normally. 3】 Make sure the upper cover and inner are installed correctly, then assemble the machine、upper cover and inner firmly, if they are not assembled correctly, the mist can not rightly reach to the exit indeed. 4】 Please make sure if there is dirty in the bottom air outlet. If there is dirty in the bottom air outlet and so on, that will reduce the volume of air flow, then it causes the machine can't spray mist. 5】 Due to temperature、humidity and the environmental impact that lead you cannot see the mist, or cant see the mist, but the machine spray normally and the supply air fan is working in order(you can hear motor running),it means the machine is trouble-free. 6】 Please check if the power adapter matches.

Water leakage: 1】 Make sure the upper cover is installed correctly, and the inner whether offset、falls off, then assemble the machine、upper cover and inner firmly. 2】 When the upper cover and inner is offset, the mist cannot reach the exit, and it cause the dew appearance. 3】 Make sure the machine set in at low temperatures or high temperatures, due to low temperatures or humidity, it cause the dewing.

Customer service

Please consult the product distributor when there is any doubt or any failure in use. As shown in comply with the following content, anger does not provide free maintenance

Fall in the water or use in water and so on, those wrong and undeserved method of application cause the malfunction

The damage caused by the use and the appearance of dirty.

The failure caused by self-dismantling, reforming and improper repair methods
Consumption of LED lamps and other consumables and accessories.

It is used only for indoor domestic use, for other places or other USES such as outdoor.

Specifications

【Name】 : Ultrasonic Humidifier (Aroma Diffuser)

【Voltage】 : DC 5V= \geq 1000Ma

【Power】 : 4W

【Tank volume】 : 300ml

【Electric wire】 : 1m

【Application indoor area】 : about 10~13m²

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it