



# User Manual



## Firepalce Heater

820-066 820-067 820-068

**Please Retain For Future Reference**



## **Caution**

The power of this heater is 1850 wattage and parts will be hot while in use. Be sure to keep any combustible material at least three feet away from the heater. The area directly around and under the heater must be clear and free of any obstructions.

In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


## **Note**

At least 8A circuit is required to operate this heater. If the breaker trips when the heater is used then you need to move the heater to another location or unplug other appliances that are on the same circuit.

When you turn the heater on for the first time you may notice a slight odor, which is harmless and will soon stop.

## **Description**

Your electrical fireplace ensures you a permanent comfortable heat and provides the complete pleasure of wood stove without any inconvenience.

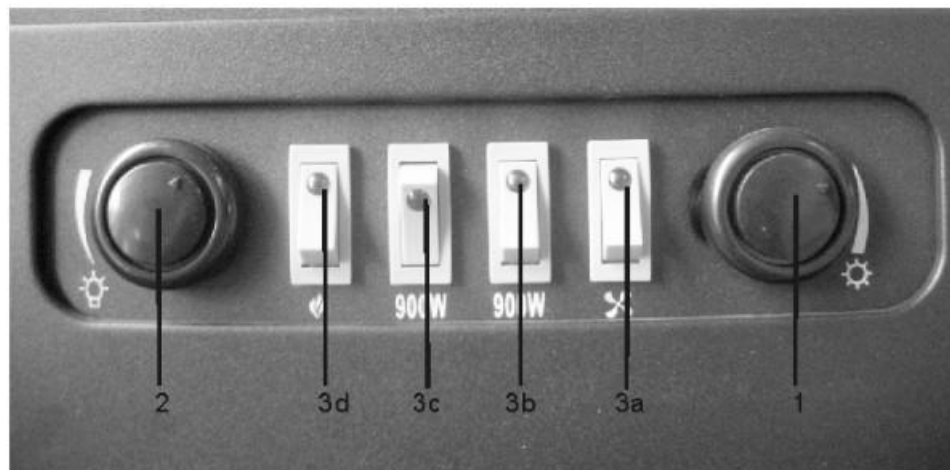

- 1) Thermostat
- 2) Fire Adjustable Switch
- 3) Switches
  - a. Fan (without heating)
  - b. Heat 900W
  - c. Heat 900W
  - d. Fire effect

## **Operating Instructions**

Insert Plug Into Socket

### ***Functions***

Open the door

Select the desired function:

- Fire effect (3d)
- Fan (3a) (without heating)
- Half power 900w (3a + 3b)
- Full power 1800w (3a + 3b + 3c)
- Heat and Fire effect (3a + 3b + 3c + 3d)

Fan function is necessary to activate heat functions. Without fan the heating can not run. Adjust light of fire by rotating the fire adjustable switch (2), clockwise until desired intensity.

To adjust the permanent temperature:

- Turn the thermostat (1) clockwise to the biggest point.
- When the room temperature goes up to be comfortable then turn the switch (1) in an anticlockwise to break point and keep the button position.
- The function can keep necessary room temperature and also save energy.

## **Cleaning and Warning**

Before cleaning the appliance, disconnect it from the socket and leave to cool off.

You can clean the exterior surface of the heater with a soft, damp cloth.

Do not use cleaning or polishing products.

- ◆ Make sure that the voltage rating label on the type plate corresponds to your main voltage. If not see your retailer and do not connect the appliance.
- ◆ Never use the appliance unsupervised when in use.
- ◆ If you have to leave even for a short moment please stop the appliance.
- ◆ Keep out of reach of children and do not allow them to operate this appliance
- ◆ Only use the appliance for domestic purposes and in the way indicated in these instructions.
- ◆ From time to time check the cord for damages. Never use the appliance if the cord or any part of the appliance shows any signs of damage.
- ◆ Make sure the connection cord does not touch any hot surfaces.
- ◆ Keep the appliance at least 15cm (6inches) from walls and any other thing, to permit a good air circulation.
- ◆ Never immerse the product in water or any other liquid for any reasons. Do not use in the shower, bath tub, or a swimming pool.
- ◆ Do not use the appliance outdoors


- ◆ Do not use if you have wet hands.
- ◆ Never use the appliance on or near hot surfaces.
- ◆ Never move the appliance by pulling the cord.
- ◆ Before cleaning the appliance, make sure it is unplugged from the power and that it is completely cooled.
- ◆ Do not clean the appliance with abrasive chemicals.
- ◆ Never use accessories that are recommended or supplied by the manufacturer. It could cause danger to the user or damage to the appliance
- ◆ The fireplace heater should not be put under the jack directly.
- ◆ The heater must not be located immediately below a socket outlet.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ◆ Warning: In order to avoid overheating, do not cover the heater.
- ◆ Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- ◆ Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children should be supervised to ensure that they do not play with the appliance.
- ◆ **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- ◆ Children of less than 3 years should be kept away unless continuously supervised.
- ◆ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- ◆ **CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ◆ Cleaning and user maintenance shall not be made by children without supervision.
- ◆ **Caution: This heater should be free from noticeable vibration when it is operating, this could cause the bulb to break down. Please turn the heater off firstly before you move, maintain or clear.**

## **Bulb Replacement**

The appliance comes with the following light bulbs:

Two 25W G9 light bulbs.

**CAUTION:** sharp edges!

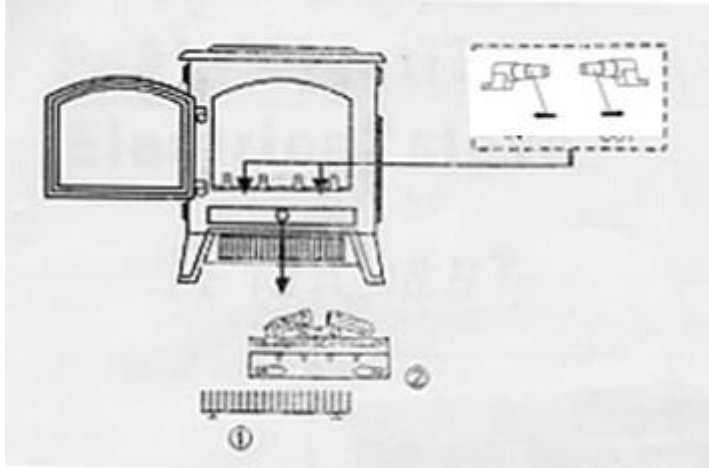

Loosen the two screws at the front of the flame effect element  
Lift up the log bed decoration. Two light are located under fuel bed.  
Replace the bulbs with a 25W G9 light bulbs.  
To reassemble, follow previous instructions in reverse order.

### **Technical data:**

Voltage: 220-240V~50Hz  
Rated power: 1850W  
Lamp: LED system (no replaceable parts)

### **Maintenance**

Before cleaning or maintenance operation, switch off and unplug the appliance. Ensure it is perfectly cooled.  
To remove the dust, wipe the appliance with a cloth  
Never use abrasives or detergents

### **Environment**



Meaning of crossed –out wheeled dustbin:  
Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.  
Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

## **Fitting the feet**

This stove is supplied with the feet removed in order to prevent damage during transportation. To fitting the feet, please follow these instruction.




1. Remove leg from the bag, and locate and line up holes in the leg, with holes in the underside of the stove body. Repeat the above for the other three legs.



2. With use of a screwdriver, secure leg with the three screws provided ( The screw is with the

manual) . Repeat the above for the other three legs.

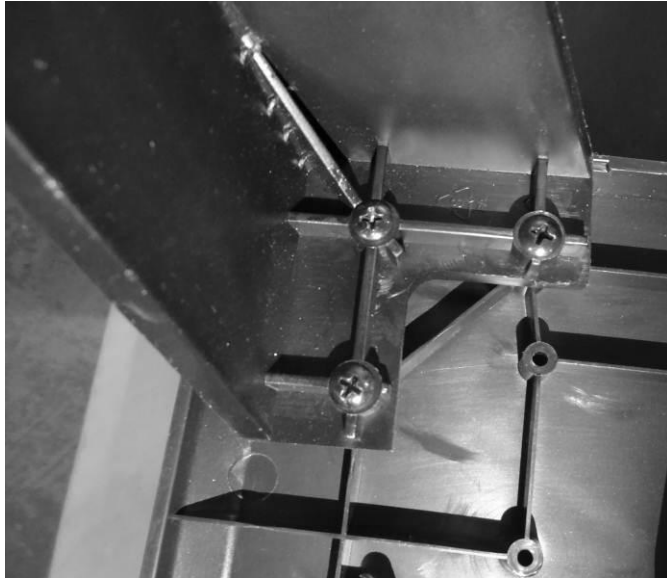

3. This is how the leg looks when attached correctly.



4. This is how the stove will look when all four legs are in place.