



Electric Stove Heater
Instruction Manual



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION —some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Notes:

1. Read all instructions before using the heater.
2. Strictly prohibit to plug-in or off the plug instead of turn on or off the power switch.
3. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
4. Do not use this heater if it has been dropped.
5. Do not use if there are visible signs of damage to the heater
6. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
8. Strictly prohibit use the same socket-outlet with other big power appliance.
9. Please put off the plug when nobody is nearby.
10. Strictly prohibit use the heater in where be easy shocked or be toppled.
11. If there is something wrong with the heater, please turn off the machine and put off the plug immediately and send to service agent.
12. Warning: In order to avoid overheating, do not cover the heater.
13. The meaning of figure  in marking is “WARNING: DO NOT COVER”.
14. The heater must not be located immediately below a socket-outlet.
15. There is slight sound when turned on or off, which is normal due to the material expanding when heated and contract when cooled, please do not be worried.
16. The used heating element treated by a special way, it has a long using life, please do not use any other heating element instead of it.
17. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains, etc. At least 100cm away from the heater.
18. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.
19. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
20. Do not leave your home while the appliance is in function: ensure that the switch is in OFF (0) position and the thermostat is in minimum position. Always unplug the appliance.
21. WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet

23. Pay attention for this heater which have button battery in the remote control.

23.1



WARNING

KEEP OUT OF REACH OF CHILDREN. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

23.2 Keep batteries out of the reach of children.

23.3 Do not allow children to replace batteries without adult supervision.

23.4 Do not short-circuit batteries.

23.5 Do not heat batteries.

23.6 Remove batteries from equipment if it is not to be used for an extended period of time unless it is for emergency purposes.

23.7 Always select the correct size and type of battery most suitable for the intended use. Information provided with the equipment to assist correct battery selection should be retained for reference.

23.8 Clean the battery contacts and also those of the equipment prior to battery installation.

23.9 Ensure that the batteries are installed correctly with regard to polarity (+ and -).

23.10 Remove exhausted batteries promptly.

23.11 Do not dismantle batteries.

23.12 Do not dispose of batteries in fire except under conditions of approved and controlled Incineration.

23.13 Batteries may be disposed of via communal refuse arrangements provided no local rules to the contrary exist.

Introduction

- Please read this guidance carefully before using your fan heater, so that you can use it correctly.
- Please keep well with this guidance.

SAFETY FEATURES

Tip-Over Safety Feature

This heater is equipped with a shut-off safety feature. Once the heater is tipped over, an internal equipment will automatically shut the heater off. Once the heater is restored to an upright position, the heater will reset. To continue operation, press the power button on the control panel.

Overheat Safety Feature

 
This heater is equipped with a overheat safety feature. When the heaters internal components reach a certain temperature that could cause overheat and possible fire, the heater will automatically shut off.

- A thermal overload protector is built in to prevent over- heating. When an “overheat” temperature is reached, the heater will automatically shut off. Operation can resume only when the user resets the unit.
- To reset the unit, unplug the heater, ensure the power is turned off, and wait 15 to 20 minutes for the unit to cool down.
- Follow INSTRUCTIONS FOR USE to return heater to operating mode.

WARNING:

It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

PRODUCT DIAGRAM

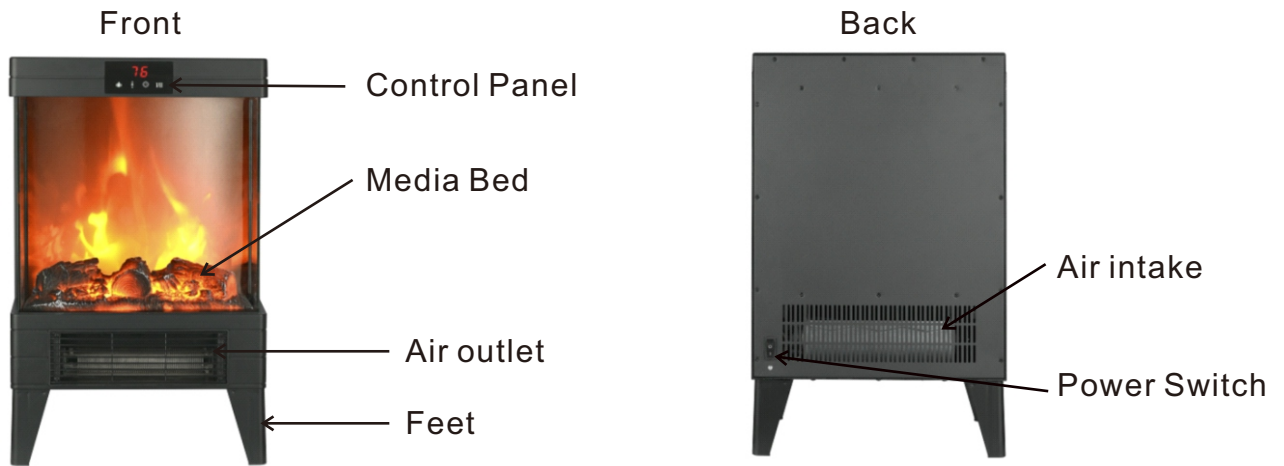 




 

INSTRUCTIONS FOR ASSEMBLY

1. Place the product on a padded surface with underside accessible.
2. Attach leg to stove by inserting tab on the top of the leg into the corresponding slot at the bottom of the stove.
3. Insert 3 screws into predrilled holes and tighten securely.
4. Repeat with remaining three legs.

CONTROL PANEL FUNCTIONS

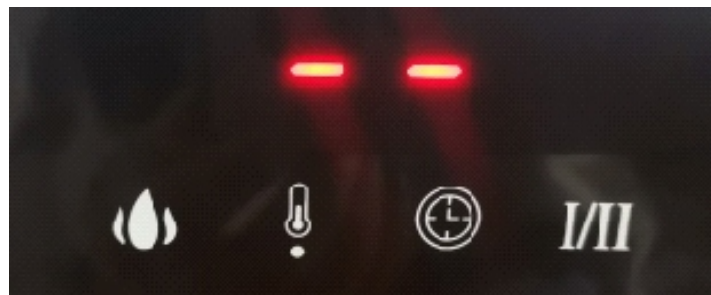 

 
 
 

Control Panel

 


NO.	CONTROLS		FUNCTION
1	FLAME		Turn on or off the Flame.
2	THERMOSTAT		Set temperature indication varies from 59°F to 90°F. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.
3	TIMER		Press the TIMER button more than once, the value will vary from 0 to 12hr (1 hr interval) in circulation.
4	MODE		Press the HEATER button to toggle between the two heat settings (Low/High), or turn off the heater.

Remote Control





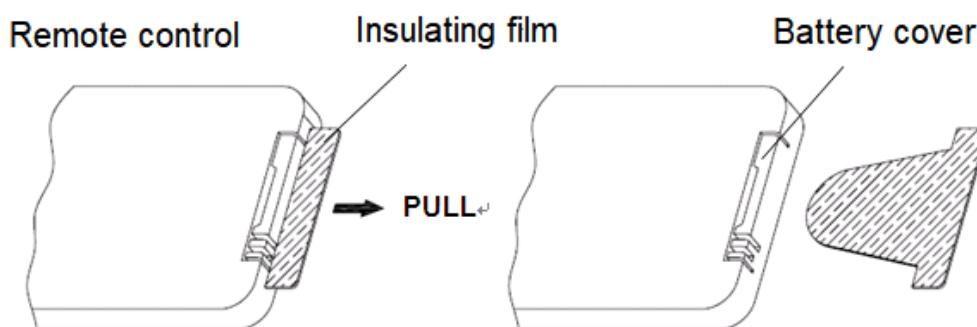NO.	CONTROLS		FUNCTION
1	FLAME		Turn on or off the Flame.
2	POWER		Turn on or off the heater.
3	TIMER		Press the TIMER button more than once, the value will vary from 0 to 12hr (1 hr interval) in circulation.
4	HEAT		Press the HEATER button to toggle between the two heat settings(Low/High).
5	Tem Up		Setting increasing temperature value.
6	Tem Down		Setting decreasing temperature value.



INSTRUCTION FOR USE

1. Place the heater on a firm, level surface.
2. With the power in the OFF position, plug the unit directly into a 220-240V AC electrical outlet.

STARTING UNIT AND SELECTING HEAT MODE

UNIT	FUNCTION
	1. Turn the heater ON by pressing the ON/OFF switch in back. NOTE: Once power is OFF, heating element will stop working. Fan will continue for 30 seconds until heater has cooled.
	2. Press the Mode button to toggle between the two heating Modes, to Choose Low/High heat setting, or turn off the heater.


 
Notice:

When the heat function is used for the first time, a slight smell may be present. This is normal and should not occur again unless the heater is not used for an extended period of time.

Notice:

It is normal for the heater to cycle ON or OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to change the thermostat setting.


 
 
SELECTING DESIRED TEMPERATURE

UNIT	FUNCTION
	1. Press the temperature button to adjust unit to the desired room temperature.
	2. Select temperature from 15°C to 32°C. NOTE: Once you have chosen the desired temperature, the heater will remain on until room temperature increases to the set temperature on the LED display. The heater will cycle ON and OFF to maintain set room temperature.

SETTING POWER OFF TIMER FUNCTION

 
Notice:

The POWER OFF Timer function will allow for the heater to power OFF after a certain set time, and can only be set while the heater is in the on mode.

UNIT	FUNCTION
	1. Turn the heater ON. 2. Press the Timer button.
	LED display changes from the “temperature” to the “hours” option for the timer. Hour options for the timer are 0 to 12 hours (in 1 hour increments). 3. Continue to press the timer button to change the number of hours the heater will run before powering itself OFF.
	LED Display will flash selected hour increments for a few seconds, then revert back to the set desired temperature. The heater will power OFF when the internal heater clock counts down the hour increments set.

CLEANNING AND MAINTENANCE

1. Turn the POWER OFF.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. A mild detergent can be used if necessary.
4. After cleaning, dry the unit with a soft cloth.
5. Wait until the unit is completely dry before use.
6. If the heater will not be used for a long time, pls take out the battery in the remote control according to the following steps.

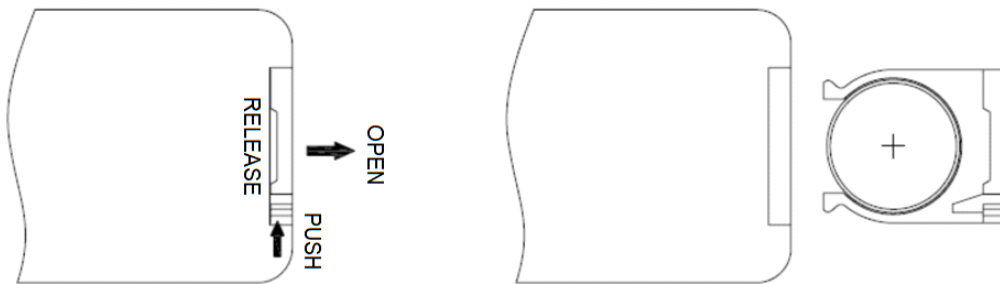

WARNING:

- DO NOT let liquid enter the heater.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- DO NOT immerse the heater in water.

STORAGE

1. Perform the cleaning procedures described in “Cleaning and Maintenance”.
2. Wipe all parts to dry.
3. Pack the heater in a plastic bag and store it in a cool, dry place.

TROUBLESHOOTING

 
If the heater will not operate, please check the following:

1. Check if the power cord is plugged into an electrical outlet. If not, plug in unit to appropriate outlet.
2. Check if electricity to the outlet is working.
3. Ensure power is turned to ON position.
4. Make sure heater is placed on a flat, solid surface.
5. See SAFETY FEATURES section for additional information.

WARNING:

**PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF.
DOING SO COULD CAUSE DAMAGE OR PERSONAL INJURY.**

Correct Disposal of this product

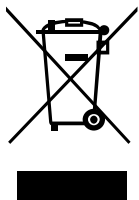

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.