

 


INcjb017_GL

820-259

INSTRUCTION MANUAL

Electrical Fireplace Stove with Heater

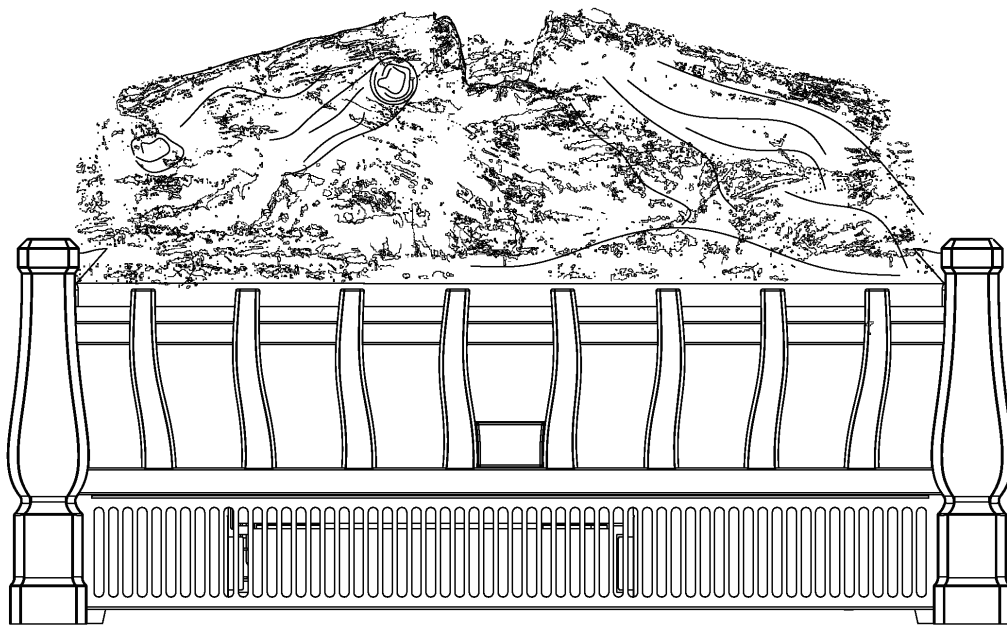

! WARNING

Thank you for purchasing your new heater.
These operating instructions will help you use it properly and safely.
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.
Read all the safety instructions carefully before use and keep this instruction manual for future reference

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

SAFETY WARNINGS

READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE THIS UNIT. KEEP THE ASSEMBLY INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THE ORIGINAL PACKAGING FOR USE WHEN STORING THE HEATER DURING EXTENDED PERIODS OF NON-USE.

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet / receptacle Never use with an extension cord or relocatable power tap(outlet/power strip)
14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.

SPECIFICATION


Voltage Rating	120 V (60Hz)
Power Consumption	1500W
Unit Size	20.7 in. (W) x 8.7 in. (D) x 12.2 in. (H)
Unit Weight	12.02 lbs


SAFETY FEATURES

Overheat Safety Feature

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheat or possible fire, the heater will automatically shut off.

  PRODUCT DIAGRAM

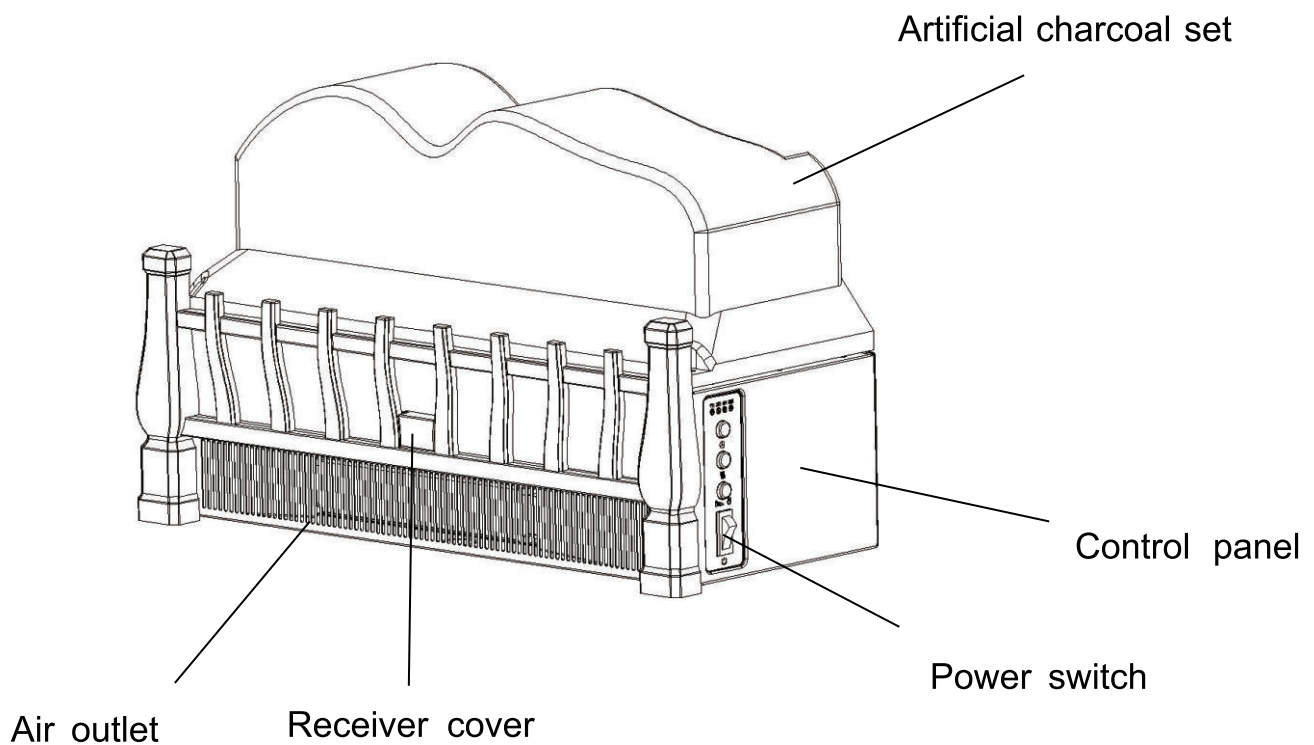


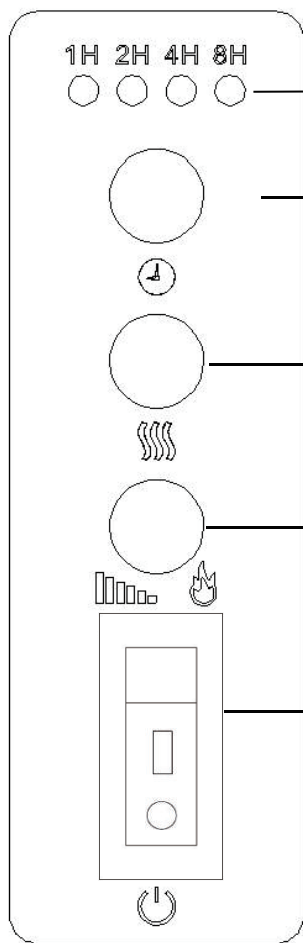


1H 2H 4H 8H



 Timer light: Indicate the timer mode



 
Timer button: User setting timing boot or shutdown




Heater button: Set up the heat mode and turn off the heat.



 Flame button: Set the brightness of the flame

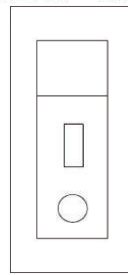

 Power button: Powers the heater on and off

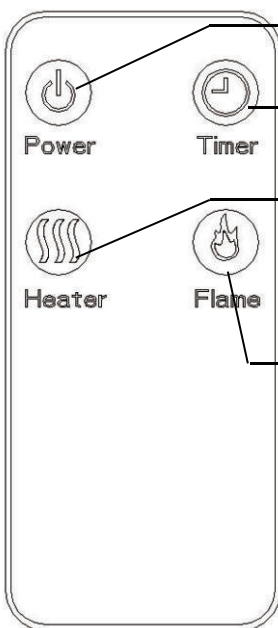

Power

Timer

Heater

Flame

Power button: Powers the heater on and off.

Timer button: User setting timing boot or shutdown.

 
Heater button: Set up the heater mode and turn off the heat.

Flame button: Turn on/off the flame and adjust the brightness.

Remote control

 
PREPARATION

Place the heater on a firm, level surface and plug into a 120V 60Hz power outlet.
Caution: The rear of the heater should be at least 4 inch away from the wall.
 Please pull the insulating film out of battery cover before using the remote control.

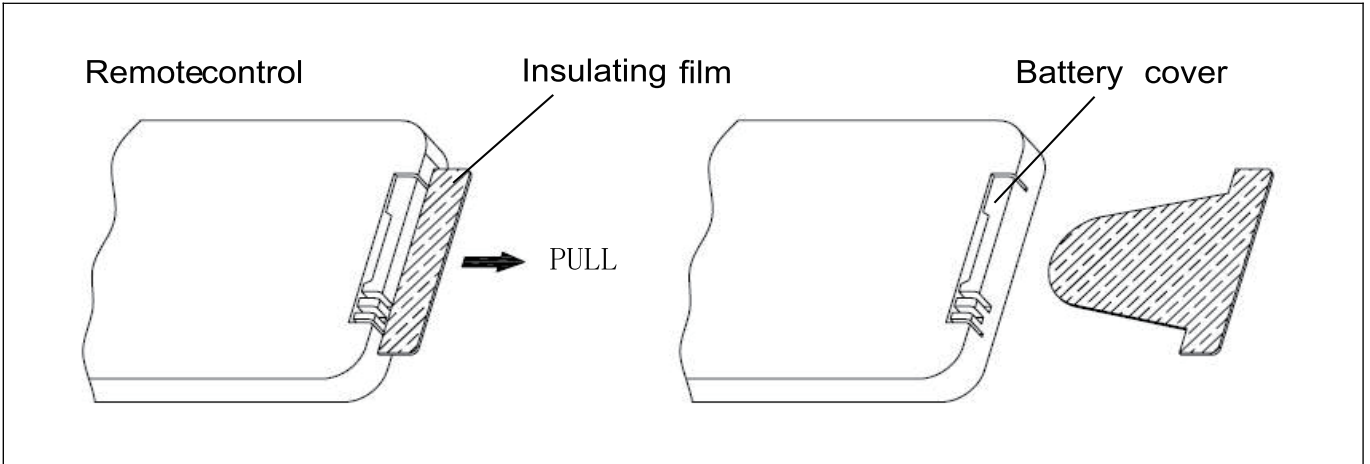

 

 

OPERATION INSTRUCTION

1. First turn on the Power switch on the right side of the heater. The Power switch supplies power to all the function of the fireplace. This switch must be in "I" position for any functions including the remote control to work.

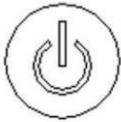 Power	Press the Power button on the remote control, the heat and flame effect will be on. Press the Power button again, heat and flame effect will be off immediately (but the fan will prolong working for 30 seconds), and then the heater goes into a standby mode.
---	--

 

 

2. Setting timer-power-off

Caution! ONLY under power-on mode can you set timer-power-off function.

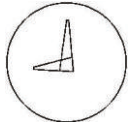 Or  Timer	When the unit is power on, press the Timer button to set timer-power-off function (through control panel or remote control).
	Under power-on, the timer light demonstrates the timer-power-off mode. Press the Timer button more than once, the time value will vary through the path 0-1h-2h-4h-8h-0 in circulation.
1H 2H 4H 8H 	The corresponding light is on when timer-power-off is set.



3. Setting timer-power-on

Caution! ONLY under standby mode can you set timer-power-on function.

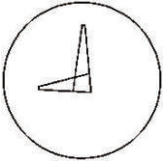 Or 	<p>Under standby mode, press the Timer button to set timer-power-on function (through control panel or remote control).</p>
	<p>Under standby, timer light demonstrates the timer-power-on mode. Press the Timer button more than once, the time value will vary through the path 0-1h-2h-4h-8h-0 in circulation.</p>
	<p>The corresponding light is on when timer-power-on is set.</p>



 4. setting heat

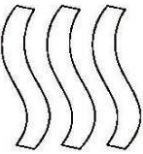Under standby mode, press Heater button to start heater.

 Or 	<p>Under standby mode, press the Heater button on the control panel or remote control, the heater will start (The heater indicator is under the artificial charcoal set. When heat is on, the charcoal set will be lit up and flicker automatically at a slow pace). Press the Heater button again. Heat and heater indicator will be off while fan will prolong working for 30 seconds to emit plenty of heat inside. Caution: When the flame is on, the heater indicator will keep lit-up if you turn off the heat.</p>
--	---

5. Setting flame

Under standby, press the Flame button to watch the flame effect.


 Or 	<p>Under standby, press Flame button, the flame will be on at brightest. The charcoal set will be lit up and flicker automatically at a slow pace. Each time this button is pressed, the intensity of the flame decreases. There are five brightness levels you can cycle through including the OFF setting. Caution: When the heat is on, the charcoal set will keep lit-up if you turn off the flame.</p>
--	---

MAINTENANCE

1. Turn off the heater of the power switch.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.

CAUTION: DO NOT let liquid enter the heater.

 4. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. DO NOT immerse the heater in water.
6. Wait until the unit is completely dry before use.
7. If won't use the unit for a long time, please take out battery in remote control according to following steps, then take care of the remote control.

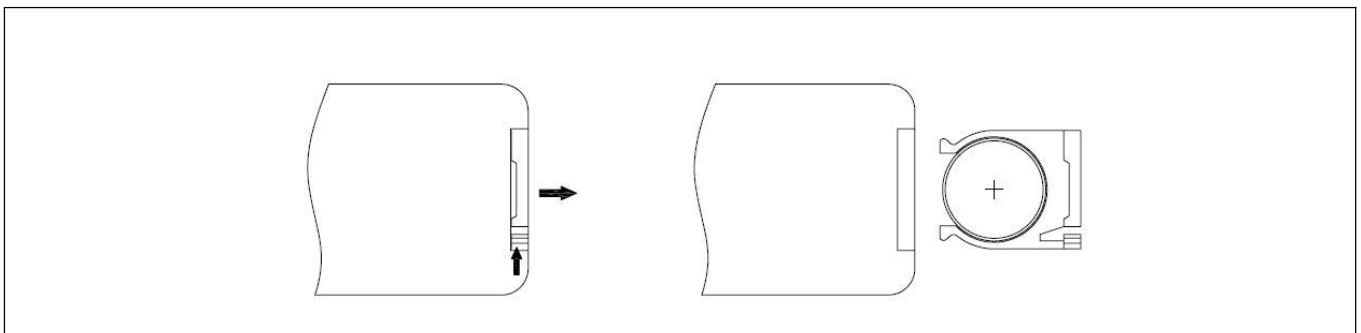

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLESHOOTING

If the heater will not operate, please check the following before seeking repair advice:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main power switch (in the back) is working.
3. Check the power switch is on