


820-106

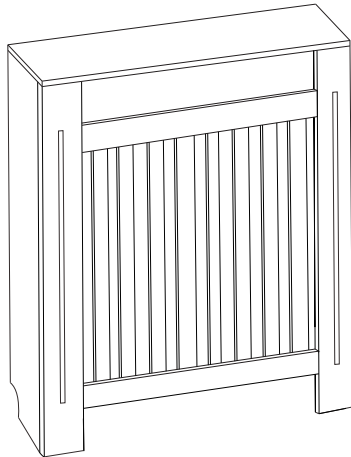

Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS

Part List

<p>⑨ x1 12x780x190mm</p>	<p>③ x2 12x105x527mm</p>			
<p>④ x1 12x110x803mm</p>	<p>⑤ x1 12x110x803mm</p>			
<p>⑥ x8 5x37x499mm</p>	<p>⑦ x1 12x170x803mm</p>			
<p>⑧ x1 12x170x803mm</p>				
<p>Ax2</p>	<p>Bx14</p>	<p>Cx14</p>	<p>Dx8</p>	<p>Ex16</p>
<p>Fx4</p>	<p>Gx4</p>	<p>Hx2</p>	<p>Ix8</p>	

Assembly Instructions

