

MADE IN CHINA  
DESK FAN, 220-240V~ 50Hz

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

**ASSEMBLY INSTRUCTION**


## **SAFETY INSTRUCTIONS**

**While every attempt is made to ensure this product is extremely safe, we cannot guarantee freedom from injury. The user assumes all risk during use.**

- The fan is only for intended use as described in this manual. All other uses, not recommended in this manual, may cause fire, electrical shock or injury to persons.
- This fan is intended for household use.
- To protect against electrical shock, do not immerse fan, plug or cord into water or spray with liquids. **KEEP AWAY FROM ALL LIQUIDS.**
- Close supervision is necessary when any appliance is used near children.
- Always unplug the fan when it is not in use, when moving from one location to another, and before cleaning.
- Avoid contact with moving parts. Never insert fingers, pencils or other similar objects through the guard.
- Do not operate in the presence of explosive or flammable fumes.
- Do not place fan or parts near an open flame, cooking or other heating appliances.
- Do not operate fan with a damaged cord, plug or after the fan suffered malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended by manufacturer may be hazardous.
- Do not use outdoors.
- Do not let cord hang over the edge of a table or counter, or let it touch any hot surfaces.
- To disconnect, grip plug and pull from wall outlet, never yank the cord.
- Always use on a dry level surface.
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- Do not operate without fan lattice/grille properly in place.

## PARTS

1. Cover
2. Grill
3. Button for speed settings
4. Fan blades
5. Support
6. Power plug

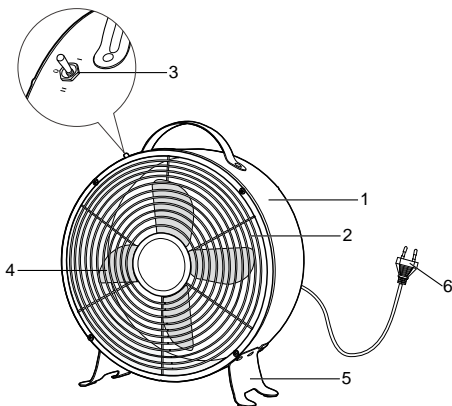


## USE

You can switch the fan on or off by using the speed settings button. You can choose between two speeds:

1. Speed I: Low speed
2. Speed II: High speed

To switch the appliance off again, turn the button back to 0.

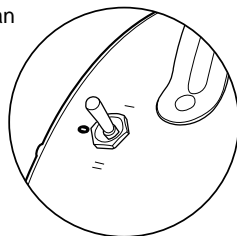

## CLEANING AND MAINTENANCE

This fan requires very little maintenance. Never try to repair the fan yourself. If it is defective, have it checked and/or repaired by a qualified person.

- Prior to assembling the fan or cleaning it, remove the plug from the outlet.
- Keep the rear grille free of dust and other substances in order to allow free circulation of the air around the motor. Do not disassemble the fan to remove dust from the motor.
- You may clean the exterior of the machine with a soft, moist cloth and a mild detergent. Carefully dry the machine afterwards.
- Never use corrosive or abrasive products to clean the machine.
- Make sure that no water gets into the motor of the machine.

## DISPOSAL



This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



The packaging is recyclable. Please treat the packaging ecologically.

## SPECIFICATION

PRODUCT: DESK FAN

MODEL:824-020BK / 020WT

POWER:25W

VOLTAGE/HEIZ: 220-240V~ 50Hz



Made In China

All images serve as illustrations only and do not always show exact representations of the device.

All rights reserved.

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it