

## CIRCULATOR FAN WITH REMOTE CONTROL



### Specifications



MODEL NO	RATED VOLTAGE	RATED POWER
<b>824-026V70</b>	220-240V~,50HZ	45W

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

# ASSEMBLY INSTRUCTION

## **Important Safe Guards**

When using an electrical appliance, basic safety precautions must always be observed, including the following:

### **Read all Instructions before Using**

 
**WARNING: To reduce the risk of fire, electrical shock, and injury to person, the following must be adhered to:**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The product is for household use only.
4. Connect the appliance to a single-phase AC supply voltage, specified on the rating plate.
5. Never leave the fan un-attended while it is in use. Always turn the fan to the "OFF" position, and unplug the fan from the electrical outlet socket, when not in use.
6. Extreme caution is necessary when any fan is used by or near children, invalids or elderly persons, and whenever the fan is left operating un-attended.
7. The fan cord must not be placed under carpets, or covered with throw rugs, runners or similar. Arrange the cord away from the traffic area, and where it will not be tripped over.
8. Do not operate the fan with a damaged cord or plug, or after the fan malfunctions, or has been dropped, or damaged in any manner.

9. If the supply cord is damaged, either the manufacturer, or the service agent, or a similarly qualified person, must replace it, to avoid a hazard.
10. Use the fan in a well ventilated area. While in use, ensure that the airtakes or exhaust openings are not blocked un-expectedly, and the fan distance from the wall or corner must be no less than 20cm. The fan should not be placed below or besides any curtains or similar
11. To avoid mechanical danger when in use, do not insert, or allow fingers, or any other objects into the grill. Do not block the air-intakes or the exhaust openings in any manner.
12. The fan must only be placed, and used on a flat dry floor.

## **For household use only**


### **Structure and parts**

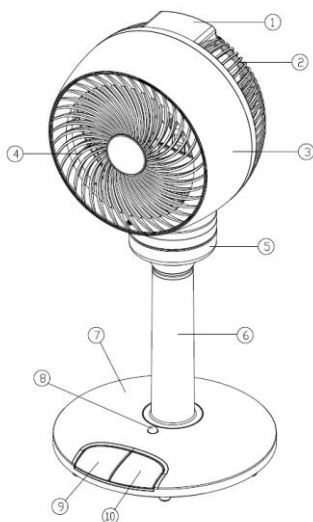


1. handle
2. back grill
3. head
4. front grill
5. wheel seat
6. tube
7. base
8. indicated light
9. off button
10. on/speed button

## Operating Instructions and Function

 
### Remote control

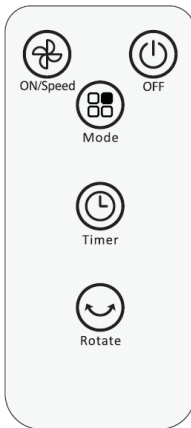


### Control panel

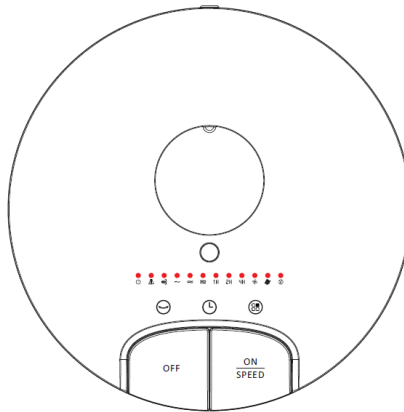 


### On/speed





Press  $\frac{\text{ON}}{\text{SPEED}}$  on the control panel or press  on the remote control to start the fan,  $\sim$  means low speed,  $\approx$  means medium speed,  $\approx\approx$  means high speed.


### OFF


Press **OFF** on the control panel or press  on the remote control to turn off the fan.



### Oscillation

Press  on the control panel or remote control to start oscillate, this model will oscillate as below:



$\rightarrow$    $\rightarrow$    $\rightarrow$    $\rightarrow$    $\rightarrow$  **off** .....Circle

 means right and left oscillate



 means up and down oscillate

  means right left and up down oscillate




## Timer

Press  on the control panel or press  on the remote control to choose the duration of time. The timer is 7 hours. To cancel the set timer, press the “Timer” button again and press the “Timer” button to set as 00 Hr.

## Mode

Press  on the control panel or remote control to choose the mode you like. the default mode is Normal, the LED screen will indicate 

This fan have three mode: Normal/ Natural/ Sleeping

 means Normal,  means Natural,  means sleeping

## **Cleaning / Maintenance Instructions**

To safely take care of your fan, please remember to follow these instructions below:

1. Always remove the plug from the socket-outlet, and allow the fan to stop completely before cleaning the fan.
2. Do not allow water to drip on, or enter into the fan housing.
3. Always use a soft cloth, moistened with a mild soap solution.
4. Do not use any of the following agents as a cleaner: Gasoline, Thinners, or Benzene.
5. In case of malfunction or doubt, do not try to repair the fan yourself, it may result in a fire hazard or electric shock.

## **FAN Cleaning**


Clean the fan grill, housing and base with a soft damp cloth. Do not attempt to remove the fan blades. Please use caution around the motor housing area. Do not allow the motor, or other electrical components to be exposed to water.

## **FAN Storage**

When storing your fan in the off-season, it is important to keep it in a safe dry location. It is important to protect the fan head from any dust. We strongly recommend using the original box, when storing the fan away.

## **Waste disposal**



The symbol  indicates that this product is not to be disposed of together with household waste. This product must be delivered to a recycling service or container for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Local businesses (or the environmental station in your neighborhood) are required by law to accept and recycle such products, as a means of environmentally sound disposal.

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it