


Assembly Instructions

①	2	
②	1	
③	2	
⑥	2	
⑦	1	
⑧	2	
⑨	4	
A	4	

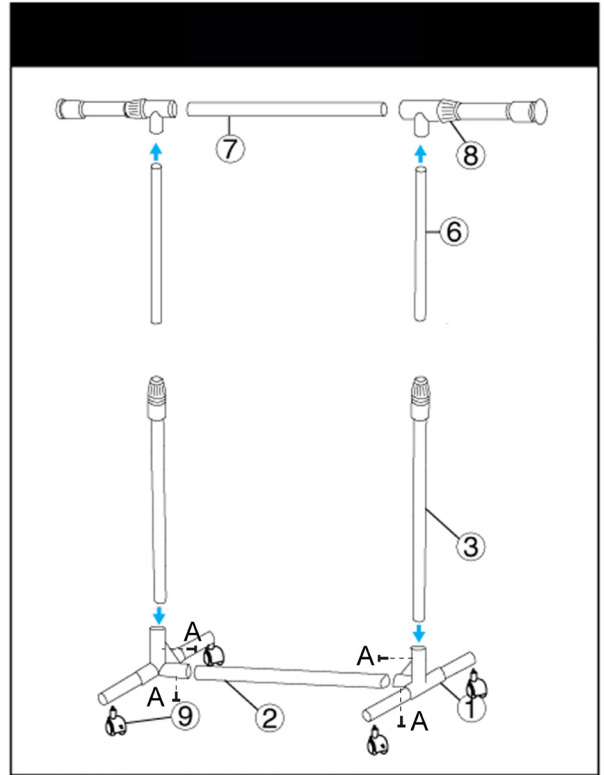

- It's dangerous to swing from the shelf and may be deform the tube.
- Put the shelf on horizontal position and place clothes eqably in use.
- Forbid using the shelf by stoves.
- Clear the dirt off the shelf with soft detergent, then wash it with water.
- When no use store it in a dry place.

