 


INSTRUCTIONS FOR USE

1. Open the battery box.

Place 3 new same type AA batteries.

Insert new batteries in the right place as the picture shows above.

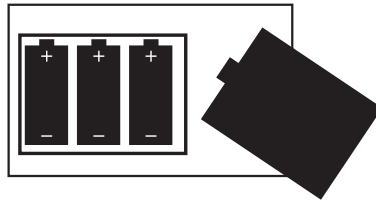

2. The lantern has 3 modes which the position of the switch determines the mode


The lantern is turned off when the switch is in the middle

The lantern will be lit when the switch is in the left


The lantern will be lit with music when the switch is in the right



OFF

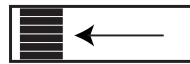

Lighting

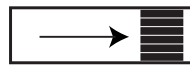

Lighting & Music

TECHNIQUE CHARACTERISTIC:

1. Input Voltage: DC5V
2. LEDs: 1pcs
3. IP20
4. Power: 1.5W
5. Battery Specification: AA 3*1.5V (not included)/USB Cable

FOR SAFETY'S SAKE

1. Please do not disassemble or replace the internal parts yourself;
2. Indoor use only;
3. The continuous work time does not exceed 4 hours;
4. Put it in a suitable place away from children;
5. Please retain this information for further reference.

WARNING!

1. Keep away from fire.
2. Always remove exhausted batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Only batteries of the same or equivalent type are to be used.
5. Do not mix old and new batteries.
6. Insert the batteries in the correct polarity.
7. Do not short circuit the supply terminals.
8. Throw the exhausted batteries in the right ashbin, or they will pollute.
9. Keep batteries away from young children.

Made In China

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it