 




INcrb109\_US

**831-408\_831-409**

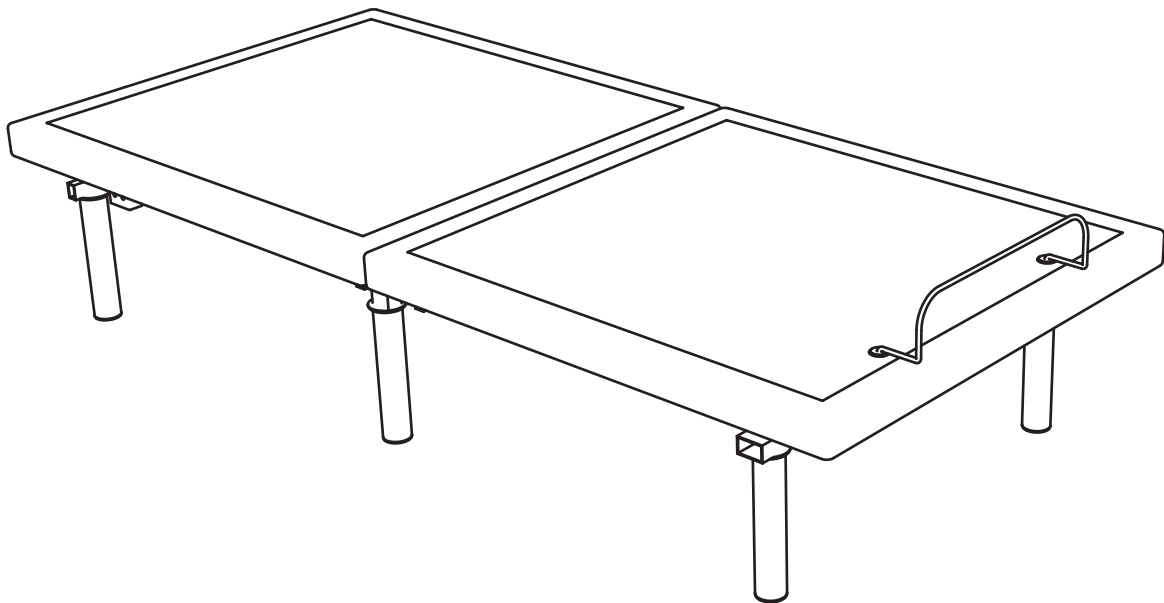

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

**ASSEMBLY INSTRUCTION**

# Chairs

## **IMPORTANT-KEEP THIS INFORMATION FOR YOUR SUBSEQUENT CONSULTATION: READ CAREFULLY**

**Only for domestic use**

### **Use tips:**

- \*Put the chair stably on a flat floor.
- \*Building the chairs in good condition.
- \*Stay away from open flames.
- \*Avoid the overload at the chair.

### **Precautions before assembly:**

- \*Prepare a clean and dry mounting area.
- \*Verify that the product is not damaged.
- \*Check that none of the pieces are missing.

### **Maintenance:**

- \*Clean with a soft fabric.
- \*Regularly remove leaves and / or water collected on the canvas.
- \*Check the seating regularly.

 
### **Storage conditions:**

\*The fabric should be stored completely dry, in a clean and dry place to avoid the risks of mold.


**Caution with the risks of pinching or cuts during assembly.**

**The manufacturer declines all responsibility in case of damages due to a bad installation.**


**If the seating is fitted with seat height adjustment with energy accumulators, only trained personnel may replace or repair seat height adjustment components with energy accumulators.**

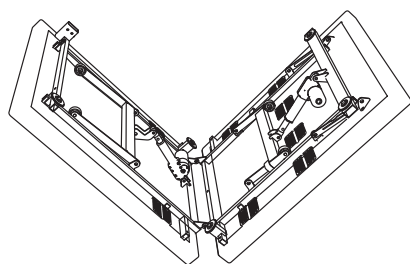

**A** x 1

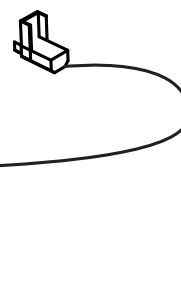 

**B** x 1

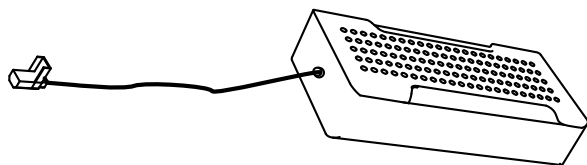 

**C** x 1



**D** x 1

Power Adapter

Power outlet



**E** x 6

Leg



**F** x 1

Matress Retainer  
Bracket



**G** x 2


Spring pin




**H** x 1

remote control


Input voltage	100-240	V
Input AC frequency	50/60	Hz
Output voltage	29	V
Output current	4	A
Output power	116	W
Average active efficiency	85	%
Efficiency at low load (10 %)	76.58-72.23	%
No-load power consumption	0.14-0.3	W

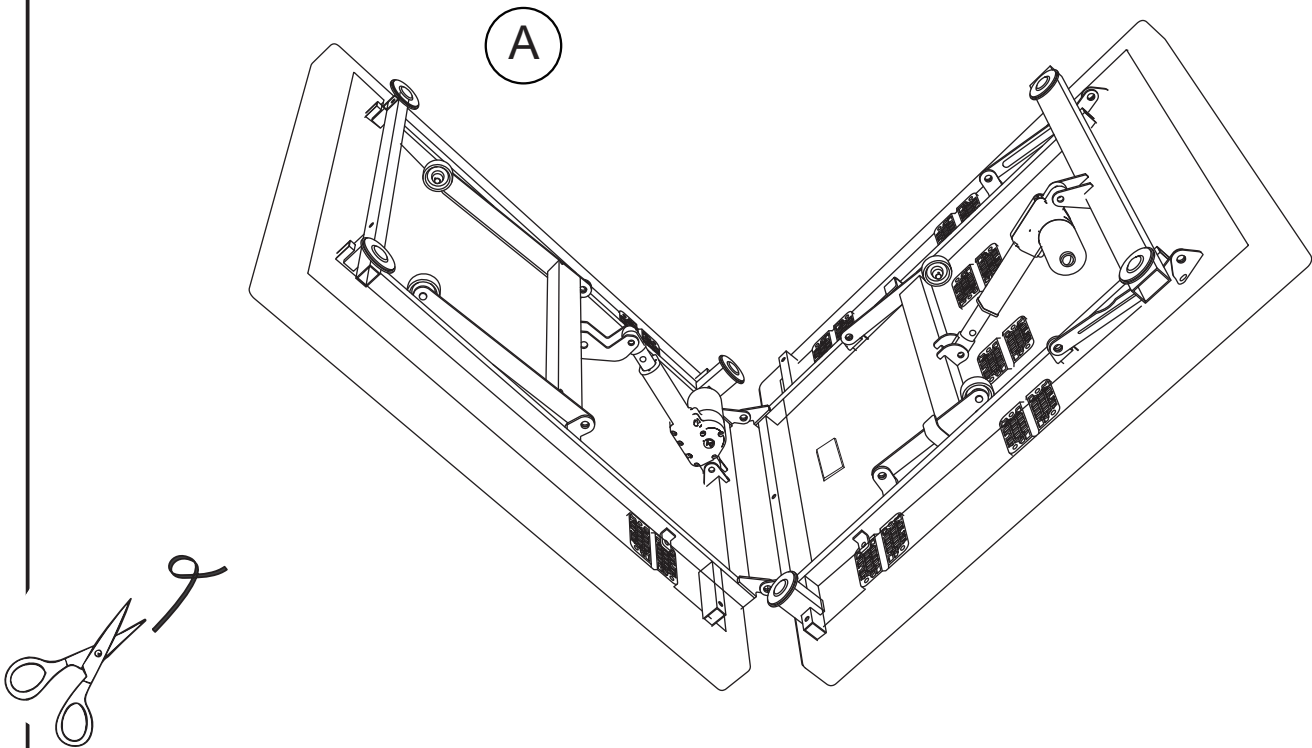 

 
1. Open the box, use scissors to cut the tape , check all accessories

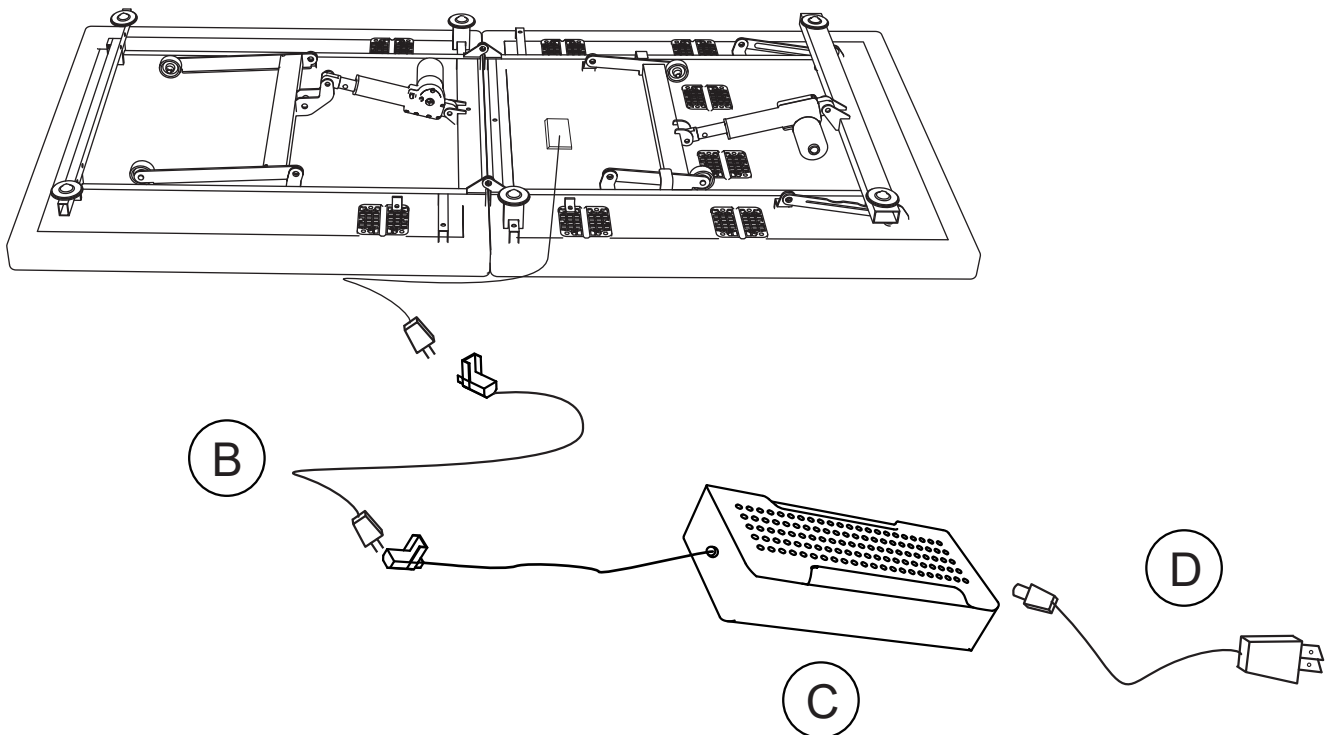

 
2. Make sure the input power cord and outlet is properly connected

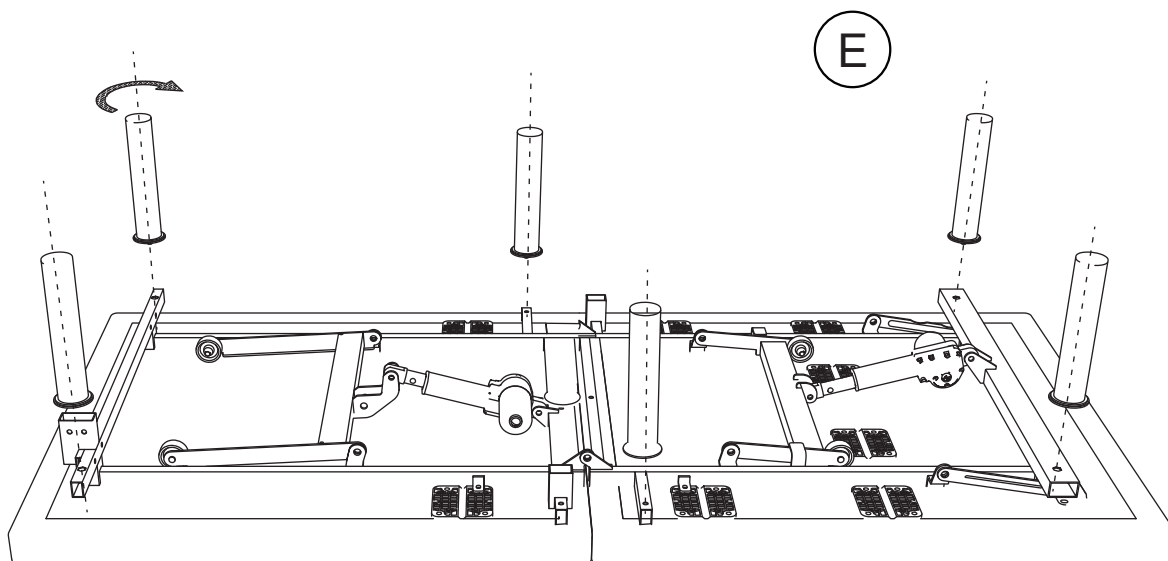

   
3. Turn the legs in a clockwise direction into holes on the bed frame, fasten the 6 legs into the bed

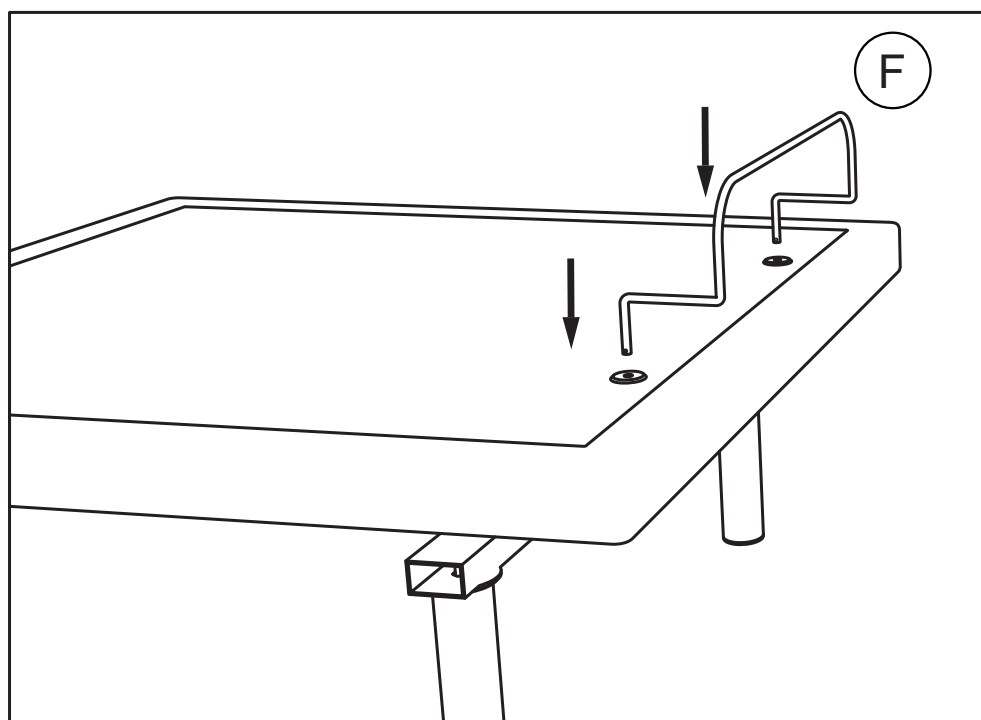



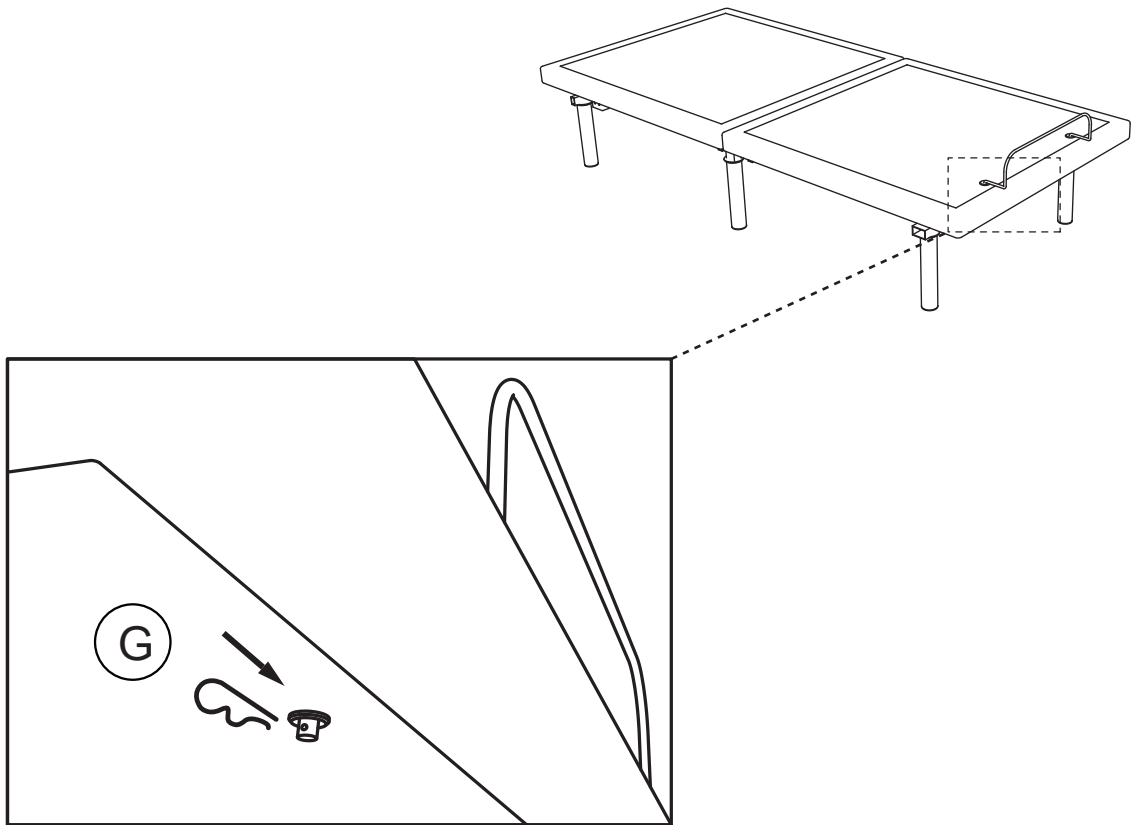

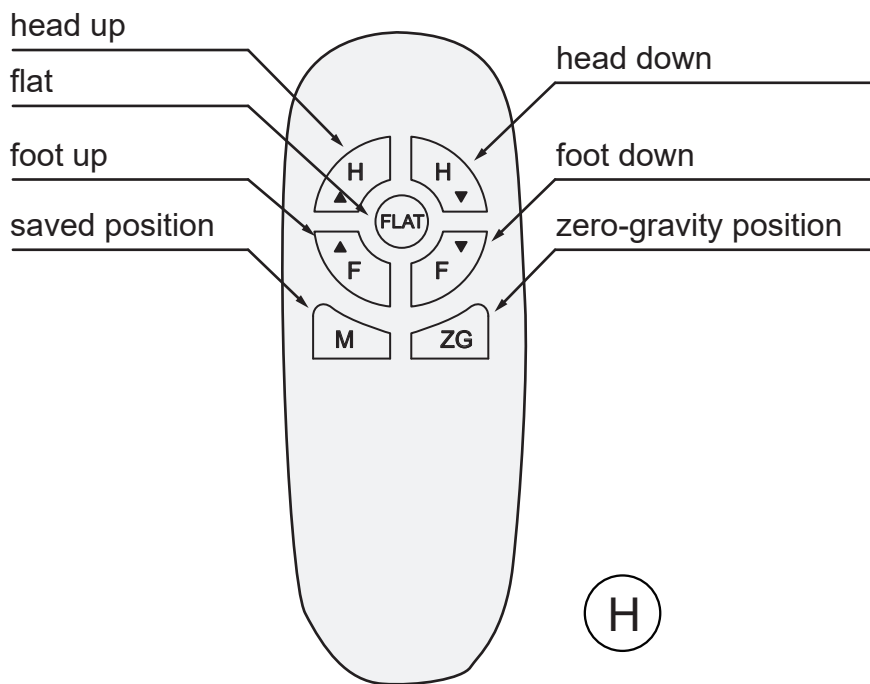


4. Carefully rotate the base frame so the top side is facing upward. Be careful not to rest the frame on one side, the weight may damage the legs. Insert the two ends of the bracket into the bed



5. Insert the spring pin from the bottom



6. Place batteries into the remote control (3 x AAA batteries)

Symbol	Function
	Press this button and raise the head of the bed
	Press this button and lower the head of the bed
	Press this button and raise the foot of the bed
	Press this button and lower the foot of the bed
	Press "FLAT" button to return bed to the flat position
	Press and keep 3S, the back light on the remote will flash 3 times, then, it will remember current position
	Press head down and foot back button together and keep 3S, the back light on the remote will flash 3 times, the current position will be treated as ZG. Press ZG, it will work as set position

### Attention:

- 1、 Be sure to connect the plug correctly as per the direction and connect the power before using
- 2、 Close supervision is necessary when this furnishing is used by or near children, invalids or disabled persons
- 3、 Please do not plug or unplug any connecting wire when the power is connected, which may cause operation function failure. If this happens, cut off the main power supply (Disconnect any end of the connection of part B in step 2), it can be restored after being reconnected for about 30S;
- 4、 Before first using, the remote should be paired with the control box. The specific methods are as follows:
  - A. Pair method: after the control box is disconnected from the power supply for 5S (disconnect either end of the connection of Part B in Step 2), reconnect the power supply, Control box enters pairing state
  - B. Pairing duration: The pairing button flashes for 15 seconds
  - C. Pairing action: During this period, hold the head lift button and foot lift button of the remote for 3S
  - D. Successful matching performance: backlight flash 3 times, control box beep 1 time. If any key is not pressed within 15S of the pairing key flashing, the indicator light of the control box will stop flashing. The original pairing of the hand controller will not be emptied, and the indicator light of the control box will always be on
  - E. After the pairing is successful, the operation button will start the corresponding function
- 5、 To unpair a remote, press HEAD DOWN and FOOT DOWN button together for 3S, the backlight of the remote flashes 3 times, the buzzer sounds, and the pairing is cleared
- 6、 When the remote control presses multiple keys at the same time, the system will recognize them as invalid keys and will not respond. Except for special combination keys
- 7、 It is not recommended to operate multiple motors at the same time, except for special functions
- 8、 Please replace the battery of the remote in time. Remove the battery when it is not used for a long time

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it