

CLOTHES DRYER

EN

ITEM NO:850-046

Model No: BK-703



Instruction manual:

This clothes dryer is intended for the use in house areas .

Read the instructions carefully before operating

Specification

Voltage: AC220-240v

Frequency:50Hz

Rated power: 300W

Unit size: 1440 mm*730mm*670mm

OPERATING INSTRUCTION

- 1) Please read the installation instruction carefully to understand how to install your towel warmer.
- 2) Make sure to complete the installation. Press the switch to (0) position (Power indicator is off)
- 3) Plug the power cord into an electrical outlet.
- 4) Press the switch to (1) position (Power indicator lights up) , then the heater is start working.

MAINTENANCE

If the supply cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified persons in order to avoid hazard.

WARNING

 
 
 
This appliance is intended only for drying textiles washed in water.

THE CLOTHES DRYER IS ONLY ALLOWED TO BE INSTALLED AT A DISTANCE OF AT LEAST 0.6M FROM BATH TUBES SHOWERS.

PLS DO NOT PUT HEAVY OR MORE THAN 5KGS PRODUCTS ON THE CLOTHES DRYER.

PLS DO NOT PUT THE QUILT COVER THE WHOLE PRODUCT'S SURFACE TO AVOID HIGH TEMPERATURE INSIDE

INSTALLATION INSTRUCTION

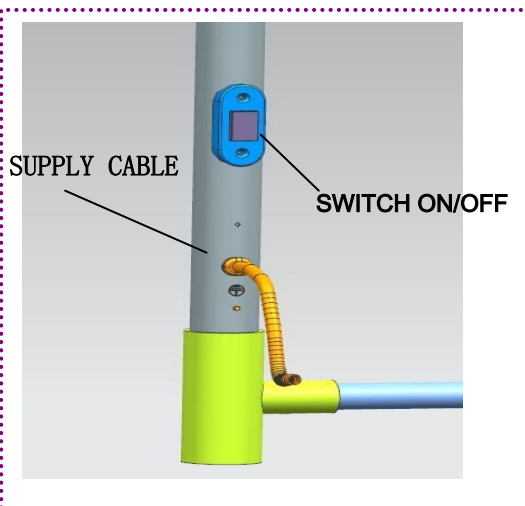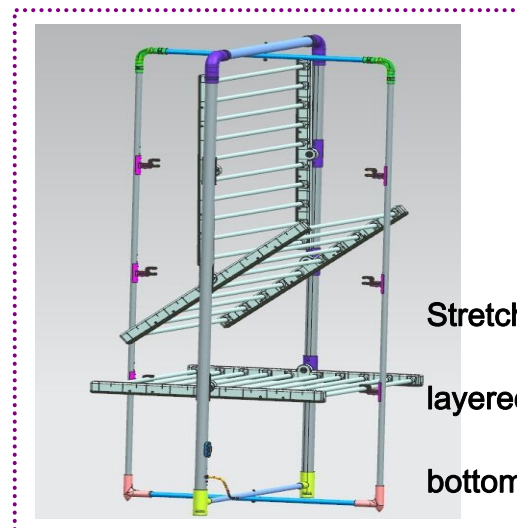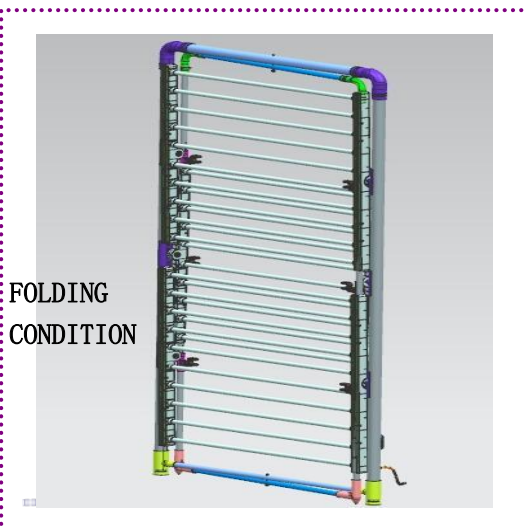

IMPROTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. Extreme caution is necessary when towel warmer is used by or near children or invalids and whenever the heater is left operating and unattended.
3. Always unplug heater when hot in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner .Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors.
6. Never locate heater where it may fall into a bathtub or other water containers.
7. Does not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like? Arrange cord away from traffic area and where it will not be tripped over.
8. To disconnect heater, remove plug from outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
10. Do not use it in area where gasoline, paints, or flammable liquids.
11. Use this heater only as described in this manual .Any other use not recommended by the manufacture may cause fire, electric shock, or injury to persons.
12. Keep these instructions for your late reference.

CAUTION:

- THIS HEATER ONLY OPERATES IN UPRIGHT POSITION.**
- STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE.**
- DO NOT STORE UNTIL THE HEATER HAS COOLED DOWN.**
- ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE**
- THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET.**

This appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.