



**SPECIFICATIONS:**

Rated Power : 2850-3100W  
Rated Voltage : 230V  
Rated Frequency : 50Hz  
Unit Size : 600\*360\*64mm  
N.W. : 4.4kg



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

**ASSEMBLY & INSTRUCTION MANUAL**

## 1. SAFETY CAUTIONS

### **Warning:**

Switch Off the induction cooker in case of any crack on the cook-top panel

1. Do not place the unit in any place that is near gas or hot environment in order to avoid damages or malfunction.
2. To reduce the risk and damage, this plug should be fit into an individual outlet. The rated electrical current is not less than 13A.
3. Place the unit on a level surface, the distance between it and its background surrounding must be not less than 10cm.
4. Do not immerse the appliance and electric cord in water liquid, or allow liquid to go into the cabinet and get short/contact inner electrical parts, the power cord must be plugged out before cleaning.
5. Do not cover gas vent with anything during cooking, otherwise it will cause danger.
6. To avoid danger, please uncap the cover before heating tinned food.
7. If it is still not working after the inspection by self, please immediately contact with our service points, do not apart the unit to avoid any danger.
8. Be sure to use the power cord recommended by the appliance manufacturer after it is damaged.
9. It would get dangers when the metal gets heated directly or indirectly.
10. Do not place any metal on the plate, also the nonmetal pad within 10cm.
11. Do not cook with an empty pot, it will cause malfunction or danger.
12. Always clean the unit to avoid any dirt goes into the fan to effect normal working.
13. Do not touch the plate while the unit is working, to avoid getting burned.
14. Do not let children operating alone to avoid getting burned or danger.
15. Who with cardiac pacemaker, please operating the unit after confirm with doctor there's no any effect.
16. Do not operate the unit on the gas stove to avoid any danger.
17. Please do not place paper, cloth or other articles under the bottom of the pan to get heated, to avoid the danger of fire.
18. Do not place the unit on the cloth, carpet to avoid blocking the gas vent.
19. Please kindly avoid hitting the plate of the unit, in case of getting cracked, should turn off the unit and plug out immediately, and then contact with service points of our company.
20. Do not touch the control panel with any sharp implements.
21. Do not place any metal on the unit while operating.

## 2.PRODUCT OPERATING INSTRUCTIONS

- 1.After inserting the plug into the socket,a “Beep” will emit and all the indicators and display screen will light for 1 second,indicating the appliance in connection with a power source, known as standby mode.
- 2.Place a suitable cookware on the center of the cooking zone.
3. The indicator above [On/Off] lights and indicator of power remains light up when [On/Off] key is pressed once,the appliance goes to selection mode,the indicator of power flashed.
4. Press the corresponding function keys to start operation.Stop the operation and switch to standby mode by pressing [On/Off] key after cooking.

### 2.1 Cooking Mode:

#### Function:

- Press the [Function] key until the indicator of [W] remain light up,display will show [1800] representing that the default power is 1800W.It can be adjusted by pressing the [+] or [-] key to set the desired power level.
- There are 8 power levels in total  
(200-500-800-1000-1200-1400-1600-1800W)
  
- Press the [Function] key until the indicator of [°C] remain light up,display will show [240°] representing that the default temperature is 240 °C.It can be adjusted by pressing the [+] or [-] key to set the desired temperature level.
- There are 8 Temperature levels in total  
(80-100-130-160-180-200-220-240 °C )

### 2.2 Timer Function:(4 Hours Timer)

1. User can set the cooking time when specific cooking model is selected.
2. Press the [ Timer ] key until the indicator of [T] lights up.
3. Display will show the default time[00: 00],user can press[+] or [-] key to set for the desired time.
4. Press[+] or [-] key once can increase or decrease 1minute.
5. Press and hold for 3 second to access quick adjustment,the time can be adjusted from 0 minutes to 4 hours.
6. After setting,user can press Cooking key once to confirm or wait until the display stop.
7. The screen will display the desired power or temperature and remaining timer alternately.
8. After the beep signal,the appliance will stop the operation and change to off mode automatically when the end of the countdown.
9. To Cancel this function,user can either press the [On/Off] key to return to standby mode or hold the cooking key to resume the desired power or temperature operation.

10. After confirm the timer setting,user can switch the cooking function between power and temperature,this action won't cancel the timer setting.

### **2.3 Lock Function:**

--Press the [Lock] key 3 seconds until the indicator remains light up,display will show [LOC] representing that all functions are locked. Re-press the [Lock] key 3 seconds, the cooker will be unlocked.

## **3. SELECTION OF COOKWARE**

### **1. Material required:**

- ❖ Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26cm.
- ❖ Suggest to use the required pot,do not try to use other pot instead (especially pressure



### **2. Please kindly according to the below requirement if necessary to use the vessel is not equipped**

- ❖ Pan/Pot must be suitable for induction cooker.
- ❖ Pan/Pot should be tried out if it's bought by self to see if there are unusual phenomena.
- ❖ Pan/Pot bought by self should be flat and come with the cover with gas vent.

## **4. MAINTENANCE AND DAILY CARE**

- 1.Remove the power plug prior to clean the unit.Do not clean it until the surface cools down.
- 2.Glass Plate,Panel and Shell:
  - ❖ Soft Cloth for slight stain.
  - ❖ For greasy,dirt,blot by using a clean damp cloth with neutral detergent.
- 3.While the radiator-fan working,dust and dirt would remain on the gas vent,please clean it by brush or cotton stick regularly.
- 4.Remember do not washing the unit by water directly to avoid damaging.
- 5.To protect induction cooker, be sures to have a good contact between plug and socket before using.
- 6.Do not pull out the power cord directly during operation.To extend the appliance's using life, press the "On/Off" button first,then pull out the power cord.
- 7.In order to make operating time longer,the fan would still work for cooling the plate,is better to plug out after the fan stops working.
- 8.Please pull out the power cord and put it away when not used for a long time.
- 9.Some models have structural design to against cockroaches,if needed,can put something like mothball to expel the cockroaches.

## 5. TROUBLESHOOTING AND TREATMENT

During operations, If any error occurred, please check the following table before calling for service. Below are common errors and the checks to perform

| PHENOMENON   | CHECK POINTS   | REMEDY   |
|--|--|--|
| <ul style="list-style-type: none"> <li>After connecting the power and pressing the "Power" key, the appliance has no response</li> </ul> | Is the electricity in suspension?  | Use after resuming the electricity   |
|  | Is the plug connected firmly?  | Check the root causes carefully. If the problem can't be fixed, please contact service center for checking and repairing.                                    |
|  | Is the fuse broken down?   |  |
| <ul style="list-style-type: none"> <li>Induction Cooker send out "Beep" Sound</li> </ul>   | Incompatible cookware or no cookware is used?                                | Replace compatible cookware for the induction cooker   |
|  | Is the cookware not considerable placed from the center of the heating zone? | Replace the cookware at the center of the defined heating zone   |
|  | Is the cookware bigger than 12cm?  | Change the diameter of cookware bigger than 12   |
| <ul style="list-style-type: none"> <li>No Operation during the heating being in use</li> </ul>   | Is the cookware empty or the temperature too high?                           | Please check whether the appliance is being misused  |
|  | Is the air intake/exhaust vent clogged or dirt has accumulated               | Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down.   |
|  | Is the cooker working over 2 hours without any external instruction?         | Reset cooking modes or use timer function  |
| <ul style="list-style-type: none"> <li>Error codes occur E0</li> </ul>   | Without Cookware or Incompatible cookware used                               | When showing error signal E0, E3, E5, please check whether the cookware is not suitable, or switch on the appliance again after it is cooled down naturally. |
| <ul style="list-style-type: none"> <li>Error Codes occur E1</li> </ul>   | Low-Voltage  |  |
| <ul style="list-style-type: none"> <li>Error Codes occur E2</li> </ul>   | High-Voltage   |  |
| <ul style="list-style-type: none"> <li>Error Codes occur E3</li> </ul>   | Top plate Overheat or short circuit  | When showing E1, E2, E4, E6, please contact service center for checking and repairing  |
| <ul style="list-style-type: none"> <li>Error Codes occur E4</li> </ul>   | Top Plate Sensor Open Circuit  |  |
| <ul style="list-style-type: none"> <li>Error Codes occur E5</li> </ul>   | IGBT Overheat or short circuit   |  |
| <ul style="list-style-type: none"> <li>Error Codes occur E6</li> </ul>   | IGBT Open Circuit  |  |

If the above remedies/controls can not fix the problem, unplug the appliance immediately, contact service center for inspection and repairing, note the error code and report it to service center Ltd. To avoid any danger and damage to the appliance, do not disassemble or repair it by yourself.

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it