




INcsb044\_UK

**800-110V70**

# INSTRUCTION MANUAL

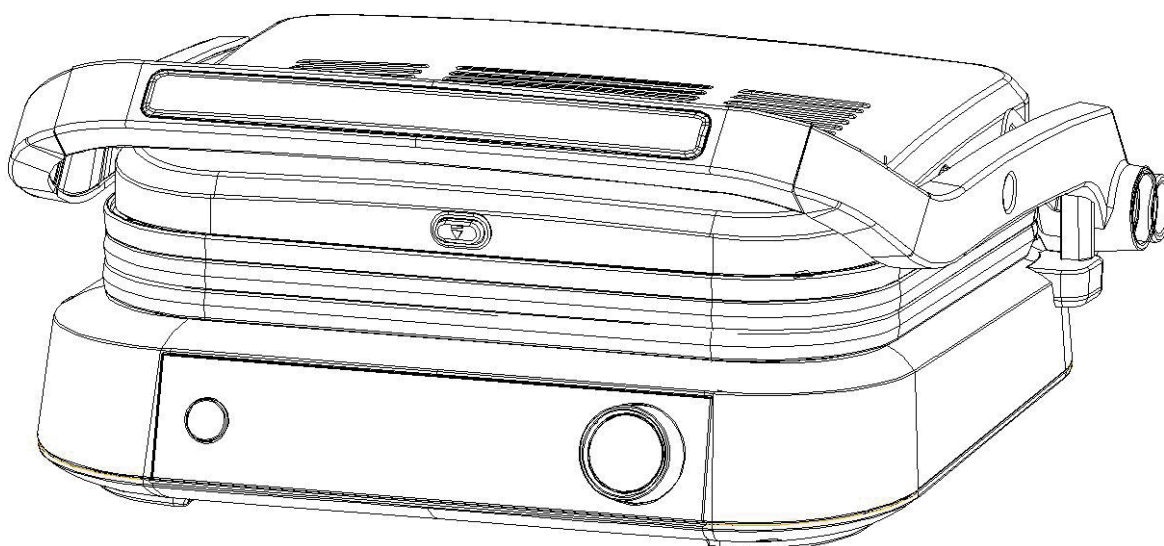

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## OPERATING INSTRUCTION

## ● IMPORTANT SAFEGARDS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. Before using, always check that the electrical rating of the power socket corresponds to that of the appliance.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug, or the grill in water or other liquid.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter, or touch hot surface.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. To disconnect, turn off any control, then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. The appliance must not be used by an external timer or remote control system. Don't use an accessory not recommended by the manufacturer.
17. Don't wrap food with plastic film, polythene bags or metal foil. You'll damage the grill and may cause a fire hazard. Don't leave food to cool on the grill. Remove food while hot.
18. Don't use metal or sharp utensils on the grill. They'll damage the non-stick cooking surface. Use wooden or plastic spatulas or tongs.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. **WARNING:** charcoal or similar combustible fuels must not be used with this appliance.
22. **CAUTION-'hot surface'**. The appliance generates heat and escaping steam during use. Take proper measures to prevent injury, burn or fire.
23. Never transport the appliance with handle.
24. This appliance is intended to be used in household and similar applications such

as:


- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments

25. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

26. Save these instructions.

## KNOW YOUR BARBEQUE GRILL

### CONTROL PANEL

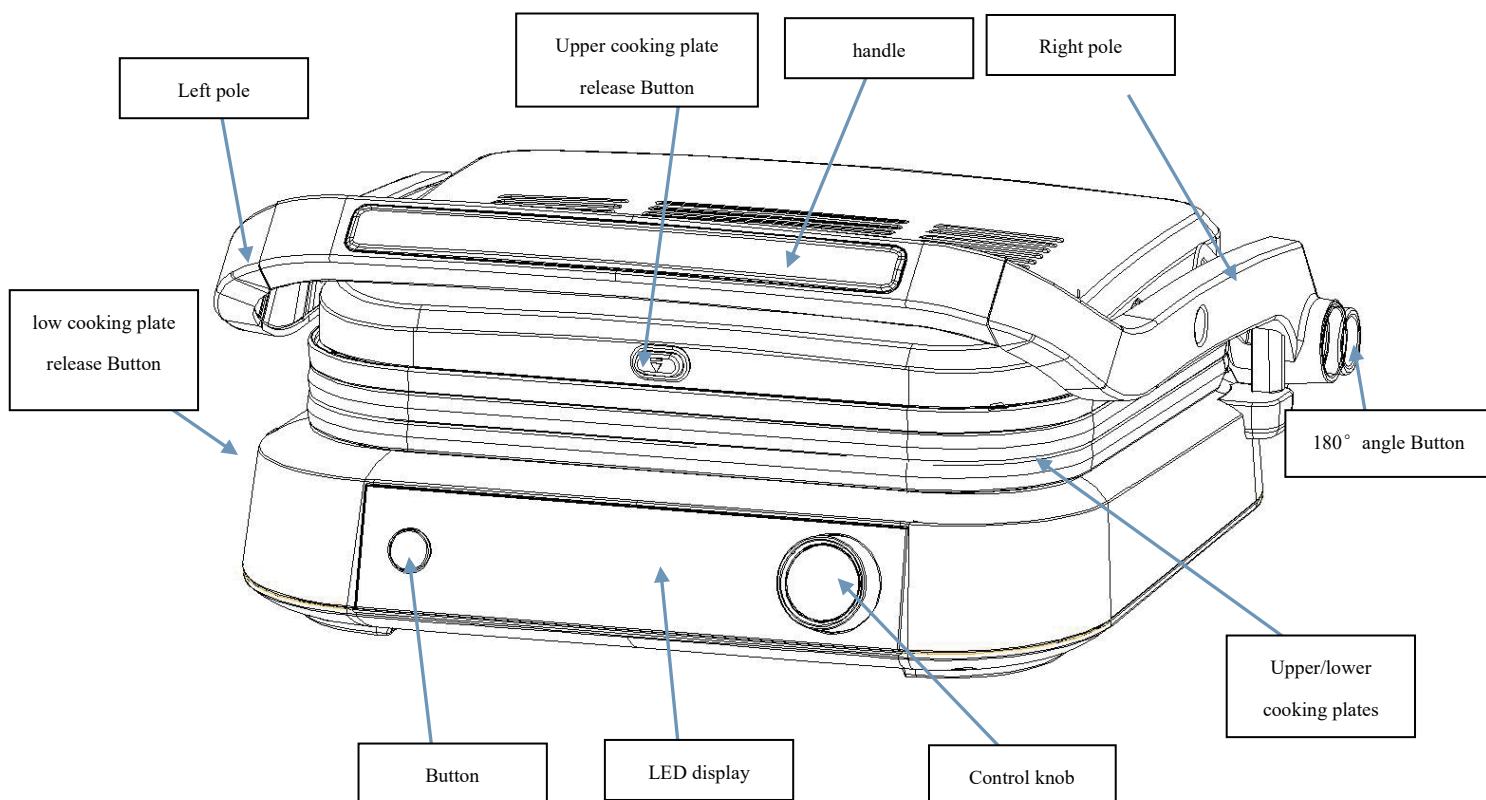


## ● INITIAL USE

Unpack the package, take out all the accessories and clean them according to the section of “CLEAN AND MAINTENANCE”.

## ● ASSEMBLE THE ROASTING TRAYS

Normally, the grill is opened at an angle of 105 degree .The top roasting tray can be level with the bottom roasting tray to create a large cooking surface and assemble the top roasting tray. First open the grill to a angle which is less than 105°, then push the pushing knob upward with the other hand and hold the handle with one hand to open the grill to 180°. Insert the trays into the clamps near the hinge and push down the front end of tray with a little force to snap the tray into place. Then close the grill, just pull the handle toward you directly.

Control panel description

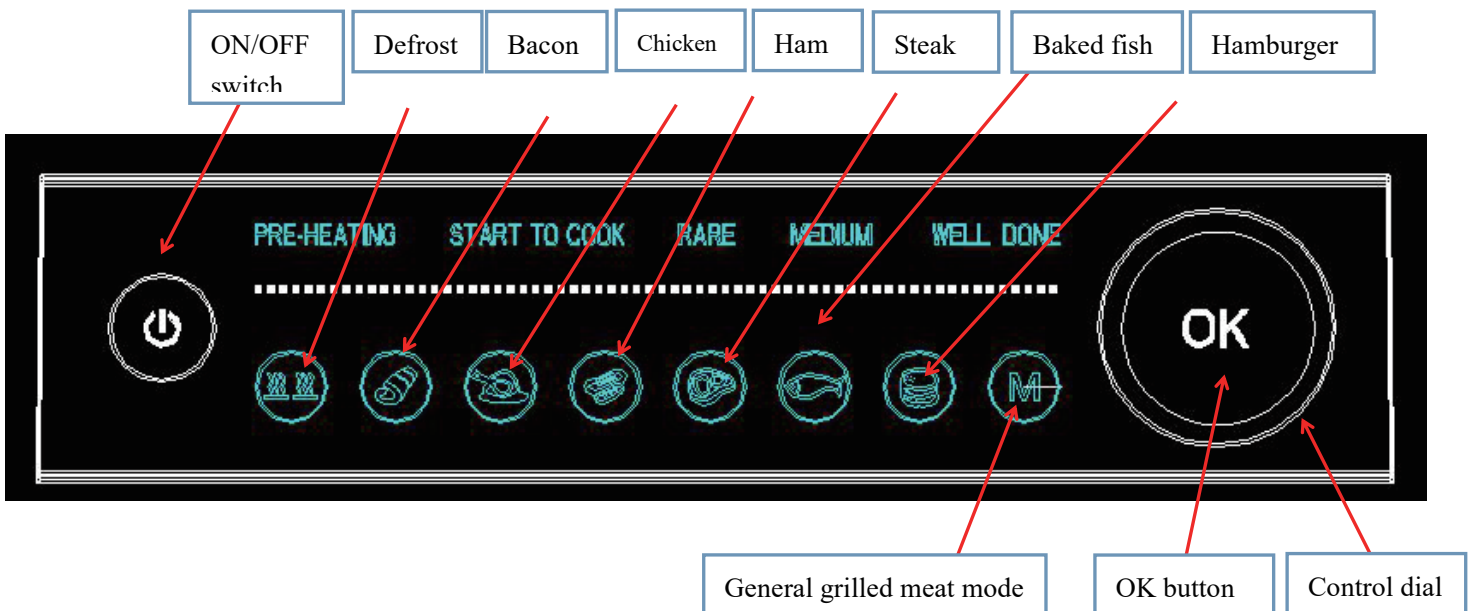

## OPERATION

1.Plug in the mains power cable into a mains power socket.

2.Press the ON/OFF button to turn the appliance.

After turning on the appliance the LCD screen will display on and see food categories.

3.After turning on the appliance the LCD screen will display ON and the food categories.You can chosen food category will illuminate while the other food categories will turn OFF.

4. When the cooking plate reaches the preheat setting emperature, the appliance will make a BIBIBIBI sound to remind you that the preheat has finished, and the appliance is now ready for food to be placed

on it. The LCD screen will display the progress:Pre-Heating pattern will remain ON, Start to Cook will turn ON and blink. And the first one progress bar will turn ON and the second one will blink.The cooking

plates are now ready for food.

5. Place your food on the cooking plates and the close upper cover. The appliance can detect the food thickness within 5s. The appliance will confirm the heating time according to the food thickness.

And the LCD screen will display P: Pre-Heating/Start to Cook pattern will remain ON and the Rare pattern will blink. And the first/the second one progress bar will turn ON, and the third progress bar will blink.

6. With the continuous heating of the machine, the food gradually matures, and the status indicator gradually turns into a long light. Users can judge the food's maturity according to the pattern status (that is, according to the flashing state of the Rare/Medium/Well Done pattern to indicate the cooking maturity of the food). At each maturity of the steak position, the "Bibibibi" prompt sound will be sent out, and the user can choose according to his preference (only the steak position will have the prompt sound. Other gears will not prompt;

7. When your food is cooked properly the Well-Done pattern will remain ON and appliance will make a "BIBIBIBI" sound. You can now take out your food and the appliance will stop heating and auto off at the same time.

8. M mode: press ON/OFF button, then turn the control dial to choose the M button and then press the OK button. Then, the appliance will start general grill meat pattern. M mode can work on the status of cover open.

## **B: GRIDDLE**

1. Open the appliance 180° and lie flat (only use for general meat pattern.)

2. Press the ON/OFF button to start operation.

3. Press the M mode and OK confirmation buttons. The appliance will start to preheat and will stop heating once the cooking plates have reached the setting temperature. You can now put food on the cooking plates to cook.

4. When The appliance is open at 105° or 180° degrees angle you cannot use the smart function.

### **Note:**

1. For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

2. Close up the plates when preheating. After the preheating is done, if you do not lift up the upper plate to put in food, the appliance in the intelligent mode will automatically turn off after a few minutes, but in manual mode, the appliance has no detection function so it will keep running for about two hours till the appliance turns off automatically.

3. When the food is cooked, use the handle to open the lid. Remove the food with a plastic heat-resistant spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.

4. There is beep sound for "RARE" and "MEDIUM" only when you use beef function. And for other functions, there only is beep sound for "WELL DONE".

5. Smart mode is only available when the appliance cover is closed.

6. Smart mode status can have warning sound to remind you to put food on the appliance once preheating has finished. If you do not put on any food, the warning sound will remind you after 5min and remind you again after another 2min. Then auto power-off

7. The appliance starts timing after you have pressed the ON/OFF button. After 2 hours, it will automatically cut off power. If you need to reuse the appliance, press the ON/OFF button again to start to start up the appliance again.

## CLEAN AND MAINTENANCE

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, disconnect the grill and let it cool down completely.

**Note: The grill is still very hot. It will take quite a while to cool down.**

2. Press down release button and take apart the roasting trays.

3. After disassembling the trays, wash the roasting trays in warm soapy water or in a dishwasher. Dry the roasting trays before replacing them on the grill.

4. Remove the upper and lower drip trays with gloves, empty the drip tray into a heat-proof bowl, rinse them in warm soapy water or in the top rack of the dishwasher and then dry them thoroughly.

**Note: before removing the drip box, make sure the temperature of oil or oil residues in the drip box must be lower than 40°C, otherwise it may burn person for high temperature.**

5. Wipe other surfaces of the grill with a clean damp cloth. Use a paper towel moistening with a little cooking oil to remove the stubborn stain.

6. Reassemble the roasting trays into grill.

- Do not immerse the appliance into water or other liquid.
- Do not use harsh or abrasive cleanser or solvent.
- Never use scourers, wire wool or soap pads.

### ● STORAGE

1. Before storing the grill, make sure the grill is clean and dry thoroughly.

2. Close the grill. And rest it flatly.

3. Store the grill in a cool dry area out of the reach of children. The grill can not be rested vertically.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it