 




INcsb053_UK

800-102V70

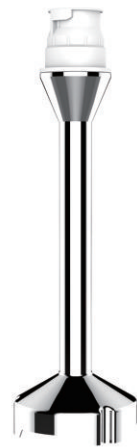

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be always followed, including:

For Your Safety

Read all instructions carefully, even if you feel you are quite familiar with the appliance.

- Unplug from power outlet when not in use and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electric shock or injury, do not immerse power cord, plug or unit in water or other liquid.
- Do not allow the power cord hang over the edge of a table or bench, touch hot surfaces or become knotted.
- Do not place this appliance on or near a gas burner or electric element, or where it could touch a heated oven.
- Do not operate any appliance with a damaged power cord or plug, if the appliance malfunctions, or if it has been damaged in any manner.
- Avoid contact with moving parts. A rubber scraper may be used but only when the unit is not operating.
- This appliance is recommended for household use only. Do not use this appliance for other than its intended use. Do not use outdoors.
- Allow to cool before cleaning.
- Do not attempt to repair or disassemble the appliance. There are no user-serviceable parts.
- Do not connect the appliance to an electrical socket until all parts have been assembled according to the instructions.
- Operate on a dry level surface. Operating on sinks, drainboards or uneven surfaces should be avoided.
- Do not blend hard ingredients or fruit kernels.
- Only use the original beaters and dough hooks attached with the Hand Mixer. Never use different attachments (beater and dough hooks) at the same time.
- Always ensure the beaters or dough hooks are firmly positioned before operating.
- Handle your Hand Mixer and attachments with care. Never place your fingers inside a mixing bowl or near beaters or dough hooks during use.
- Do not open the appliance and never attempt to insert metal objects inside.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation.
- Never immerse the appliance in water or any other liquid.
- Always remove the attachments from the mixer before cleaning.

- Never fold the mains lead or wind it round the appliance, as this could cause the cable to break.
- Always switch the appliance off and then switch off at the power outlet after use and before attempting to move the appliance, before putting on or taking off parts and before cleaning.
- Do not use the appliance if you are on a damp surface, or if your hands or the appliance are wet.
- Do not leave the appliance unattended when in use.
- Never operate the appliance when the mixing bowl is empty, as the motor may over heat.

Warning

 
 
 
If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Only use OEM accessories. Using non - OEM accessories results in an increased risk of accidents. There is no liability for any accidents or damages resulting from the use of non - OEM accessories. The use of non-original accessories and resulting damage to the appliance invalidates any warranty claims.

Save These Instructions

Features of Your Hand Mixer

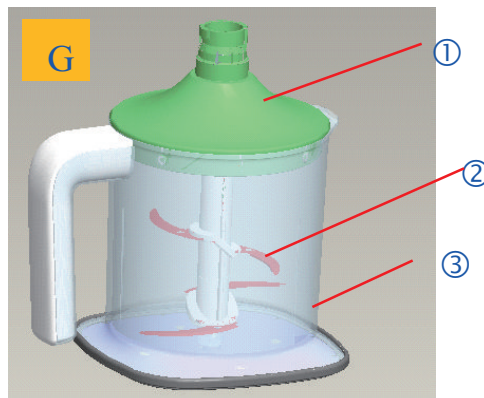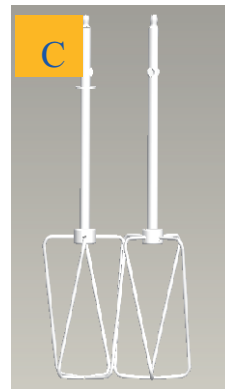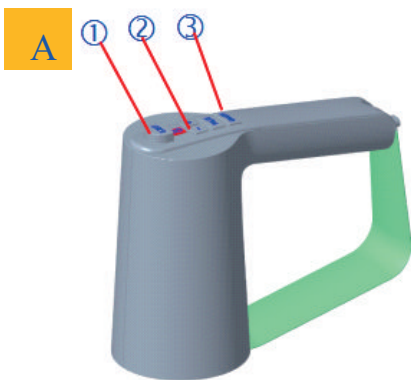

- A) Mixer unit (①Eject button ②pulse button ③Speed selector)
- B) Dough hook
- C) Beater(wire)
- D) Whisk
- E) Bar blender
- F) Beaker with lid (for bar blender)
- G) Chopper (①Chopper lid ②Chopper blade ③Chopper bowl)

Getting to Know Your Hand Mixer

Congratulations on the purchase of your new Hand Mixer.

Before using your new Hand Mixer, it is important that you read and follow the instructions in this booklet even if you feel you are familiar with this type of appliance. Find a place to keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with "IMPORTANT SAFEGUARDS" .

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before First Use

- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- Before using your Hand Mixer for the first time, wash the beaters, dough hooks, whisk, bar blender, beaker, chopper in warm soapy water with a soft cloth. Rinse and dry thoroughly.
- When first using your hand mixer, you may notice an odour from the motor. This is normal and will dissipate as the motor is run in.

WARNING: Do not plug the power cord into an electrical outlet until the accessories such as beaters, dough hooks, whisk, bar blender, chopper have been securely attached. Make sure the Speed Selector is set to the "0" (Off) position.

 
Control Buttons

- Eject button - to release beaters, dough hooks, whisk.
- 1-5 Speed Selector - for beaters, dough hooks, whisk light, medium and heavy mixing; M speed selector - for bar blender and chopper function.
- pulse button- Speed Selector on 1-4, Hi-speed, for heavy mixing; Speed Selector on M, press to start the bar blender and chopper function, release to stop the bar blender and chopper function.

Installing The Attachments

- Ensure the appliance is unplugged from the power socket.
- Ensure that the speed selector is set to the " 0" (Off) position.
- The beater stem ends are shaped to fit the corresponding apertures in the mixer .

- Each pair of beaters(wire), dough hooks has one attachment fitted with a collar with a large diameter on the stem and the other fitted without it on the stem.
- When inserting the beaters, dough hooks, whisk, make sure that the beaters(wire) and dough hooks with the larger disc-shaped collar is placed into the hole with the larger opening. (Fig 1)
- While installing, Align stems and push down Insert the attachments into the holes until they click into place (you may have to rotate them slightly). Check they are in securely and correctly

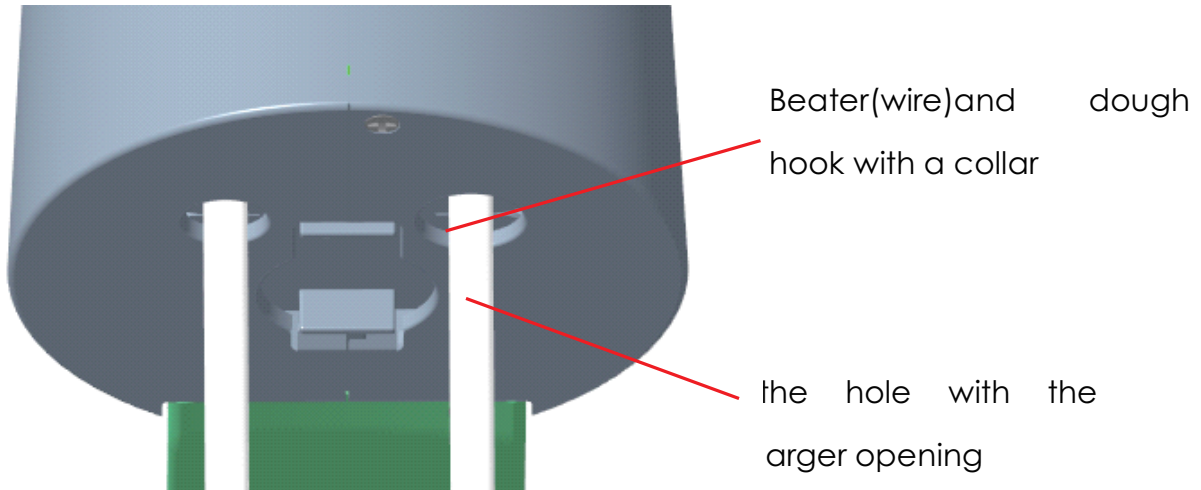

- The bar blender are shaped to fit the corresponding apertures in the mixer .
- Before inserting the bar blender to the mixer door, firstly you use bar blender head to lever the mixer door, then push it down, finally rotate it anticlockwise until they click into place(if you can not hear they click into place, you may have to push it down and rotate it anticlockwise until the head really reach the bottom place). Check they are in securely and correctly. (Fig 2)
- Then you can put it to the beaker with food. (Fig 3)

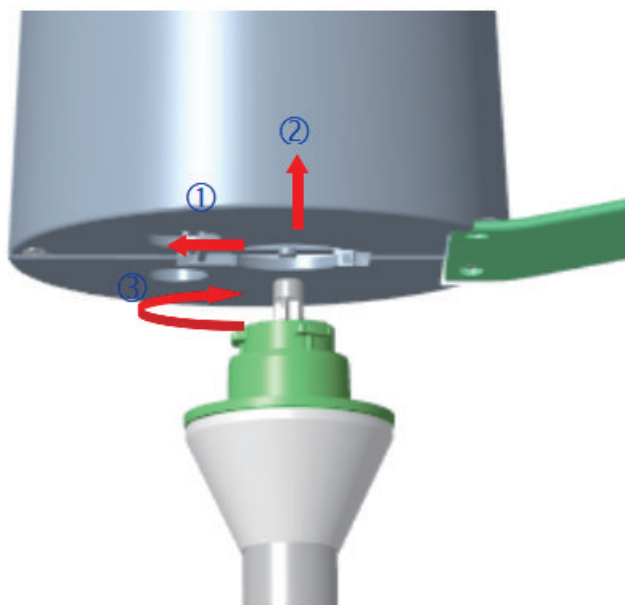 


Fig.2

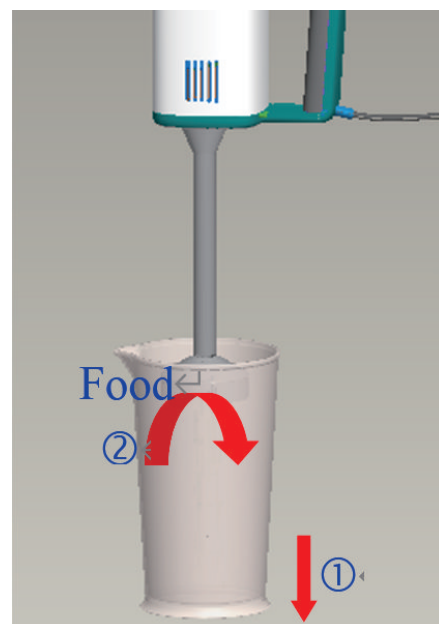 


Fig.3

- The mixer ends are shaped to fit the corresponding apertures in the chopper .
- Before you putting the food into the chopper bowl, you must insert chopper blade into chopper bowl. (Fig 4)

WARNING: The chopper blade is very sharp, please be careful.

- Before inserting the chopper lid to the mixer door, firstly you use chopper lid head to lever the mixer door, then push it down, finally rotate it anticlockwise until they click into place(if you can not hear they click into place, you may have to push it down and rotate it anticlockwise until the head really reach the bottom place). Check they are in securely and correctly. (Fig 5)

- Putting mixer with chopper lid to the chopper bowl, then rotating mixer clockwise until they click into place.(Fig 6) Check they are in securely and correctly. If you find it is difficult to put chopper lid to the chopper bowl, please rotate the drive connector on the chopper lid some angel. (Fig 7).

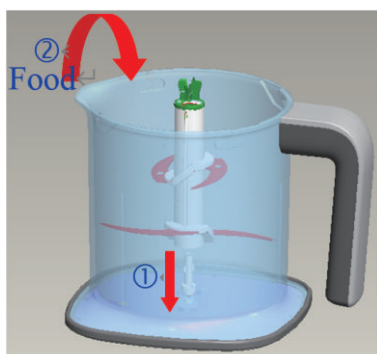 


Fig. 4

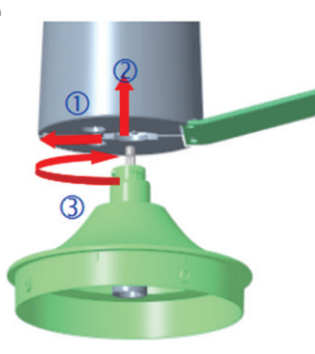 


Fig. 5

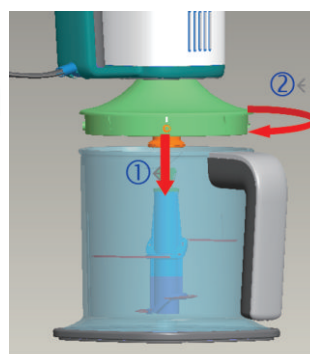 


Fig. 6



Fig. 7

Selecting The Speed

Speed recommendations:

Speed setting	Action	Description
1	Combine/blend	Lowest speed for blending larger quantities and dry foodstuffs, such as flour, sugar. For combining 2 ingred, such as stirring beaten egg white into a mixture.
2	Slow whisk	Perfect speed for adding liquids or mixing salad dressings.
3	Combine/whisk	For pastry or cake mixture.
4	Mix/fast whisk	For whipping cream. For mixing butter and sugar, whisking cold puddings, custard, etc.
5	Whip	For whisking eggs, meringue, potato puree, whipping cream, mayonnaise, etc.
M	Bar blender	Make kinds of fruits and vegetables juice
	Chopper	Food process, meat or vegetables.

Using the Hand Mixer(for beaters/dough hooks/whisk)

- Ensure beaters/dough hooks/whisk are inserted into slots and clicked into place securely.
- Plug into a standard domestic electrical outlet.
- Place the ingredients into a bowl suitable for mixing purposes, grip the mixer handle, and position the beaters/dough hooks/whisk in the centre of the food to be mixed.
- To avoid the ingredients splashing out and the risk of injury when you switch on the appliance, make sure the beaters/dough hooks/whisk are immersed in the food to be processed before you switch it on. Always begin mixing on a lower speed setting "1" to prevent splattering. Slowly increasing to the desired speed for the mixing task (setting 1 for lowest speed, 5 for highest speed). The speed setting can be adjusted during use by turning the speed selector to front or back.
- You can use the pulse button at any time on any setting (except "0"). Press the pulse button to increase the appliance's power and speed to maximum (as speed setting "5"). The pulse button is the equivalent of setting "5" , so when you are on setting "5" , pressing the pulse button will not add any extra power.
- Move the mixer in a slight circular motion during mixing to allow the beaters/dough hooks/whisk to mix the ingredients efficiently. Stop the mixer now and then, using a plastic spatula, scrape down the sides of the mixing bowl, then continue mixing.

CAUTION: Avoid allowing the beaters or dough hooks to hit against the side of the mixing bowl while the mixer is in use as this will result in damage to the beaters/dough hooks/whisk.

CAUTION: To prevent the Mixer from overheating, do not operate it for more than 10 minutes at a time. Allow the appliance to cool down to room temperature before using it again.

Using the Hand Mixer(for bar blender)

- Ensure bar blender is inserted into mixer door and clicked into place securely.
- Plug into a standard domestic electrical outlet.
- Place the fruit/vegetables and water's ingredients into beaker for blending purposes, grip the mixer handle, and position the bar blender's edge against the inner surface of beaker.
- To avoid the ingredients splashing out and the risk of injury when you switch on the appliance, make sure use one hand to hold the beaker. Then speed selector setting on "M" . Press the pulse button to start the appliance.
- In order to blending better, you may moving the mixer up and down the beaker inner surface slightly .

CAUTION: To prevent the Mixer from overheating, do not operate it for more than 1 minute at a time. Allow the appliance to cool down to room temperature before using it again.

Using the Hand Mixer(for chopper)

- Ensure chopper is inserted into mixer door and clicked into place securely.
- Ensure place the meat/vegetables ingredients into chopper bowl for process purposes.
- Plug into a standard domestic electrical outlet.
- Place the meat/vegetables ingredients into chopper bowl for process purposes. Grip the mixer handle.
- Speed selector setting on "M" . Press the pulse button to start the appliance.
- In order to blending better, you may press and hold the pulse button slightly every several seconds .

CAUTION: To prevent the Mixer from overheating, do not operate it for more than 1 minute at a time. Allow the appliance to cool down to room temperature before using it again.

Remove The Beaters or Dough hooks/whisk/bar blender/chopper

- Set the speed selector to "0" position(Off).
- Switch appliance off at the power point.
- Unplug the appliance.
- For dough hooks/beaters/whisk - Press the Eject button, remove the beaters/dough hooks/whisk from the mixer.
- For bar blender - Rotate the bar blender clockwise until end, pull it out of the mixer door.
- For chopper - Rotate the mixer unit anticlockwise until end, pull it out of the chopper.

Note: Never attempt to release the beaters/dough hooks/whisk or rotate the bar blender/chopper while operating the hand mixer. Only take the attachments (beaters/dough hooks/whisk/bar blender/chopper) out of the bowl /beaker when all parts have come to a complete stop.

Note: Always set the speed selector to "0" (Off) while press the Eject button to remove the attachments.

Recipe

Task	Type load	Attachment	capacity	Operating Time
Chopper	Raw beef	Chopper bowl	350g	5s
Blender	Carrots and water	30 oz beaker	320g carrot, 480g water	5S
Food mixer	Dough	Dough hook	Flour: 500g Water: 360g	3min
	Cake bater	Beater		5min
	Water	Whisk		5min

Troubleshooting

Defect:	Cause:	Remedy:
The appliance does not function.	The mains plug is not connected to the electrical socket.	Connect the mains plug to the electrical socket.
	The appliance is not switched on.	Use the 6-step switch to turn on the appliance.
The attachments cannot be removed.	The eject button was not pressed.	Press the eject button to remove the attachments from the unit.
The unit is not mixing.	The attachments were not fully clicked in.	Make sure you push the attachments into the holes until you hear and feel them click into place.
Bar blender or chopper is not work	The speed selector on 1-5 Haven't press pulse button	Setting speed selector on M Press the pulse

Care and Cleaning

 
- DO NOT immerse the appliance in water or any other liquid.
- Always ensure that the speed selector is in the "0" (Off) position and that the power is turned off at the power outlet. Then remove the plug from the power outlet.
- For dough hooks/beaters/whisk - Press the Eject button, remove the beaters/dough hooks/whisk from the mixer.
- For bar blender - Rotate the bar blender clockwise until end, pull it out of the mixer door.
- For chopper - Rotate the mixer unit anticlockwise until end, pull it out of the chopper.
- Use a rubber spatula to clean the beaters/dough hooks/whisk/bar blender/chopper blade/chopper bowl/chopper lid. Then wash the beaters/
dough hooks/whisk/bar blender/chopper blade/chopper bowl/chopper lid inner surface in warm soapy water with a soft cloth.. Rinse and dry thoroughly.

- For the bar blender cleaning - use a beaker with clean water, then blending the clean water can also wash the bar blender.
- Cleaning the attachments in a dishwasher is not recommended.
- Wipe the mixer body and chopper lid out surface with a soft damp cloth and dry.
- Wipe any excess food particles from the power cord.
- Never use sharp or abrasive cleaning products or sharp-edged objects for cleaning.
- Place the appliance and attachments in a dry, cool place.

WARNING: The chopper blade is very sharp, please be careful of cleaning it.
 Specifications

Power Supply.....220-240V ~ 50-60Hz
 Power Consumption.....500W
 Protection class..... II

Rating Label (L50*W30mm)

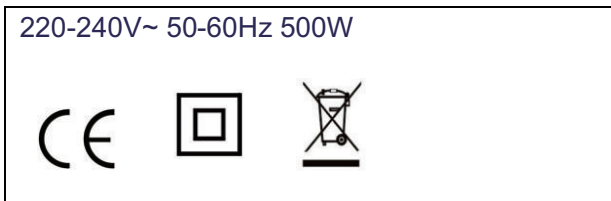

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.



The product packaging is made of recyclable materials. The packaging material can be taken to public recycling collection points.



Old appliances do not belong in household waste! To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted. In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators.

