



INcsb088_US

800-146V80



DIGITAL AIR FRYER TOASTER OVEN

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

CONTENTS

IMPORTANT SAFEGUARDS.....3

SPECIAL CORD SET INSTRUCTIONS4

FEATURES AND BENEFITS5

GETTING TO KNOW YOUR CONTROL PANEL7

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially near children, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. **UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.** Allow to cool before cleaning or handling, putting on or taking off parts.
3. Do not touch hot surfaces. Use handles or knobs.
4. To avoid electric shock, do not place any part of the appliance in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near small children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned, has been dropped or damaged in any way or has been dropped in water. Return the appliance to the store or retailer where purchased for examination, repair or adjustment.
7. The use of accessory attachments not recommended may cause injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets. Do not let the cord touch hot surfaces,, which could damage the cord.
10. Do not place the appliance on or near hot gas, electric burner or in a heated oven.
11. Do not use this appliance for anything other than its intended purpose.
12. Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the oven.
13. To avoid burns, use extreme caution when removing the appliance or disposing hot grease.
14. When not in use, always unplug the unit. Do not store any materials other than manufacturer's recommended ovenproof accessories in this appliance.
15. Do not place paper, cardboard, plastic or similar materials into the appliance.
16. Do not cover the tray or any part of the oven with metal foil - this will overheat the oven.
17. Do not place oversize foods, metal foil packages and utensils in the appliance – this is an electrical hazard.
18. It is a fire hazard to keep the appliance covered or touching flammable materials such as curtains, draperies or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets
19. Do not clean with metal scouring pads - pieces can break off the pad and touch electrical parts, potentially causing an electrical hazard.

20. Do not attempt to dislodge food when the appliance is plugged in.
21. Warning: To reduce the risk of a fire, NEVER leave the appliance unattended during use.
22. Use recommended temperature settings for all cooking/baking, roasting and air frying.
23. Do not rest cooking utensils or baking dishes on the glass door.
24. Do not operate your appliance in a garage or under a wall cabinet. Always unplug the unit when storing. Not doing so is a fire hazard.
25. Extreme caution must be used when moving an appliance containing hot oil and liquids.
26. To disconnect, press Start/Stop to ensure cooking has stopped, then remove plug from wall outlet.

SAVE THESE INSTRUCTIONS

Please read and keep these instructions for future reference. They will help you get the best out of your appliance.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks of entanglement and tripping over. Extension cords are available and may be used with care.

If an extension cord is used, the marked electrical rating must be at least as great as the electrical rating of the appliance. The longer cord should not drape over the countertop or tabletop, where it can be tripped over or pulled on.

NOTICE

This appliance has a polarised plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarised outlet only. If the plug does not fit fully into the outlet, contact a qualified electrician. Do not attempt to modify the plug in any way.

FOR HOUSEHOLD USE ONLY.

NOT INTENDED FOR COMMERCIAL USE.

FEATURES AND BENEFITS

1. Control Panel

Large LCD, dial and intuitive buttons for easy use (see details on page 5).

2. Cool-touch handle

Handle designed to stay cool during cooking.

3. Interior light

You can easily see food cooking.

4. Viewing window

Large viewing window to check progress.

5. Oven rack

Can be used in two positions.

6. Rack positions

A. Position 1: The bottom position - this is recommended when cooking larger foods (e g whole chicken).

B. Position 2: Refer to oven rack and pan position diagrams for specific functions.

NOTE: Refer to page 8 for suggested rack positions with different functions.

7. Temperature dial.

8. Pull-out crumb tray.

The crumb tray comes already positioned in your oven – it slides out from the lower front of the oven to clean.

9. Baking/drip pan.


 
Use the basket when using the air fryer, broil or dehydrate functions for better cooking results. We recommend setting the air fryer basket in the baking/drip pan.

10. Air fryer basket.

Use when Baking or roasting. Use baking/drip Pan with the basket when air frying, broiling or dehydrating.

11. Dehydrating racks.


12. Timer dial.

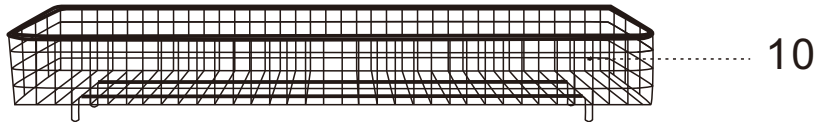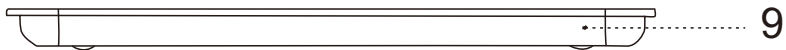

GETTING TO KNOW YOUR CONTROL PANEL

1. UI surface

This is the UI display and buttons function as shown. On the left, you have the choice of nine function keys. The right shows the work parameter selection keys. The middle shows the current status.

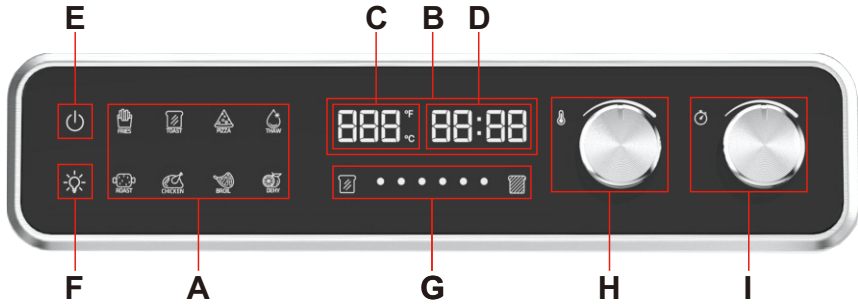

A: Function menu: FRIES, TOAST, PIZZA, THAW, ROAST

Roast, CHICKEN, BROIL, DEHYDRATE.

B: Temperature and time region:

C: Temperature region:

D: Time region:

E: Power/stop/start button:


Button has two colours: (Power or Suspend)/ (Start) .

F: Oven light button: - Press to turn on oven light. Press and hold to turn off.

G: TOAST shades control region: Total of six colour effects.

Users can click the left and right icon to select their preference.

(and), The more dots in the middle, the darker the colour will be.

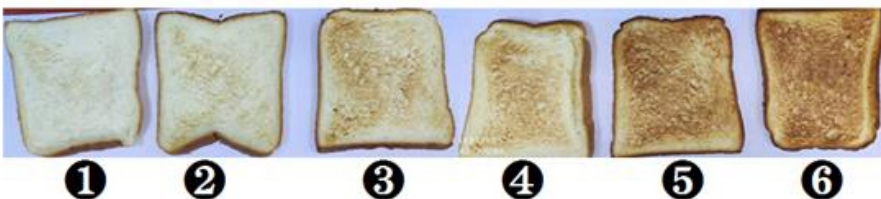

H: Temperature knob: °⌚ it increases clockwise and decreases anticlockwise

I: Timer knob: °⌚ it increases clockwise and decreases anticlockwise

OVEN RACK AND PAN POSITION DIAGRAMS

Please refer to the chart below for suggested oven rack, baking/drip pan and air fryer basket positions.



Air Fryer Basket



Baking/Drip Pan



Oven Rack



Dehydrating Racks

SUGGESTED RACK/PAN/BASKET POSITIONS

Function	Position 2				Position 1			
	Air Fryer Basket	Baking/Drip Pan	Oven Rack	Dehydrating Racks	Air Fryer Basket	Baking/Drip Pan	Oven Rack	Dehydrating Racks
Toast			X					
Pizza						X	X	
Broil	X	X	X		X	X	X	
Roast		X	X			X	X	
Dehydrate	X			X				X
Fries/Chicken	X				X			
Thaw	X	X	X		X	X	X	

TIPS AND HINTS

Fries



/Fries:

Default time: 15 minutes, Time Range: 10~45 minutes:

Default Temperature: 400°F, Temperature range: 400~450°F.

Toast



/Toast:

Default Shades: shades 3, show • • •

Default Temperature: 450°F, Temperature and time cannot be selected.

Pressing means plus, Pressing means minus,

Shades 1 show •

Shades 2 show • •

Shades 3 show • • •

Shades 4 show • • • •

Shades 5 show • • • • •

Shades 6 show • • • • • •

If toasting two pieces, place them in the middle of the oven rack.

Four pieces should be evenly spaced - two in front and two at the back.

Always use Position 2 for toasting. Do not invert rack in Position 2 as this may result in burning.

Pizza



/Pizza:


Default time: 10 minutes, Time range: 5~30 minutes:

Default temperature: 450°F, Temperature range: 350~450°F.

For best results, place frozen pizza on inverted rack in Position 1.

For fresh pizza, place the dough directly on the baking/drip pan on the rack in Position 1.

Thaw

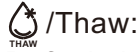

Default time: 60 minutes, Time range: 10~60 minutes:

Default temperature: 130°F, Temperature range: 130~180°F.

All frozen ingredients can be thawed through this function.

Roast



Default time: 60 minutes, Time range: 10~60 minutes:

Default temperature: 130°F, Temperature range: 130~180°F

Dress up vegetables by roasting them. As they caramelize, they become sweet. Due to some foods roasting faster, check the progress at least 5-10 minutes before the end of suggested cooking time.

Broil



Default time: 10 minutes, Time range: 1~20 minutes:

Default temperature: 450°F, Temperature range: 400/450°F.

Broiling function can be used for beef, chicken, pork, fish, and more. It also can be used to top-brown casseroles and gratins.

Dehy



Default time: 8 hours, Time range: 4~24 hours:

Default temperature: 130°F, Temperature range: 90~160°F.

Lemon juice can be used to pretreat fruits and vegetables to prevent browning.

Drying times can greatly vary due to the thickness of cuts and relative humidity.

Check foods often for dryness.

Do not overload. Foods should be arranged in a single layer without overlapping.

Chicken



/Chicken:


Default time: 45 minutes, Time range: 10~90 minutes:





Default temperature: 400°F, Temperature range: 200~450°F

Many foods can be fried using this mode, such as:

Bacon, chicken wings, frozen chicken nuggets, frozen fish sticks, shrimp, tortilla chips and vegetables.


Others


A. Power mode: The oven is powered on, the buzzer will sound for one second and all ICONS on the control panel will light up (enter the selection mode). If there is no operation after five minutes, the red icon will light up in standby mode .

B. Standby mode: Enter the standby mode  (the red icon is on) and the control panel will only light on the switch button  (the red icon is on). Click  (red icon) to light up all functions on the panel. Users can choose their desired menu, time, temperature, etc. After selection, click  (red icon) and the icon will turn green


 - the oven will start working.


C. Selection mode: All the lights of the function menu are on. The menu selected by the user will light up. (Time and temperature display will be on).

D. In working mode, hold down the icon  for 1.5 seconds to enter standby.

E. Select the mold type and hold down the icon  for 1.5 seconds to put the oven directly into standby.

F. In select mode, if there is no operation within 5 minutes, and the program enters standby mode.

G. If the user switches the menu program after opening the oven, click the icon  again after closing the door to enter the oven working mode.

H. Users can switch between Fahrenheit and celsius by pressing the button  for 3 seconds.

Electrical Specifications

Voltage	Frequency	Wattage	Model
120VAC	60Hz	1800W	AFO8103