 
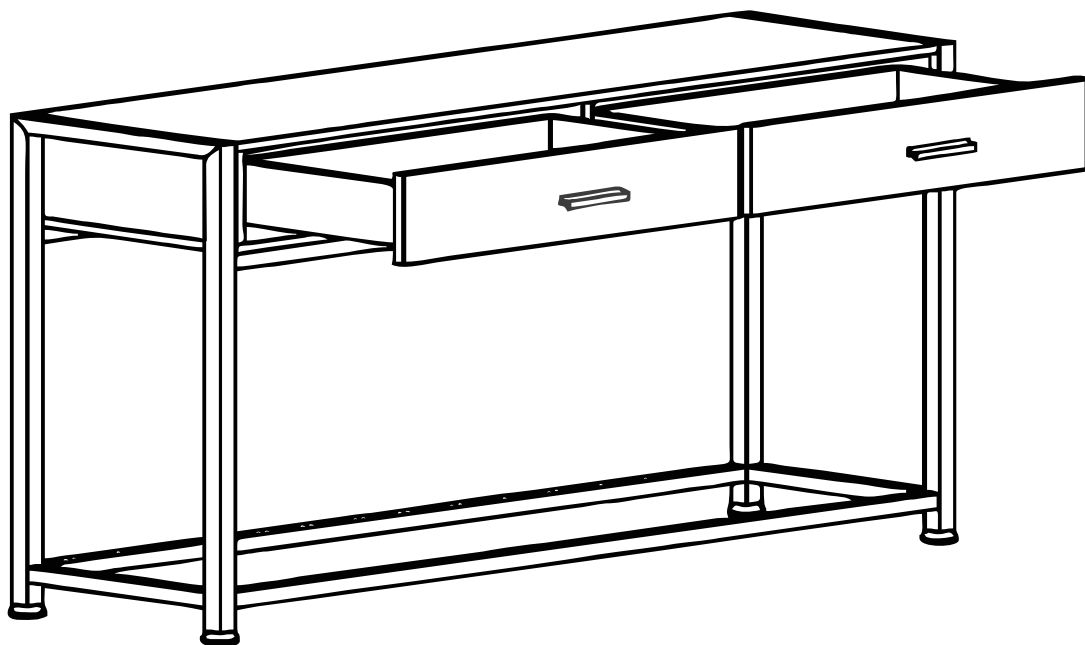 
 
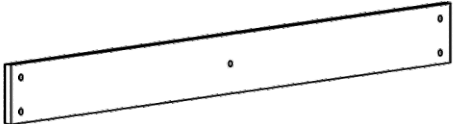 
 
 
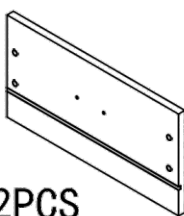 
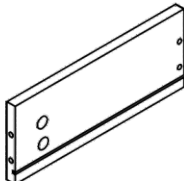 
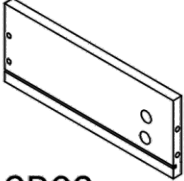 
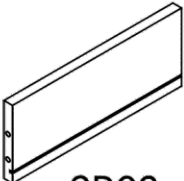 
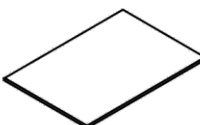 
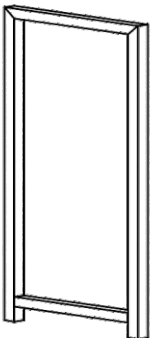 
 
 


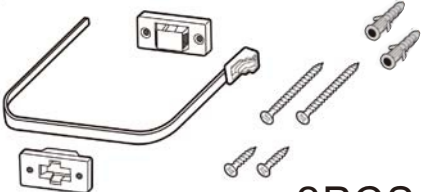




READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

ASSEMBLY INSTRUCTION

PART
LIST

1			2							
3			4	 2PCS						
			5							
			6	 2PCS						
7	 2PCS		8	 2PCS						
			9	 2PCS						
			10	 2PCS						
11	 2PCS		12	 2PCS						
			13	 2PCS						
A	B	C	D	G	H	S	Q	Y	P	
 14PCS	 M5X50 7PCS	 M5X40 8PCS	 M5X60 4PCS	 M6X35 4PCS	 M6X40 8PCS	 M4X18 4PCS	 2PCS	 4PCS	 2 ETS	
R	 2PCS									

   
Ax6
Px2

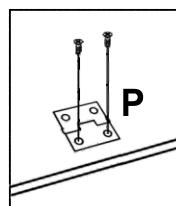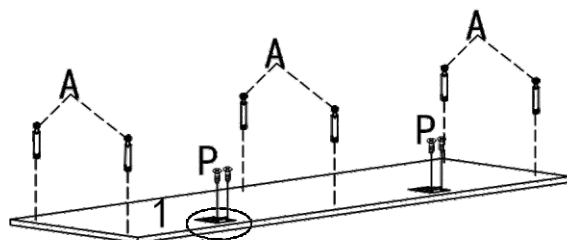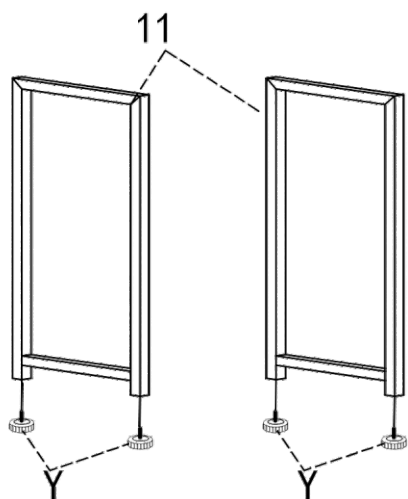

When installing P, the hinge shaft should face down, fit the table top, and then install with screws.


01

 Hx8

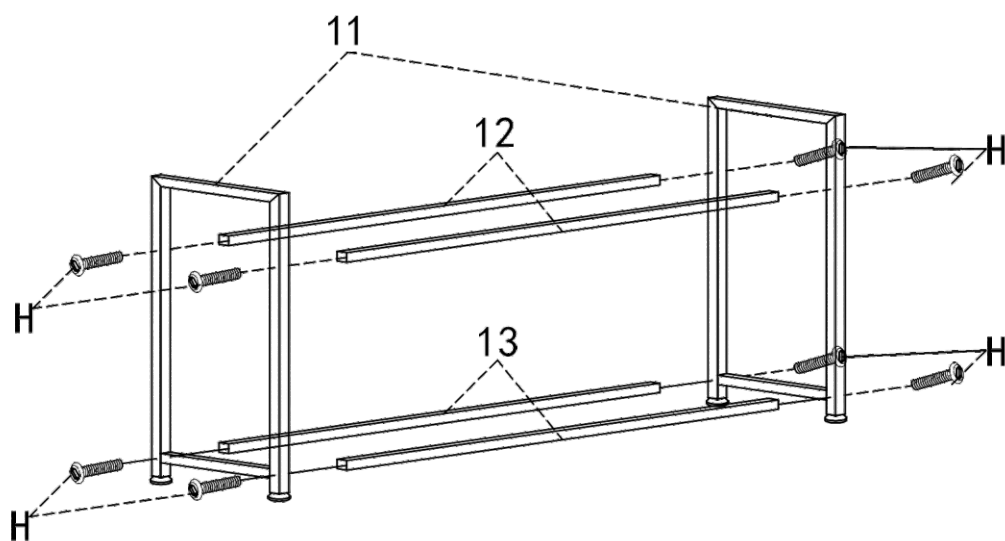


02

 Bx7

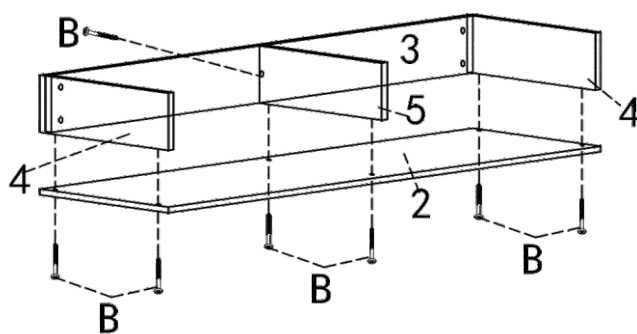


03

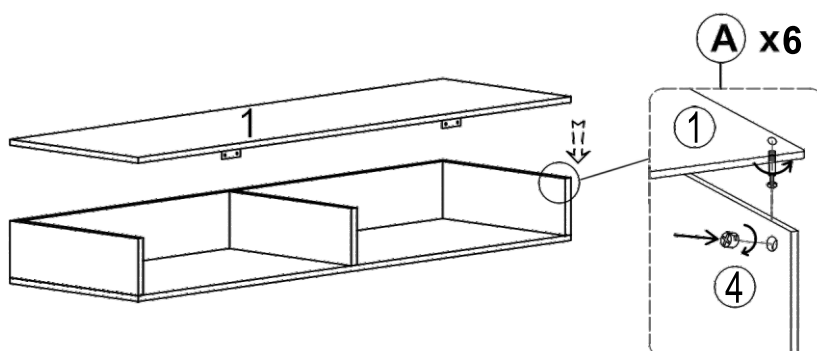 

04


Dx4
Gx4

 05

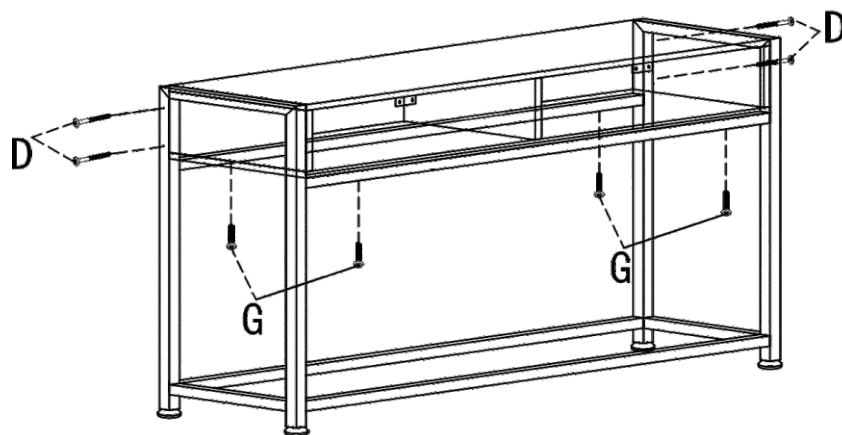

Ax4
Cx4
Sx2


 
06






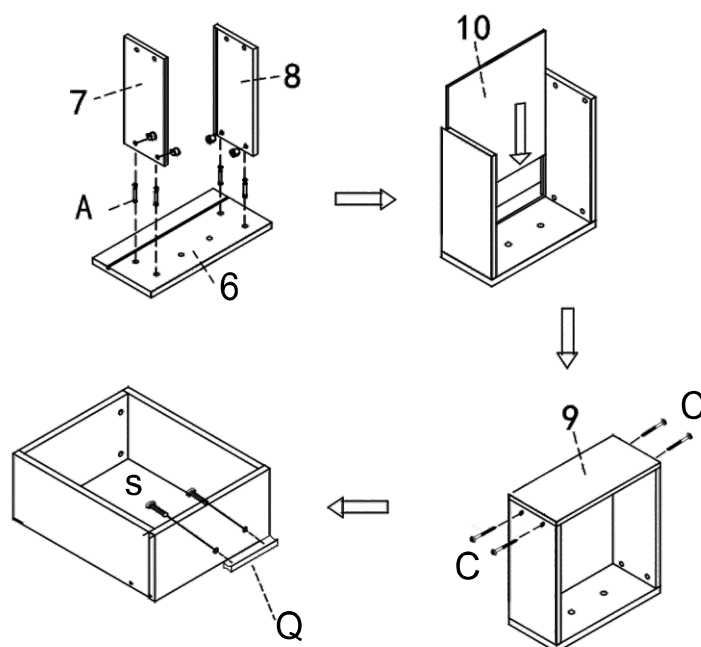


x2

Rx2

        07

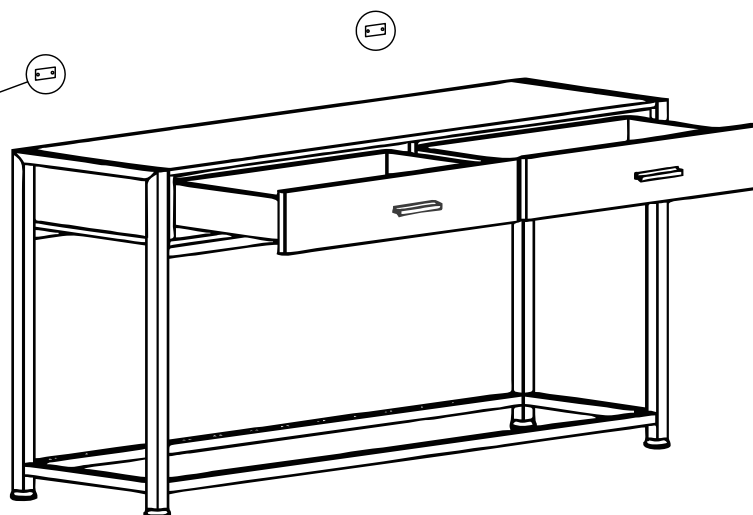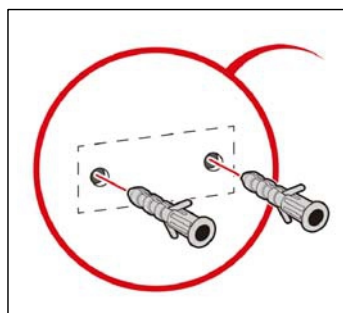

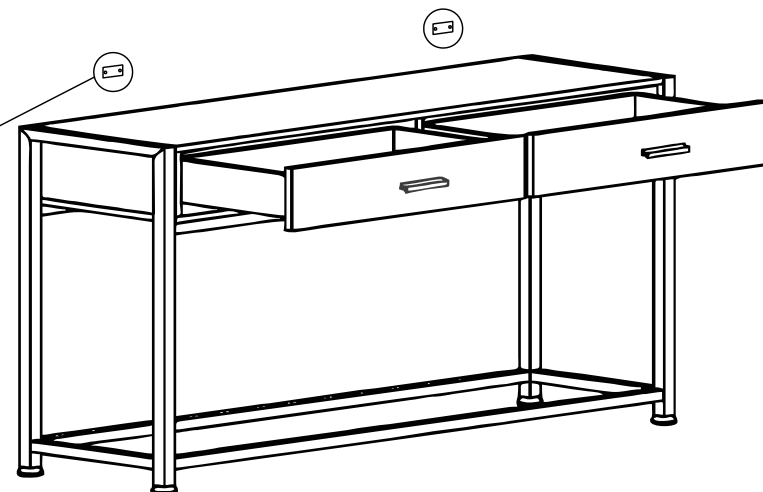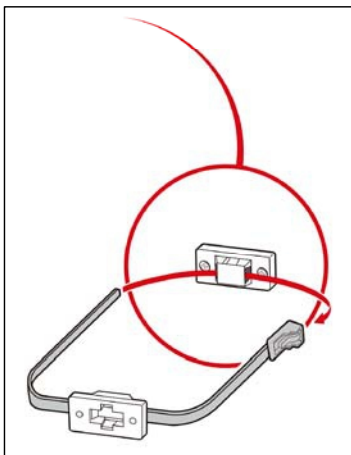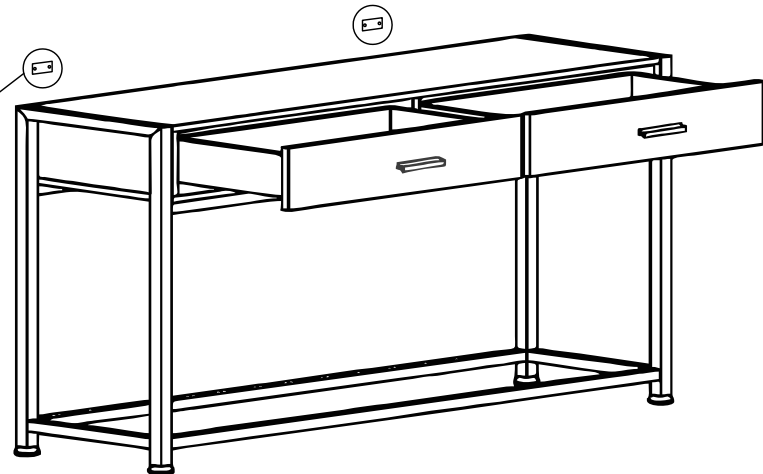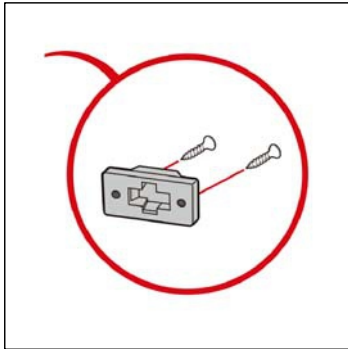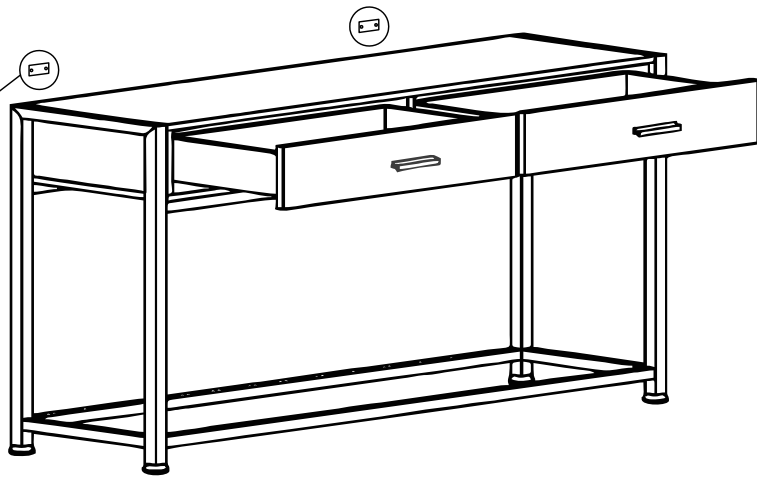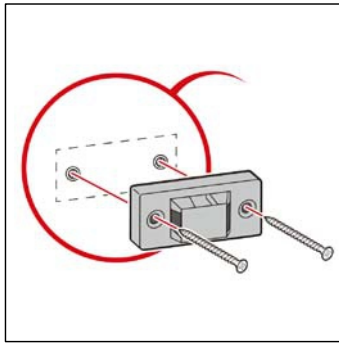

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it