

INfab061_US **370-105**

Children Electric Car

Installation and Operation Instructions

Stimulation car model

System driven by remote control

Forward, backward and steering operations by remote control

Forward and backward aperations by manual shift

Steering wheel' S music function


Techniques of volume regulation and MP3' amplification function

Battery power display

WARNING: The toy is to be assembled by an adult. In unassembled state contain potentially hazardous sharp points, sharp edges and small part, so please keep out of baby' S reach.

Marning: Not to be used in traffic.



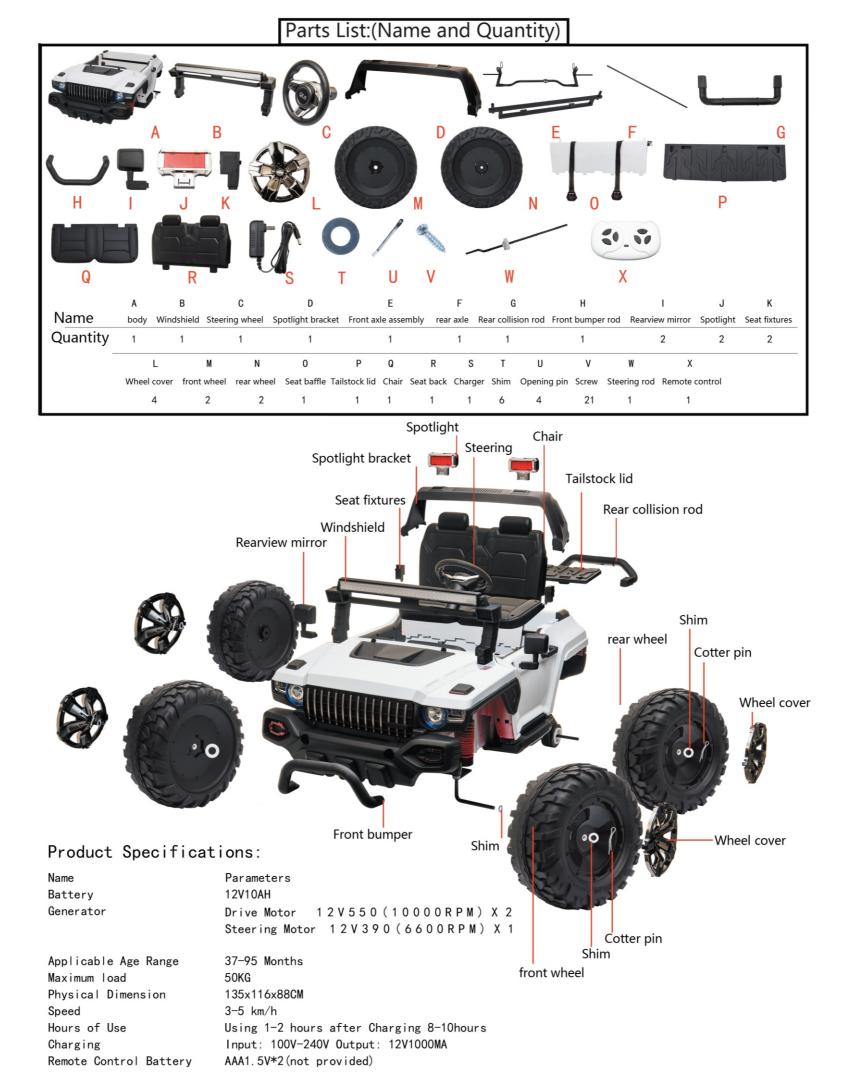

Function



Function indication

- ① Decorative switch ⑥ Charging hole
- 2 Power switch
- ⑦ USB TF MP3 interface
- ③ light switch
- 8 Music button
- 4 Forward back5 The voltage display



Remote Control Function and Instructions

- •Never switch forward and backward operations in the moving, or the gear box and motor will be damaged
- •Use the remote control with battery
- •Only the baby's legal guardian can use the remote control.
- •The product is operated mainly by remote control

Code Method:

Press UP&DOWN Buttons to see that the indicator light is constant on, and turn on the power.



Battery Operating Specifications:

Never mix new and old batteries, or different kinds of batteries.

Never mistake positive and negative electrode of battery, or short circuit will happen.

Non-rechargeable batteries are not to be recharged

Install batteries in a right polarity.

Only adults can recharge or change batteries.

Never make power port's short circuit happen.

Recharge the battery only when it is taken out of the toy car.

Take exhausted battery out of the toy car and keep it out of

Children's reach.

Remove battery screws with a screwdriver, open battery cap as the arrow signals, and in the 2.4G remote control model install two AAA 1.5V batteries in a right polarity.

Installation Order Diagram

Installation of front axle assembly

Turn over the body, first rotate the fixed iron sheet to the hole position of the body, and fix it with screw; Assemble the front bracket in the order indicated in the diagram; Point the steering lever at the steering motor hole and plug it in, then punch it out through the hole in the instrument panel at the other end, align the hole position of the steering axle on the front axle bracket to the steering axle, and fix the front axle bracket with screw

2. Installation of rear axle assembly

Unscrew the screw rod on the rear shock absorber fixing part, lift the rear support component, align the rear axle compression part with the hole position on the rear support component, lock the screw with a screwdriver, install the rear axle into the rear support component, insert the drive gear box into both sides of the rear axle.

3. Installation of front and rear wheels

Distinguish front and rear wheels, successively insert gasket, front wheel and gasket into the front axle, fix with cotter pin and install wheel cover; Insert the rear wheel into the rear axle corresponding to the motor bayonet, insert the gasket into the rear axle, fix it with cotter pin, and install the wheel cover.

4. External components and power supply before installation

Firstly, insert the front bumper into the hole in the lower part of the head, distinguish left and right reflectors, and clip them into both sides of the body. After the light wire of the windshield frame passes through the body, insert the windshield frame into the body bayonet, open the engine cover, connect the light wire to the lamp board socket, connect the power wiring terminal, and start the car to check whether the wiring is correct

5. Installation of steering wheel

Connect the wiring of the steering wheel, insert the steering wheel into the direction control rod, and fix the screws through the holes with nuts.


6. Installation of seat assemblies

Insert the seat baffle, tailbox cover and seat cushion into the corresponding bayonet, break the seat back, insert the backrest bar, fix with screws

7. External components after installation

First, insert two seat fasteners into the car body, and then insert the spotlight bracket into the slot on the car body, and install the spotlight onto the top of the lamp bracket; Clip the rear bumper into the rear of the car



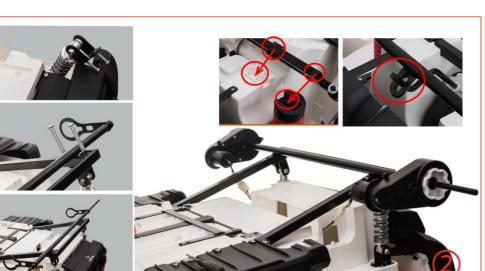











Warnings

Only adults can install parts and adjust the car, and keep moving parts out of children's reach.

Children under 36 months cannot use the toy car as it has many small parts. Children must take the seat belt when using the car, and keep the car out of the fire.

Children can use the product only in the company of adults, and the adult cannot leave during the process.

Never let Children stand or play onto the pedal or in the car.

Only adults can complete storage battery charging, and must charge the product before its first use.

Keep such package materials as plastic bags out of children, or they will suffocate or kill children.

Never use parts provided by non-manufacturers.

Never let children play with the charger.

Never use the product with over 50-kilogram load.

The product's applicable age range is 37-95 months.

The number of connected power by the product can never be over the recommended number.

Notice of use:

Never use the product in such dangerous zones as street, road, slope or drain.

Never change the circuit and additional electric devices.

Never use remote control in rainy days or in the water, never pour water or other liquid into the car, keep the product out of the fire, otherwise the car will be damaged.

Only two child can use the product, and its weight cannot exceed 50 kilograms.

Turn off the power when not in use and remove battery connector when not using it for a long time.

As the product has battery charger, check whether wire plug shell and other parts are damaged or not, and fix those damaged parts.

Charging notice:

Charge storage battery less than 10 hours, or the storage battery will be damaged forever.

In charging, put DC Plug into the power socket, put charger into power plug;never use the product during charging it.

The product can be used for one hour, and the charging time is 8-10 hours, battery will be damaged. exceeding no more than 18 hours. when not using or laying

It is common for charger and storage battery to have not become heated (temperature under 60 degrees)in charging.

Never use the connector with the water, or short circuit will happen. Use the product's own charger, or cause charger and storage battery to be damaged or short circuit.

Charge the product when not using it for a long time

Charging steps are as follows:

Step 1: The charging hole is under the steering wheel.

Step2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.





Relevant materials: PP plastics, k-carrageenan, generator, storage battery and iron castings.

Trouble Clearing

Туре		Analysis		Solutions
The car cannot get started.	Protect Failure Falling Batter Dama	attery voltage; ction of electric devices; e to press the switch butto g of power connector; y breakdown; ge of electric devices; ator breakdown;	Use to on corre Insta Chan	ge battery fully; che car a few minutes later; ectly;Use the car according to instructio all the connector again; age battery; ge electric devices; ge generator.
The battery car	nnot	Falling of battery connec		Install the connector again; Plug the charger again;

The car has a Not full charging of battery; short range. Much-used battery;

short range. Much-used battery; Change the battery
There appear slight noise and

heat of the car in charging.

The car has a

slow speed.

be charged

Much-used battery; No electricity for battery Overload;

Charger breakdown;

Change the battery Charge fully the battery again

Normal reactions

Charge fully the battery again;

Overload; Reduce the load below 50 kilograms
Uneven driving surface; Drive on uneven surface

Change the charger

Maintenance and Service

Before use children's parents should check whether charge's wiring, plug, shell and other parts are damaged, and fix those damaged parts. After using the product for a time, parents should lubricate iron castings with lube, or those castings will get rusted; they should keep the product out of fire and lay it flat in dark places; they should put the product inside the house or cover it with one water-proof cloth in wet whether.

Parents should keep the product out of such hot objects as stove and heater, or its plastic parts may be thawed; they should keep the product out of combustible objects in charging, or the fire may happen.

Parents should clean car surface with one dry cloth, or clean plastic parts with non-waxy furniture polish; they shouldn't clean plastic parts with chemical solutions or clean the car with water; children cannot drive the car in wet or rainy weather, or the car's generator, circuit system and battery will be damaged.

when not using or laying the product, parents should cut off car power, keeping all the switches into "STOP" or "OFF" model.

Parents mustn' t use the fuse which doesn' t conform with the agreed specifications.

Parents should't change product structure and circuit system, and should have the product checked and fixed by professionals or under the guidance of professionals.