
 







 
 
 
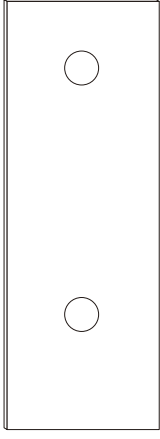 

 



Safety:the product should be assembled by adult,not suitable for children under three years.
Sicherheit:dieses produkt sollte von erwachsenen, nicht geeignet für kinder unter drei jahren zusammengebaut werden.
Sécurité :ce produit doit etre monté par un adulte, ne convient pas aux enfants de moins de 3 ans.
Seguridad:el producto debe ser montado por un adulto responsable. No apto para niños menores de 3 años de edad.
Sicurezza:il prodotto deve essere assemblato da un adulto, non è adatto a bambini di età inferiore ai 3 anni.


 
 
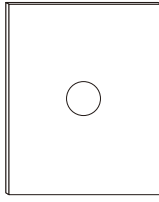 
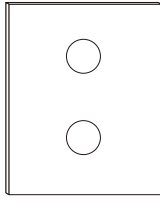 







    

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

 

 






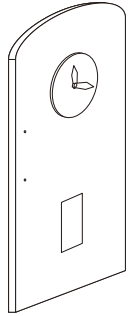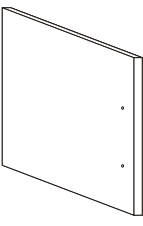


 



ASSEMBLY INSTRUCTION








				
1: 1PC	2: 1PC	4: 1PC	5: 1PC	
				
	3: 1PC	6: 1PC		7: 1PC







					
	9: 1PC				
					
	10: 4PCS	11: 1PC	12: 1PC		
					
	13: 1PC	14: 1PC			

				
17: 1PC	18: 1PC	19: 1PC	20: 1PC	21: 1PC

					
22: 1PC	23: 1PC	24: 1PC	25: 1PC	26: 1PC	27: 2PCS
					
					28: 1PC

							
A: 28PCS	B: 4PCS	C: 8PCS	D: 6PCS	E: 16PCS	F: 4PCS	G: 1PC	H: 44PCS
							
I: 2PCS	J: 4PCS	K: 18PCS	L: 4PCS	M: 6PC	N: 5PCS	O: 1PC	P: 3PCS

 						
Q: 2PCS	R: 1PC	S: 1PC	T: 1PC	U: 1PC	V: 3PCS	W: 3PCS

01

Dx6
Kx1
Qx2
Sx1

1

2

S

Q

Q

A

D/D

D/D

02

Ax2 Wx3
Hx2
Kx2
Lx1
Vx3

3

5

K

V

V

V

A

W

W

W

03

Ex2
Gx1
Hx6
Lx1
Nx1
Ox1

4

E

H

G

H

H

H

H

N

O

04

Ax2
Kx2

6

A

A

K

K

05

7

A

06

Bx4

9

B

B

B

B

10

10

10

10

07

Ax2

8

A

A

08

Ax2

12

A

A

09

Ax4

15

A


A

A

A


Kx4

 10

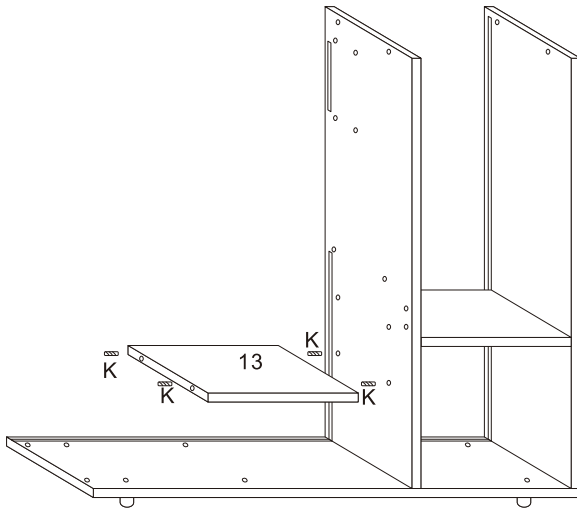


Ax2

 11

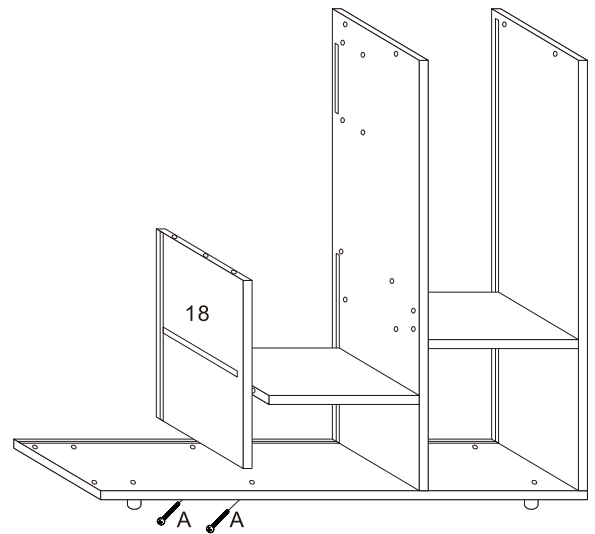


Ex6
Kx2
Px3

 12

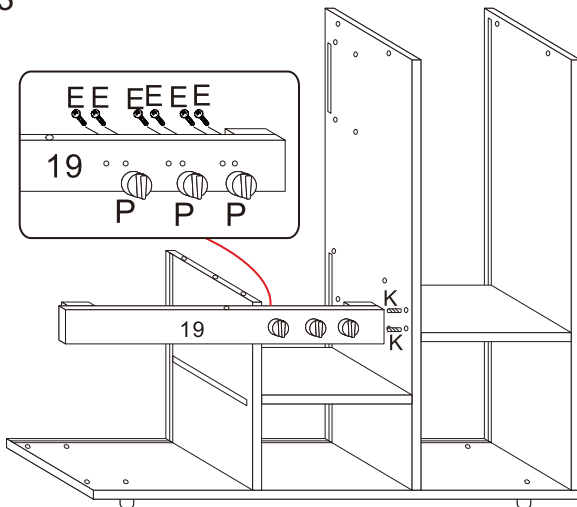


Ax2
Kx2

 13

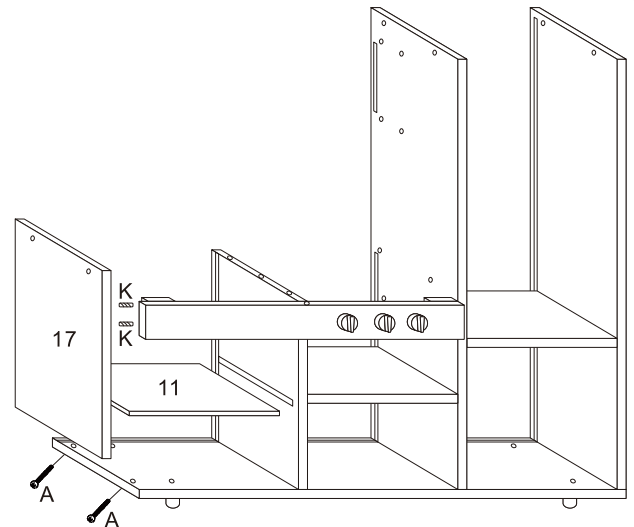


14

 
Ax4
Kx4
Ix2
Rx1

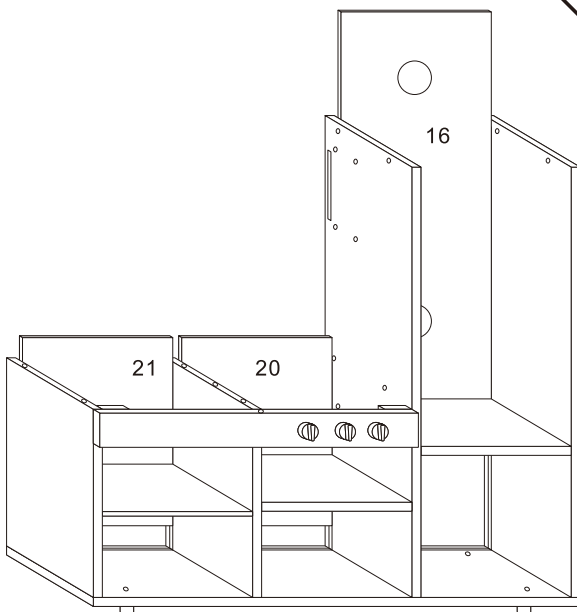

15

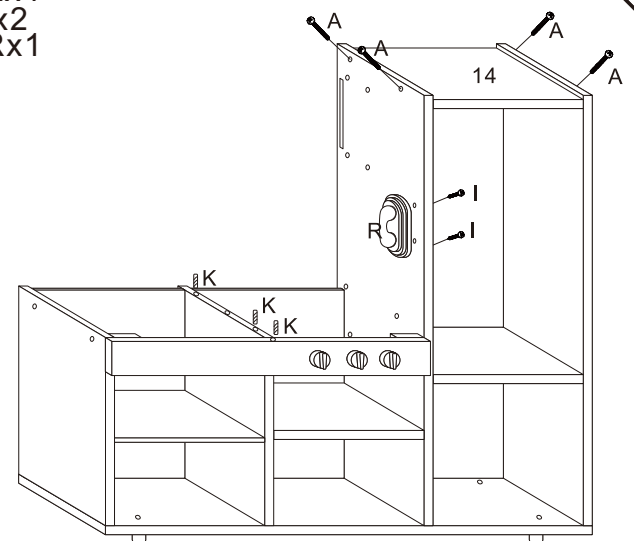 


Ax7
Kx2

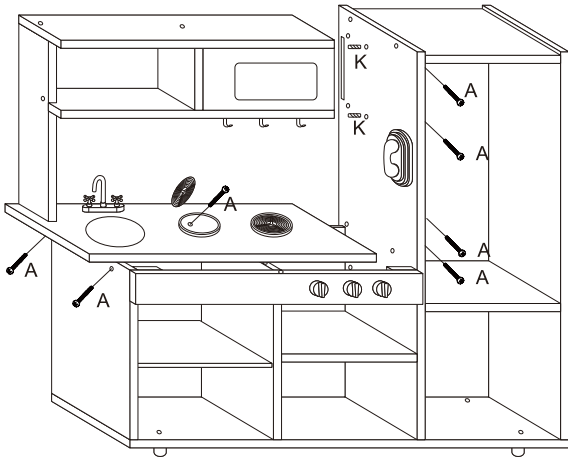 


16

 Ex6
Fx4
Hx40
Jx4
Lx6
Mx6
Nx3
Tx1

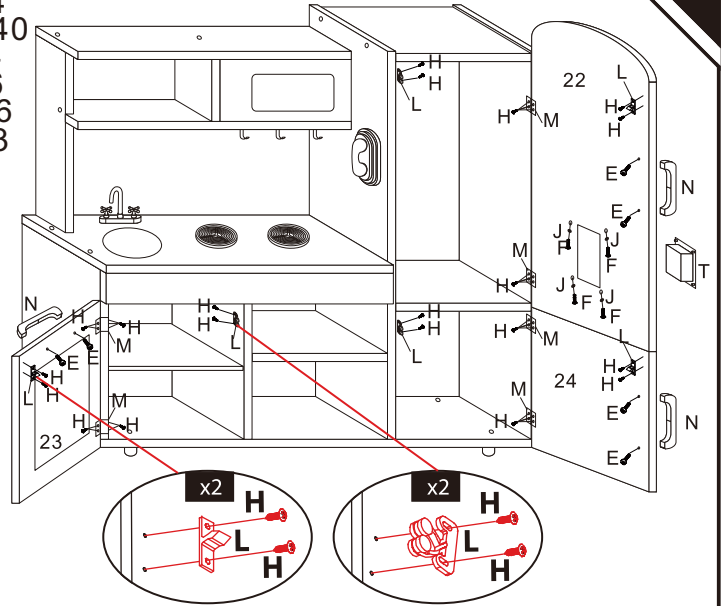

17

 
Cx8
Ex2

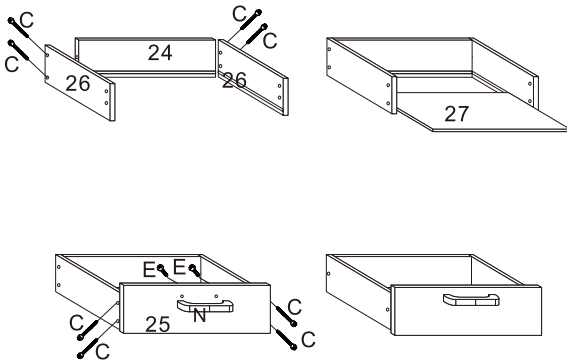


18

Ux8

 19

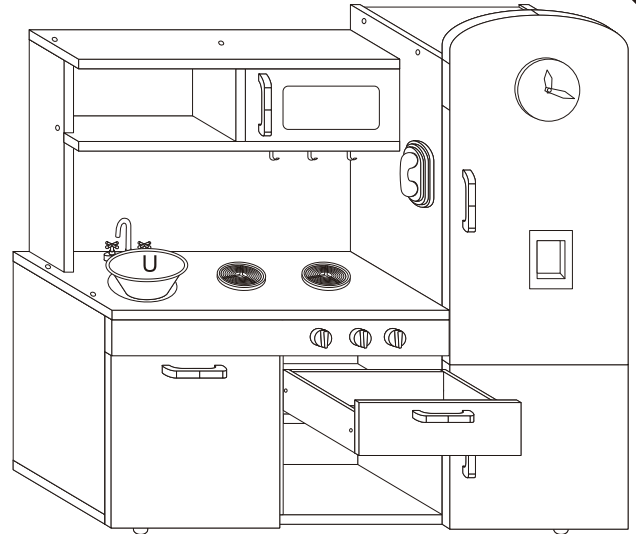

20

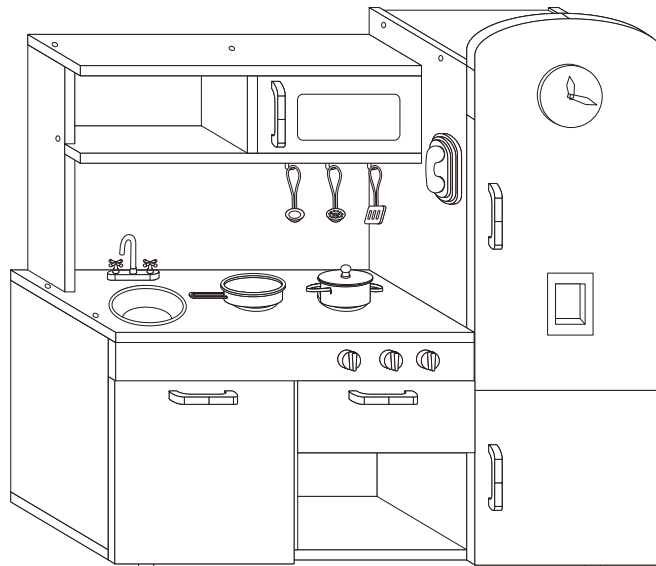 

Done

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it