

# INSTRUCTION MANUAL

---

Kids Teepee Tent

## ! NOTICE


Please retain these instructions for future reference.

- Please read the assembly instructions carefully before installing.
- Product is intended for indoor use.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- This teepee is not to be used as shelter in extreme weather conditions.
- This teepee is not to be used as sole protection from the sun.
- No more than three (3) children should occupy this teepee at once.
- Place the teepee on flat ground; do not use it on slanted ground.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## PARTS

**A**


**TOP POLE**

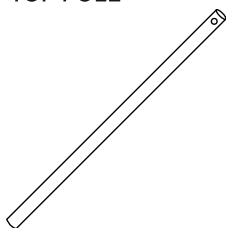

**4 PCS**

**B**

**BOTTOM POLE**

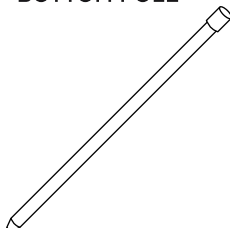

**4 PCS**




**1 PERSON  
ASSEMBLY**



**APPROXIMATELY  
25 MIN.  
ASSEMBLY**

**C**


**TEEPEE**

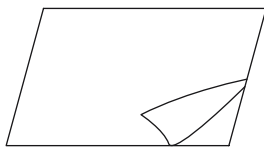

**1 PC**

**D**


**CORD**

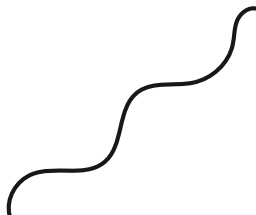

**1 PC**

**E**

**CANVAS CARRY BAG**

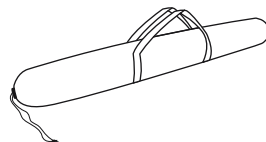

**1 PC**


## PRODUCT ASSEMBLY

1




Connect each part A top pole with a part B bottom pole.

2

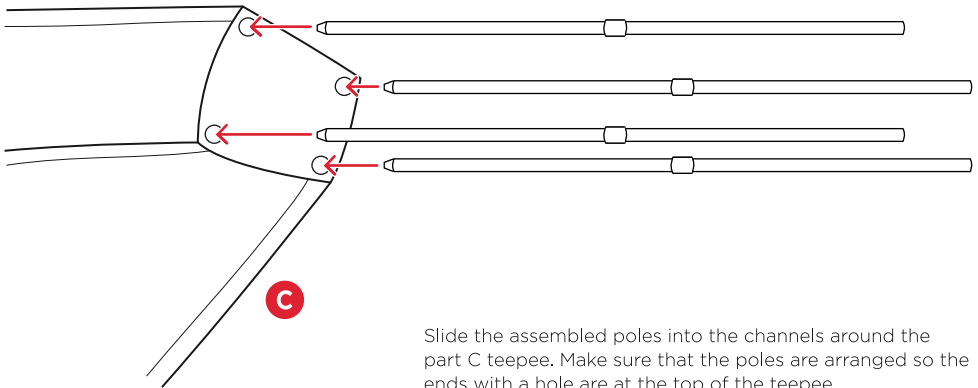


Slide the assembled poles into the channels around the part C teepee. Make sure that the poles are arranged so the ends with a hole are at the top of the teepee.

3

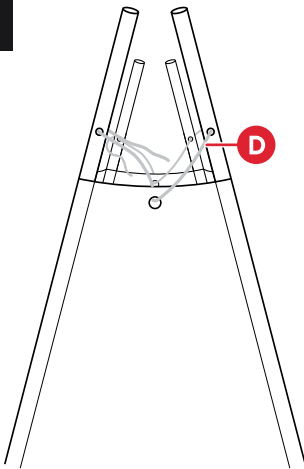

Loop the part D cord by alternating the cord through the holes and eyelets. Work your way around the circumference of the teepee and tie the cord together into a knot at the end.

4

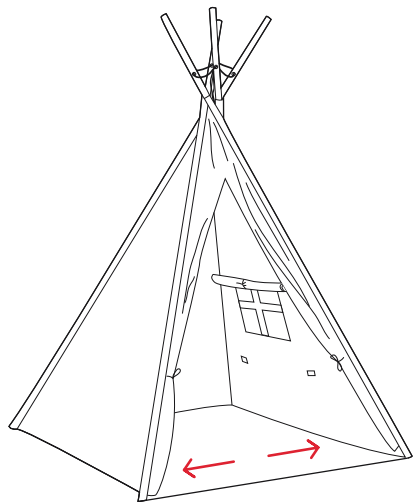

Stand the teepee up and spread the poles out at the base. If necessary, loosen the cord at the top to make it easier to spread out the base.