



INSTRUCTIONS

1、FUNCTION INTRODUCTION

- | | | |
|--------------------------|-------------------------------|---------------------|
| 1.clear voice | 2.MP3 Function | 3.volume control |
| 4.accompaniment function | 5. variety of tone and rhythm | 6.Height adjustment |

2、FUNCTION DESCRIPTION

Volume Up /
Volume Down

OFF/ON

MP3
MP3 Interface

Microphone
Interface

accompaniment
Key

Mode switch

musical
instruments

cycle rhythm

3、INSTALLATION

(1)Battery

Open the battery cover and install 4 AA batteries (not included).
Close the lid. Batteries are to be inserted with the correct polarity.

NOTE:Never mix old and new batteries.
Batteries are to be inserted with the correct polarity.
Replace batteries in time to avoid leakage.

(2)Microphone

Please insert microphone plug in MIC joint.

ASSEMBLAGE DRAWING

